

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Driver side door closer system does not operate	1. Driver side J/B •MPX-B1 fuse	05-2720
	2. Passenger side J/B •MPX-IG, D DOOR fuse	05-2722
	3. Wire harness	—
	4. Door Lock assembly •Cam position switch •Pole switch •Half latch switch •Full latch switch •Lock position switch •Closer motor •Door lock motor	05-2762
	5. Driver door ECU	05-2720
Passenger side door closer system does not operate	1. Driver side J/B •MPX-B1 fuse	05-2720
	2. Passenger side J/B •MPX-IG, P DOOR fuse	05-2722
	3. Wire harness	—
	4. Door Lock assembly •Cam position switch •Pole switch •Half latch switch •Full latch switch •Lock position switch •Closer motor •Door lock motor	05-2762
	5. Passenger door ECU	05-2722
Rear left side door closer system does not operate	1. Driver side J/B •MPX-B1 fuse	05-2720
	2. Passenger side J/B •MPX-IG, RR DOOR LH fuse	05-2722
	3. Wire harness	—
	4. Door Lock assembly •Cam position switch •Pole switch •Half latch switch •Full latch switch •Lock position switch •Closer motor •Door lock motor	05-2762
	5. Rear left door ECU	05-2725
Rear right side door closer system does not operate	1. Driver side J/B •MPX-B1 fuse	05-2720
	2. Passenger side J/B •MPX-IG, RR DOOR LH fuse	05-2722
	3. Wire harness	—
	4. Door Lock assembly •Cam position switch •Pole switch •Half latch switch •Full latch switch •Lock position switch •Closer motor •Door lock motor	05-2762
	5. Rear right door ECU	05-2729