

DIAGNOSTIC TROUBLE CODE CHART

HINT:

If a trouble code is displayed during the DTC check, check the circuit listed for that code. For details of each code, refer to the "See page" under the respective "DTC No." in the DTC chart.

DTC No. (See Page)	Circuit Inspection	Trouble Area
P0500 (05-3653)	Vehicle speed sensor circuit malfunction	• Combination meter • Vehicle speed sensor • Vehicle speed sensor signal circuit • ECM
P0503 (05-3653)	Vehicle speed sensor circuit malfunction	• Combination meter • Vehicle speed sensor • Vehicle speed sensor signal circuit • ECM
P0571 (05-3654)	Stop light switch circuit malfunction	• Stop lamp switch assy • Stop lamp switch signal assy circuit • Driver side J/B ECU • ECM
P0607 (05-3660)	Input signal circuit malfunction	• ECM (This DTC indicates a malfunction in the ECM. When this DTC is output, it is necessary to replace the ECM.)
P1615 (05-3661)	Communication error from distance control ECU to ECM	• Communication circuit • Cruise control ECU (Distance control ECU) • ECM
P1616 (05-3662)	Communication error from ECM to distance control ECU	• Communication circuit • Cruise control ECU (Distance control ECU) • ECM
P1617 (05-3663)	Distance control ECU malfunction	• Cruise control ECU (Distance control ECU)
P1630 (05-3664)	Communication error from VSC to ECM	• Communication circuit • ABS & traction actuator assy (Skid control ECU) • ECM
P1631 (05-3665)	Communication error from ECM to VSC	• Communication circuit • ABS & traction actuator assy (Skid control ECU) • ECM
P1575 (05-3666)	Warning buzzer malfunction	• Skid control buzzer assy • Skid control buzzer circuit • ABS & traction actuator assy (Skid control ECU)
P1578 (*1) (05-3667)	Brake system malfunction	• VSC system
U0235 (05-3668)	Communication error from radar sensor to distance control ECU	• Communication circuit • Laser sensor • Cruise control ECU (Distance control ECU)
U1102 (05-3671)	Communication error from distance control ECU to radar sensor	• Communication circuit • Laser sensor • Cruise control ECU (Distance control ECU)
P1570 (05-3674)	Radar sensor malfunction	• Laser sensor
P1572 (05-3675)	Improper aiming of radar sensor beam axis	• Laser sensor
U0100 (05-3662)	Communication stop from ECM to distance control ECU, VSC	• Communication circuit • Cruise control ECU (Distance control ECU) • ECM

U0100 (05-3665)	Communication stop from ECM to distance control ECU, VSC	• Communication circuit • ABS & traction actuator assy (Skid control ECU) • ECM
U0126 (05-3676)	Communication error of steering sensor	• Communication circuit • Steering sensor • Cruise control ECU (Distance control ECU) • ECM
U0123 (05-3677)	Communication error of yaw rate sensor	• Communication circuit • Yaw rate sensor • Cruise control ECU (Distance control ECU) • ECM
U1101 (05-3661)	Communication stop from distance control ECU to ECM	• Communication circuit • Cruise control ECU (Distance control ECU) • ECM
U0122 (05-3664)	Communication stop from VSC to ECM	• Communication circuit • ABS & traction actuator assy (Skid control ECU) • ECM

HINT:

*: When DTC P1578 is output, check for DTCs on the skid control ECU in the diagnosis mode. Only when any code is output, inspect the trouble area based on the DTC.