


SYSTEM DIAGRAM

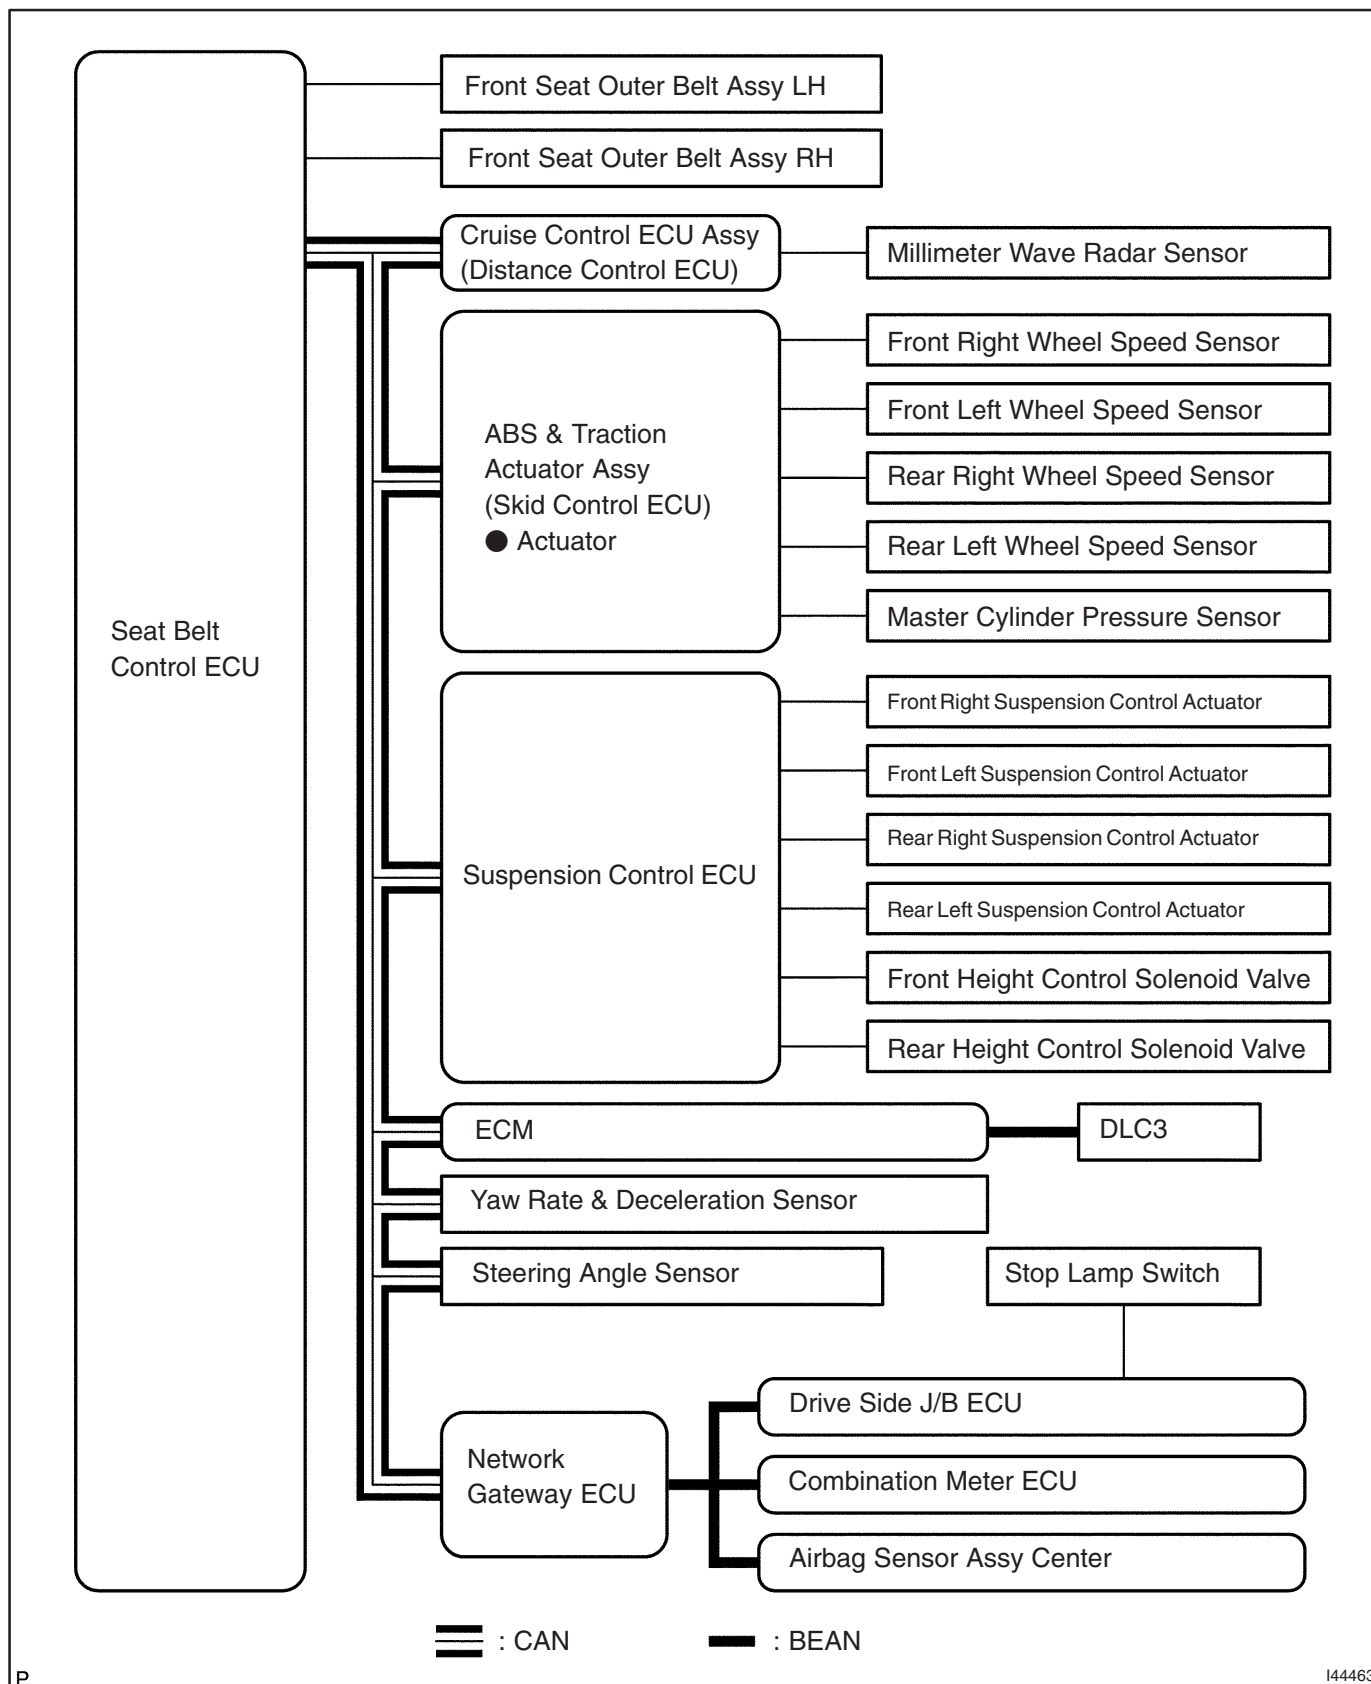

Transmitting ECU (Transmitter)	Receiving ECU	Signals	Communication Method
Cruise Control ECU Assy (Distance Control ECU)	Seat Belt Control ECU	• Target distance signal • Sensor horizontal deviance signal • Own lane establishment signal • Horizontal width signal • Relative acceleration signal • Condition flag signal • Relative vehicle speed signal • Vehicle-to-vehicle distance signal	CAN
ABS & Traction Actuator Assy (Skid Control ECU)	Seat Belt Control ECU	• Vehicle speed signal • STP switch signal • BA control signal • STP switch open signal • M/C pressure signal • M/C pressure malfunction signal • Sudden braking signal • Communication (PSB-VSC) invalidity signal • BA fail signal	CAN
Airbag Sensor Assy Center	Seat Belt Control ECU	• Buckle switch malfunction signal • P seat buckle switch signal • D seat buckle switch signal • Airbag warning lamp ON demand signal	CAN – BEAN
Seat Belt Control ECU	Combination Meter ECU	• Radar condition malfunction signal • Radar grime signal • Pre-crash safety system malfunction signal	CAN – BEAN
Cruise Control ECU Assy (Distance Control ECU)	ABS & Traction Actuator Assy (Skid Control ECU)	• Condition flag signal • Relative vehicle speed signal • Vehicle-to-vehicle distance signal	CAN
Cruise Control ECU Assy (Distance Control ECU)	Suspension Control ECU	Condition flag signal	CAN