


POWER OUTLET LOCATION

BE089-04

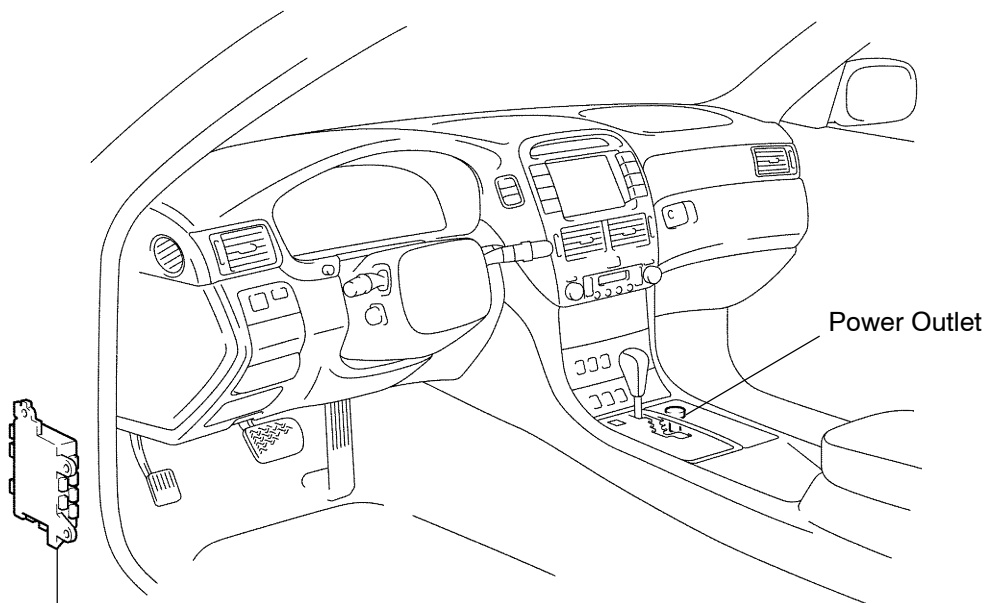

Driver Side J/B

- PWR OUTLET Fuse