

INSTALLATION

Installation is in the reverse order of removal ([See page BR-12](#)).

HINT:

After the installation, check and adjust parking brake pedal travel ([See page BR-9](#)).