

INSTALLATION

Installation is to be done in the reverse order of removal ([See page BR-63](#)).

HINT:

After installation, check speed sensor signal ([See page DI-343](#)).