



DTC	C1251 / 51	ABS Pump Motor Lock
-----	------------	---------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251 / 51	Detection of either condition 1. or 2.: 1. The ABS pump motor is not operating normally. 2. Open circuit of the ABS pump motor continues for 2 sec. or more.	ABS pump motor

WIRING DIAGRAM

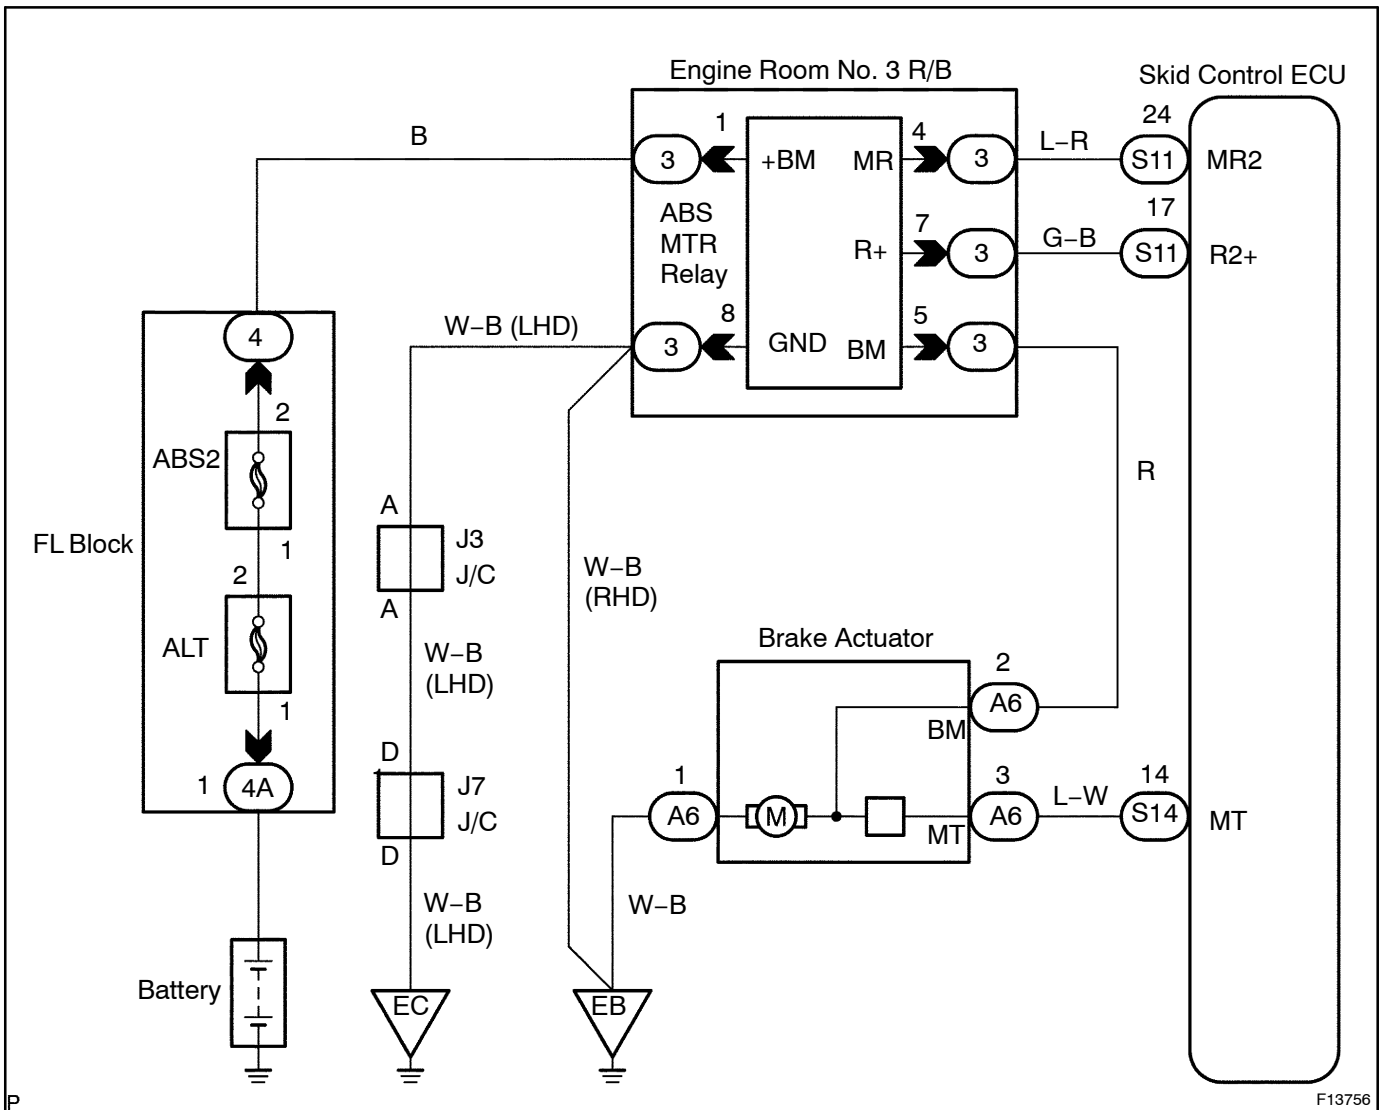

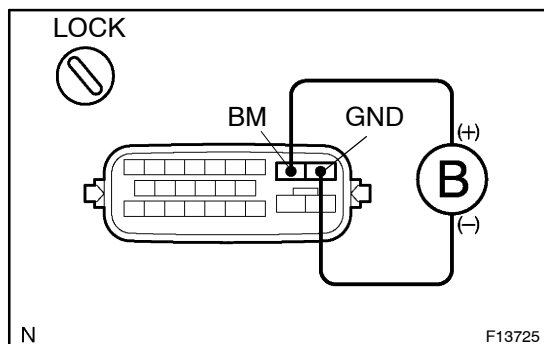INSPECTION PROCEDURE**1 Check operation of pump motor.****PREPARATION:**

Disconnect the brake actuator connector.

CHECK:

Connect positive $\oplus$ lead to terminal BM and negative $\ominus$ lead to terminal GND of the brake actuator. Check that the pump motor is operated.

OK:

The running sound of the pump motor should be heard.

OK

Check for open circuit in harness and connector between ABS MTR relay, brake actuator and skid control ECU ([See page IN-35](#)).

NG**Replace brake actuator.**