

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Rear left side power seat system does not operate.	1. ECU power source circuit 2. Rear seat switch circuit 3. Rear left seat control ECU	DI-743 DI-790 IN-35
"Slide operation" does not operate.	1. Rear seat switch circuit 2. Motor circuit 3. Position sensor circuit 4. Rear left seat control ECU	DI-790 DI-745 DI-752 IN-35
"Headrest operation" does not operate.	1. Rear seat switch circuit 2. Motor circuit 3. Headrest limit switch circuit 4. Position sensor circuit 5. Rear left seat control ECU	DI-790 DI-747 DI-750 DI-747 IN-35
Seat position memory function does not operate.	1. Rear seat switch circuit 2. Rear seat memory switch 3. Position sensor circuit 4. Rear left seat control ECU 5. Rear Door LH ECU	DI-790 DI-1380 DI-752 IN-35 IN-35
Seat position return function does not operate.	1. Rear seat switch circuit 2. Rear seat turn switch circuit 3. Rear left seat control ECU 4. Passenger side J/B ECU	DI-790 DI-1087 IN-35 IN-35
Door open return function does not operate.	1. Rear seat switch circuit 2. Door courtesy switch circuit 3. Rear left seat control ECU	DI-790 DI-1362 IN-35
Vibration seat function does not operate.	1. Rear seat switch circuit 2. Vibration seat ECU communication circuit 3. Vibration circuit 4. Rear left seat control ECU	DI-790 DI-754 DI-757 IN-35