


CIRCUIT INSPECTION

Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Rear LH Seat ECU.

WIRING DIAGRAM

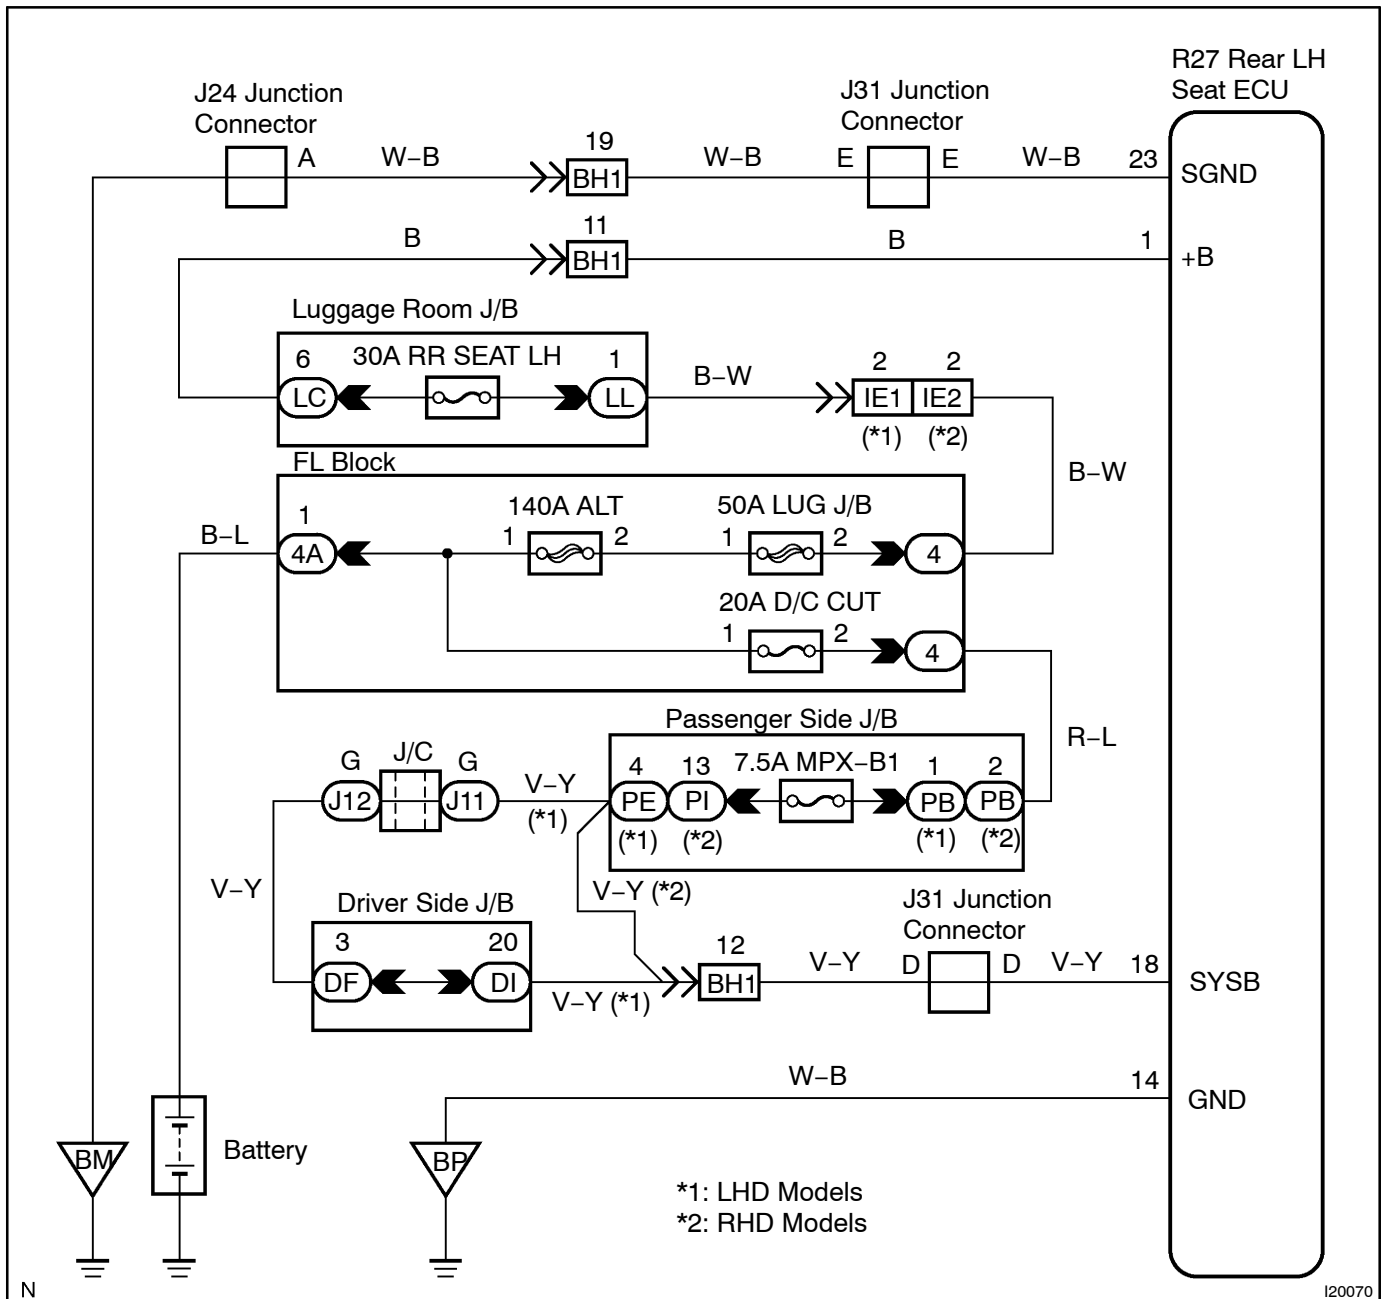

INSPECTION PROCEDURE**1 Check RR SEAT LH and MPX-B1 fuse.****CHECK:**

Check continuity of RR SEAT LH and MPX-B1 fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK****2 Check voltage between terminals +B, SYSB and GND of rear LH seat ECU connector.****PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the rear LH seat ECU connector.

CHECK:

Measure voltage between terminals +B, SYSB and GND.

OK:

Voltage: 10 – 14 V

OK**Proceed to next circuit inspection shown on problem symptoms table ([See page DI-742](#)).****NG****3 Check harness and connector between rear LH seat ECU and body ground ([See page IN-35](#)).****OK****Repair or replace harness or connector.****NG****Proceed to next circuit inspection shown on problem symptom table ([See page DI-742](#)).**