



Vibration Seat ECU Communication Circuit

CIRCUIT DESCRIPTION

The Rear LH Seat ECU sends a command toward the Vibration Seat ECU to operate the vibration seat function.

WIRING DIAGRAM

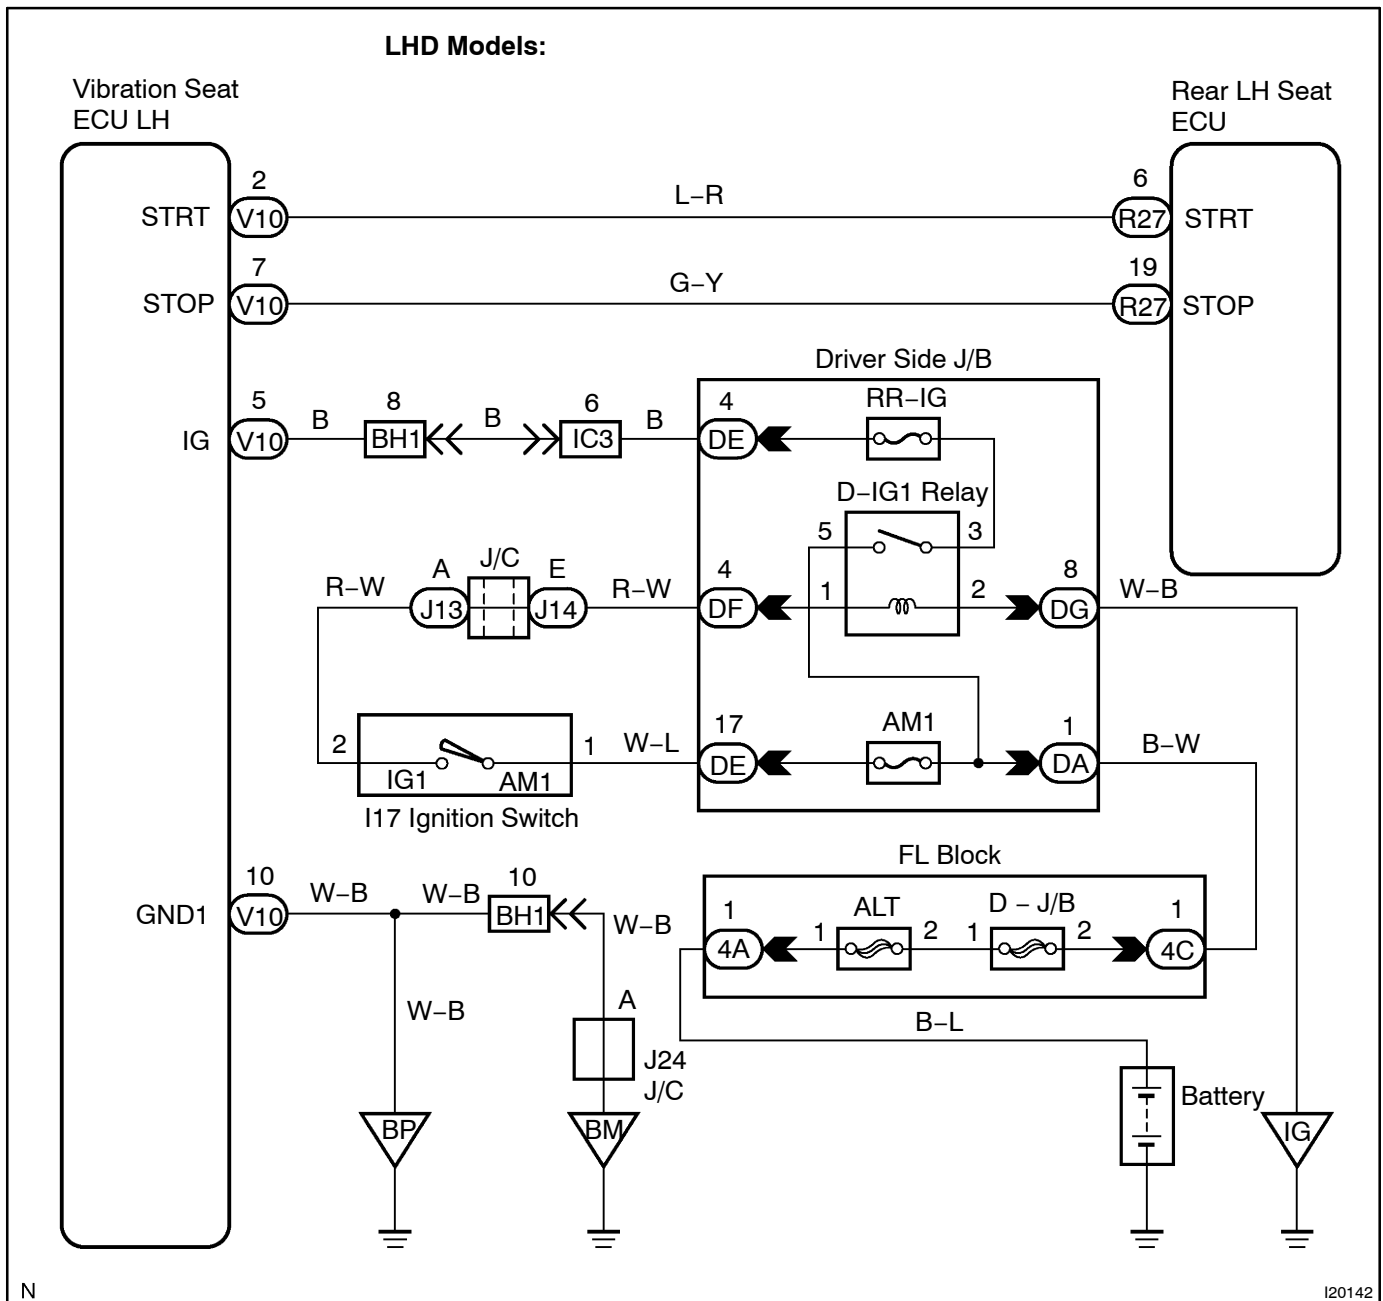

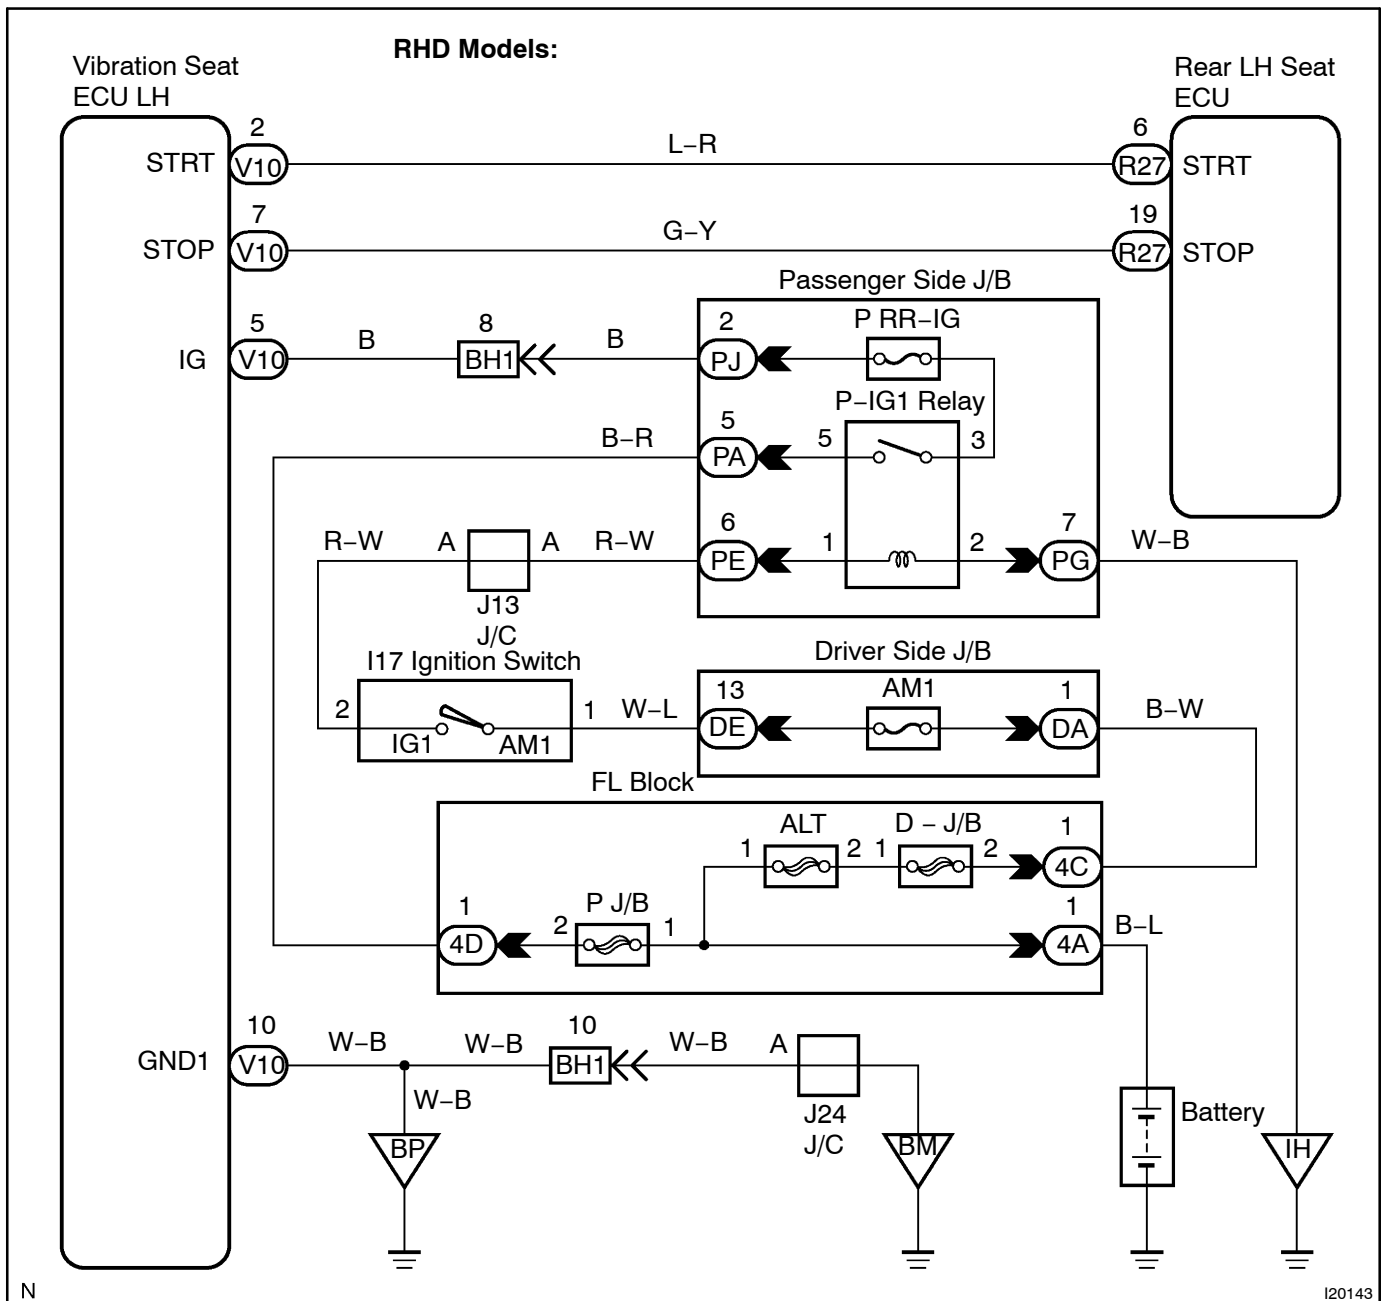

N

I20143

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check wireharness and connector between rear LH seat ECU and vibration seat ECU (See page IN-35). |
|---|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page IN-35](#)).