

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Rear right side power seat system does not operate.	1. ECU power source circuit 2. Rear seat switch circuit 3. Rear right seat control ECU	DI-766 DI-790 IN-35
"Slide operation" does not operate.	1. Rear seat switch circuit 2. Motor circuit 3. Position sensor circuit 4. Rear right seat control ECU	DI-790 DI-768 DI-775 IN-35
"Headrest operation" does not operate.	1. Rear seat switch circuit 2. Motor circuit 3. Headrest limit switch circuit 4. Position sensor circuit 5. Rear right seat control ECU	DI-790 DI-770 DI-773 DI-770 IN-35
Seat position memory function does not operate.	1. Rear seat switch circuit 2. Rear seat memory switch 3. Position sensor circuit 4. Rear left seat control ECU 5. Rear Door RH ECU	DI-790 DI-1437 DI-775 IN-35 IN-35
Seat position return function does not operate.	1. Rear seat switch circuit 2. Rear seat turn switch circuit 3. Rear right seat control ECU 4. Passenger side J/B ECU	DI-790 DI-1087 IN-35 IN-35
Door open return function does not operate.	1. Rear seat switch circuit 2. Door courtesy switch circuit 3. Rear right seat control ECU	DI-790 DI-1419 IN-35
Vibration seat function does not operate.	1. Rear seat switch circuit 2. Vibration seat ECU communication circuit 3. Vibration circuit 4. Rear right seat control ECU	DI-790 DI-777 DI-780 IN-35