



CIRCUIT DESCRIPTION

WIRING DIAGRAM

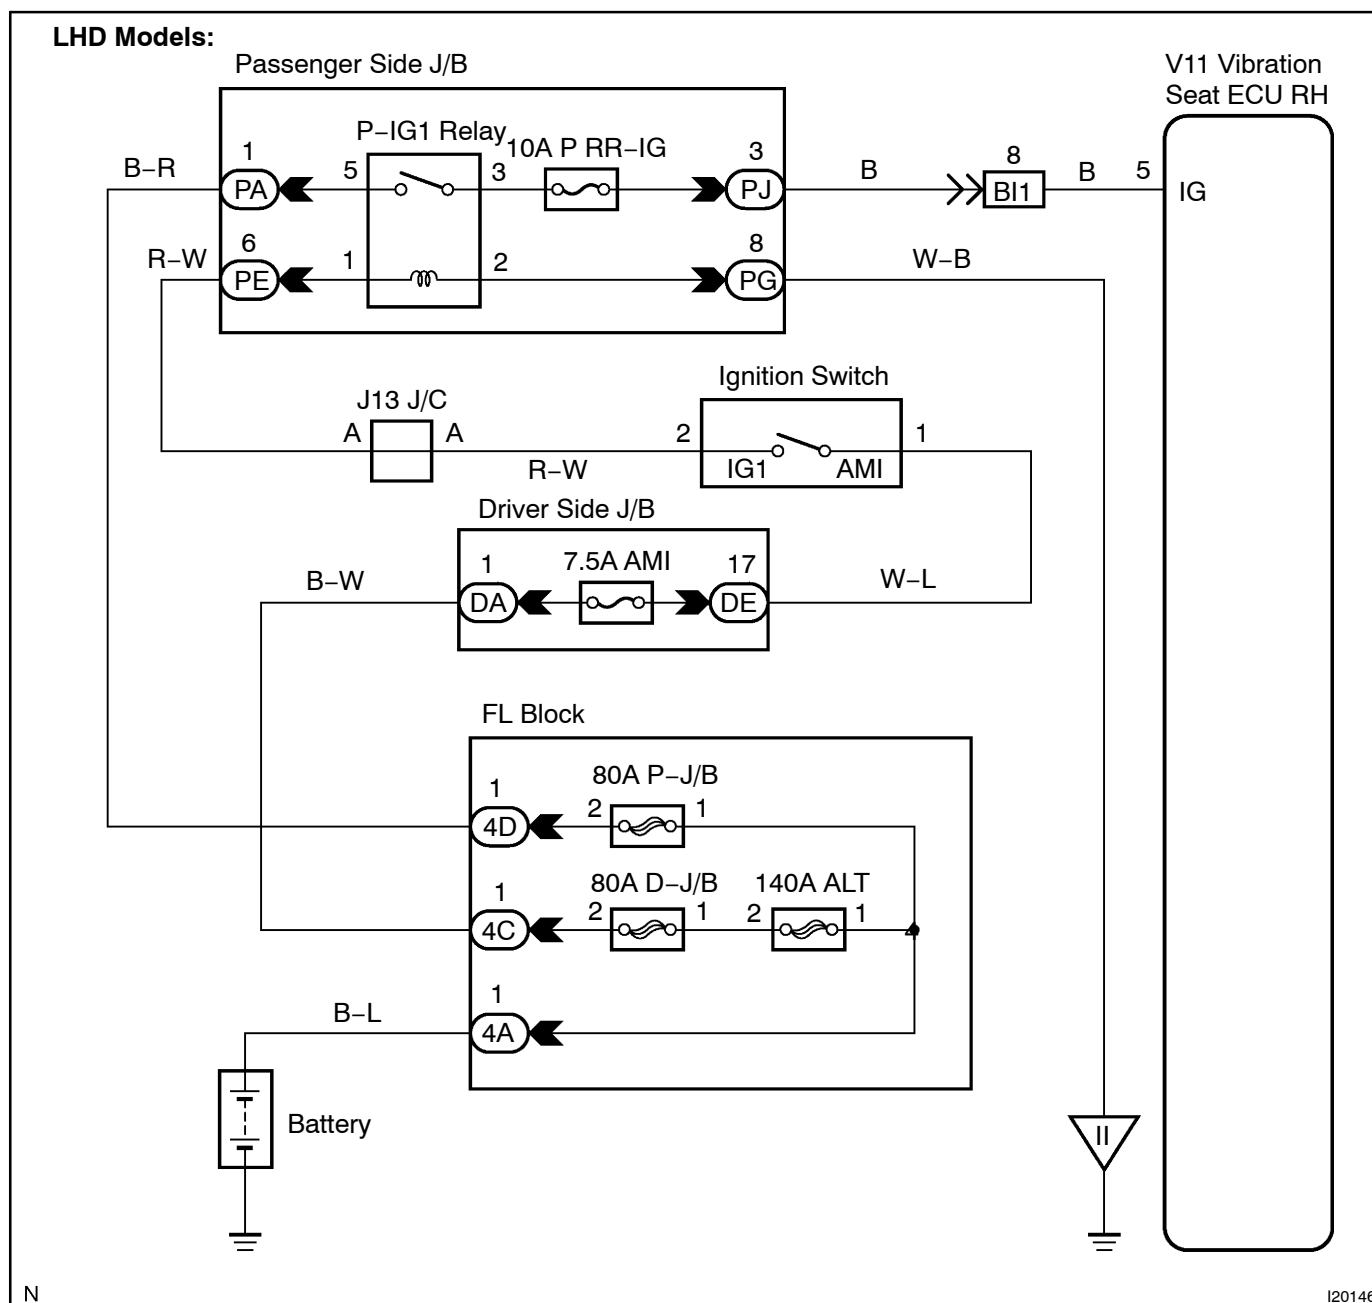

RHD Models:

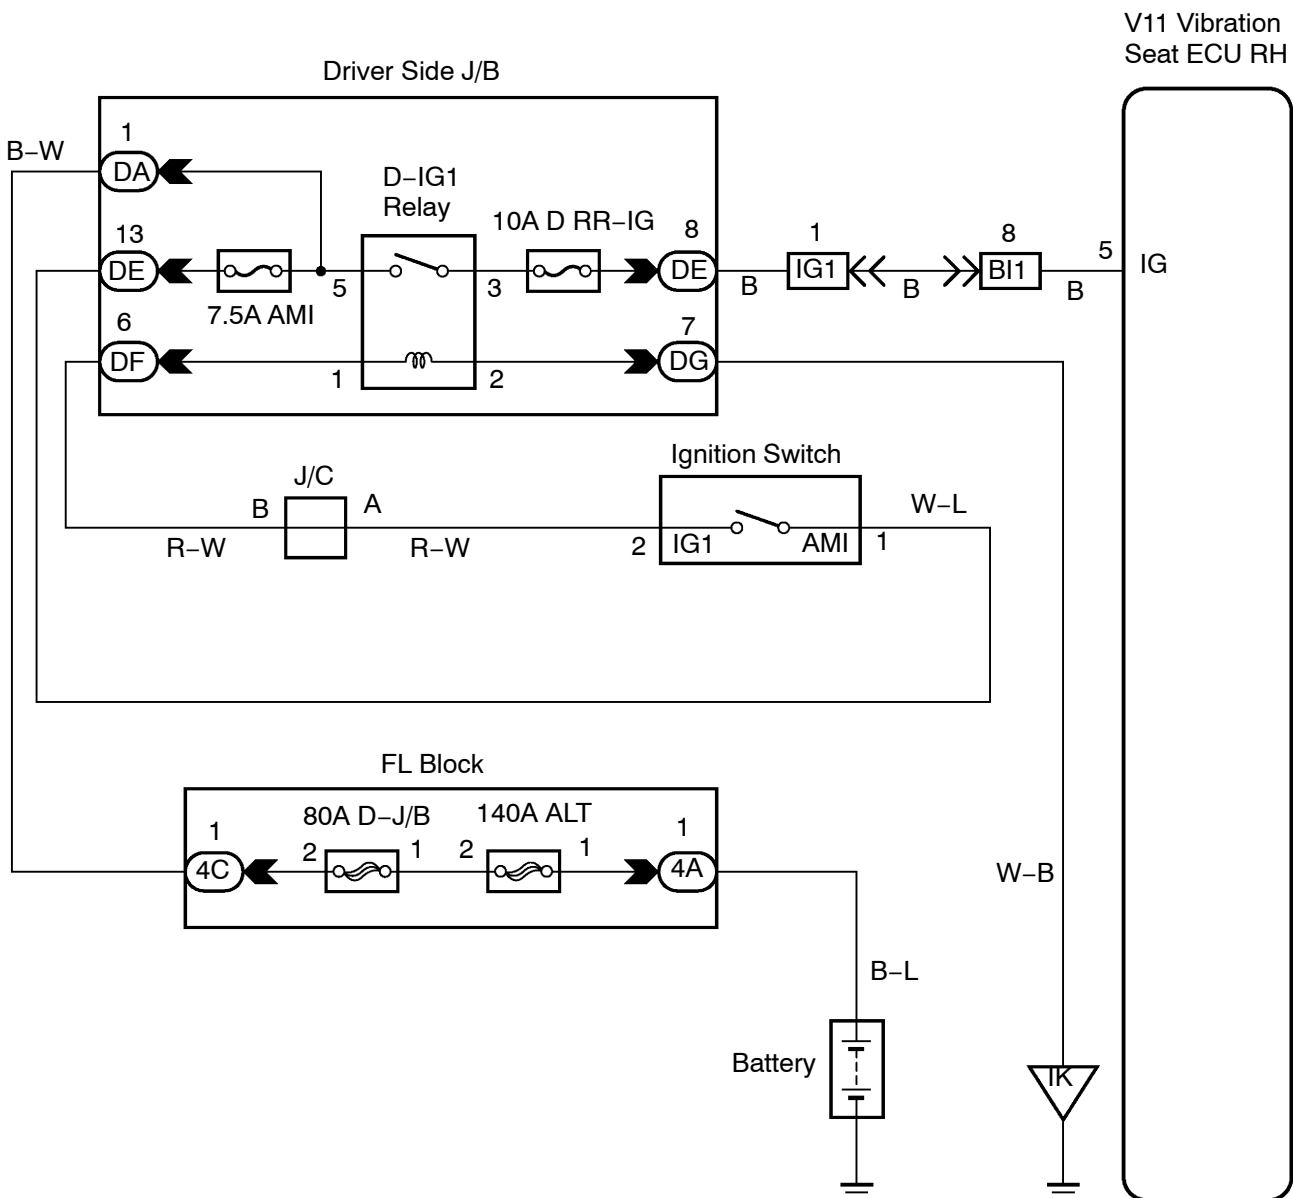

N

I20147

INSPECTION PROCEDURE

1 Check RR IG fuse.

CHECK:

Check continuity of RR IG fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals IG and GND of vibration seat ECU RH connector.

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the vibration seat ECU RH connector.

CHECK:

Measure voltage between terminals IG and GND.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-765](#)).

NG

3 Check wireharness and connector between vibration seat ECU RH and body ground ([See page IN-35](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-765](#)).