


## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

| DTC No.<br>(See Page) | Circuit Inspection                                  | Trouble Area                                                                                                                                                 |
|-----------------------|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| B1242<br>(DI-815)     | Wireless Door Lock Tuner Circuit Malfunction        | <ul style="list-style-type: none"> <li>• Wire harness</li> <li>• Wireless Door Lock Tuner</li> <li>• Luggage Tuner</li> <li>• Theft deterrent ECU</li> </ul> |
| *B2761<br>(DI-817)    | Intrusion Sensor Internal Circuit Malfunction       | <ul style="list-style-type: none"> <li>• Intrusion sensor</li> <li>• Theft deterrent ECU</li> </ul>                                                          |
| *B2762<br>(DI-819)    | Intrusion Sensor Signal Circuit Malfunction         | <ul style="list-style-type: none"> <li>• Intrusion sensor</li> <li>• Wire harness</li> <li>• Theft deterrent ECU</li> </ul>                                  |
| *B2763<br>(DI-821)    | Intrusion Sensor +B Circuit Malfunction (GND short) | <ul style="list-style-type: none"> <li>• Intrusion sensor</li> <li>• Wire harness</li> <li>• Theft deterrent ECU</li> </ul>                                  |

\*: Europe Models

## SYSTEM DIAGRAM ( ): DTC

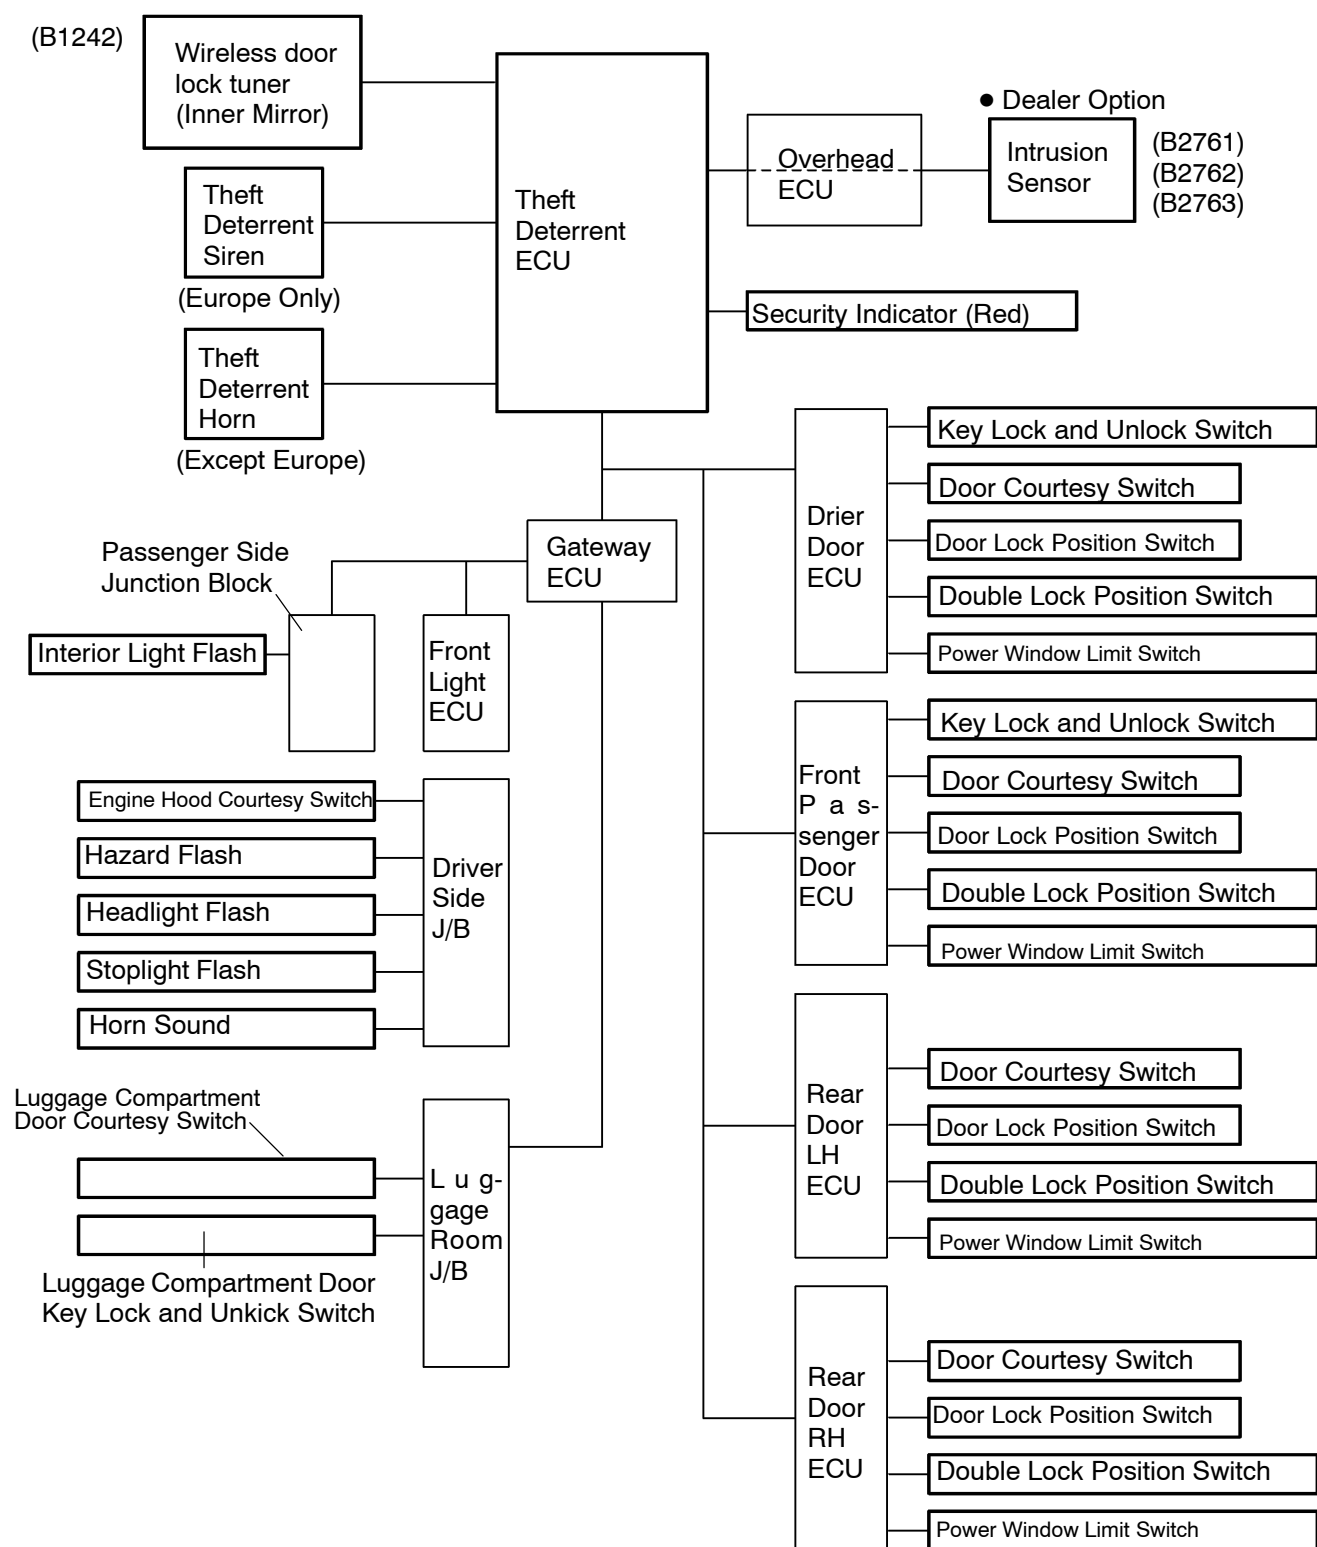

T

I20503