

CIRCUIT INSPECTION

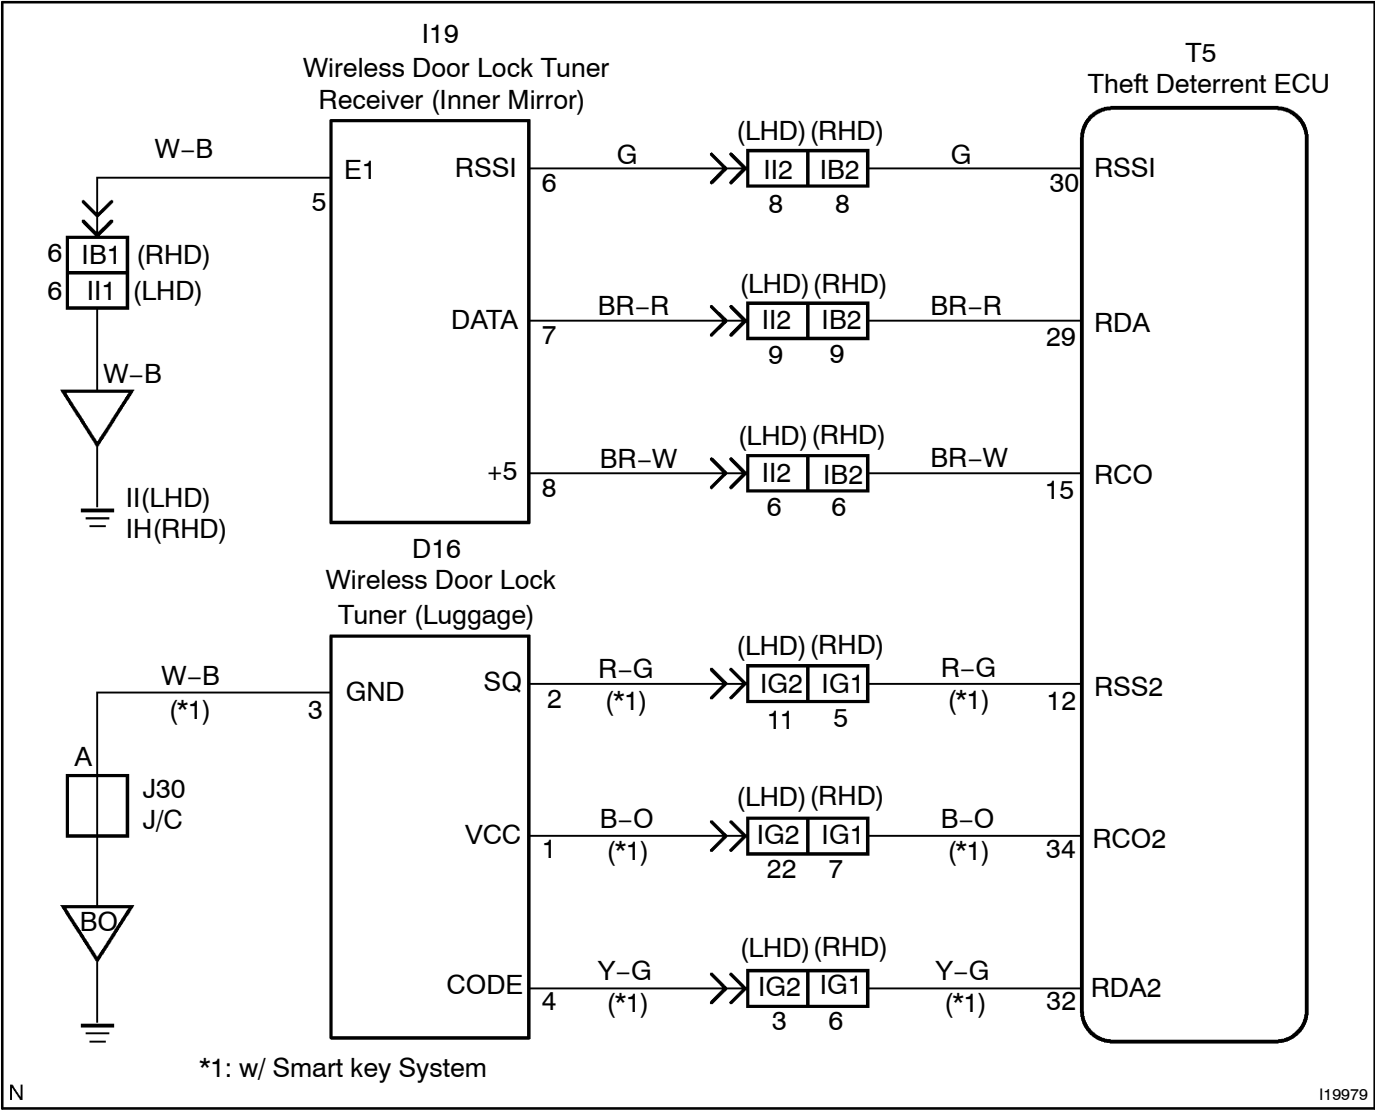
DTC	B1242	Wireless Door Lock Tuner Circuit Malfunction
-----	-------	--

CIRCUIT DESCRIPTION

This DTC is detected when GND short occurs on the RDA or RSSI lines of the tuner, or on the RDA2 or RSS2 lines (w/Smart) of the LUGGAGE tuner. If this DTC is detected, check the circuit that has communication malfunction.

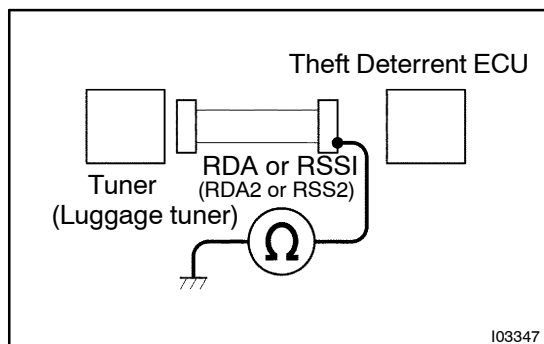
DTC No.	DTC Detection Condition	Trouble Area
B1242	- GND short of RDA or RSSI terminal of tuner - GND short of RDA2 or RSS2 terminal of luggage tuner	- Wireharness - Wireharness door lock tuner - Luggage tuner - Theft deterrent ECU

WIRING DIAGRAM



INSPECTION PROCEDURE

1 Check wire harness.

**PREPARATION:**

Disconnect the connectors of the wireless tuner and theft deterrent ECU.

CHECK:

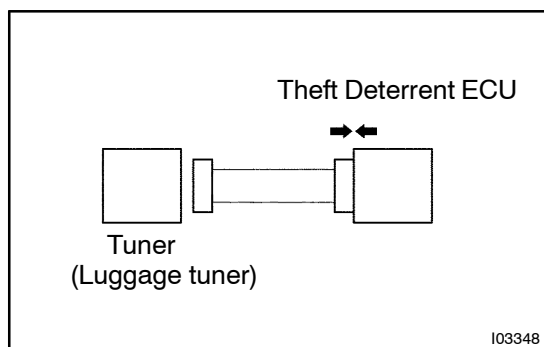
Check continuity between terminals DATA of the wireless tuner and RDA of the theft deterrent ECU.

OK:**Continuity****HINT:**

Check the wire harness that has communication malfunction.

NG**Repair or replace wireless tuner.****OK**

2 Check theft deterrent ECU.

**PREPARATION:**

Connect the connector of the theft deterrent ECU.

CHECK:

Check the DTC.

OK:

B1242 is not output.

NG**Replace theft deterrent ECU**
(See page IN-35).**OK****Replace wireless tuner (luggage receiver).**