

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
B2775 (DI-881)	Internal Verification Abnormal (to Theft Deterrent ECU)	• Smart Key • Wire harness • Theft Deterrent ECU • Steering lock ECU
B2776 (DI-884)	Steering Lock Motor Malfunction	• Steering lock ECU
B2777 (DI-886)	+B circuit Malfunction	• Fuse • Wireharness
B2778 (DI-888)	Interlock Cable Malfunction	• Steering lock ECU
B2780 (DI-889)	Push Switch / Key Unlock Warning Switch Malfunction	• Unlock warning switch
B2793 (DI-892)	Transponder Chip Malfunction	• Smart key
B2794 (DI-912)	Unmatched Encryption Code	• Smart key • Amplifier
B2795 (DI-913)	Unmatched key code	• Smart key • Unregistered key inserted before
B2796 (DI-914)	No communication in immobiliser system	• Smart key • Amplifier (w/ coil) • Wireharness • Steering lock ECU
B2797 (DI-917)	Communication Malfunction No. 1	• Communication contents • Unregistered key inserted before
B2798 (DI-921)	Communication Malfunction No. 2	• Smart key • Amplifier (w/ coil) • Wireharness • Steering lock ECU
B2799 (DI-925)	• Engine immobiliser system	• Wire harness • Steering lock ECU • Engine and ECT ECU

HINT:

- DTC B2793 – B2798 are detected for troubles found when the smart key is inserted into the starter switch.
- DTC B2793 – B2798 are used in the Steering Lock ECU and the Transponder key ECU, and the same troubleshooting method is applied to both ECUs. Therefore, if these DTC are detected, refer to the immobiliser section to conduct troubleshooting.

