


Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Steering Lock ECU

WIRING DIAGRAM

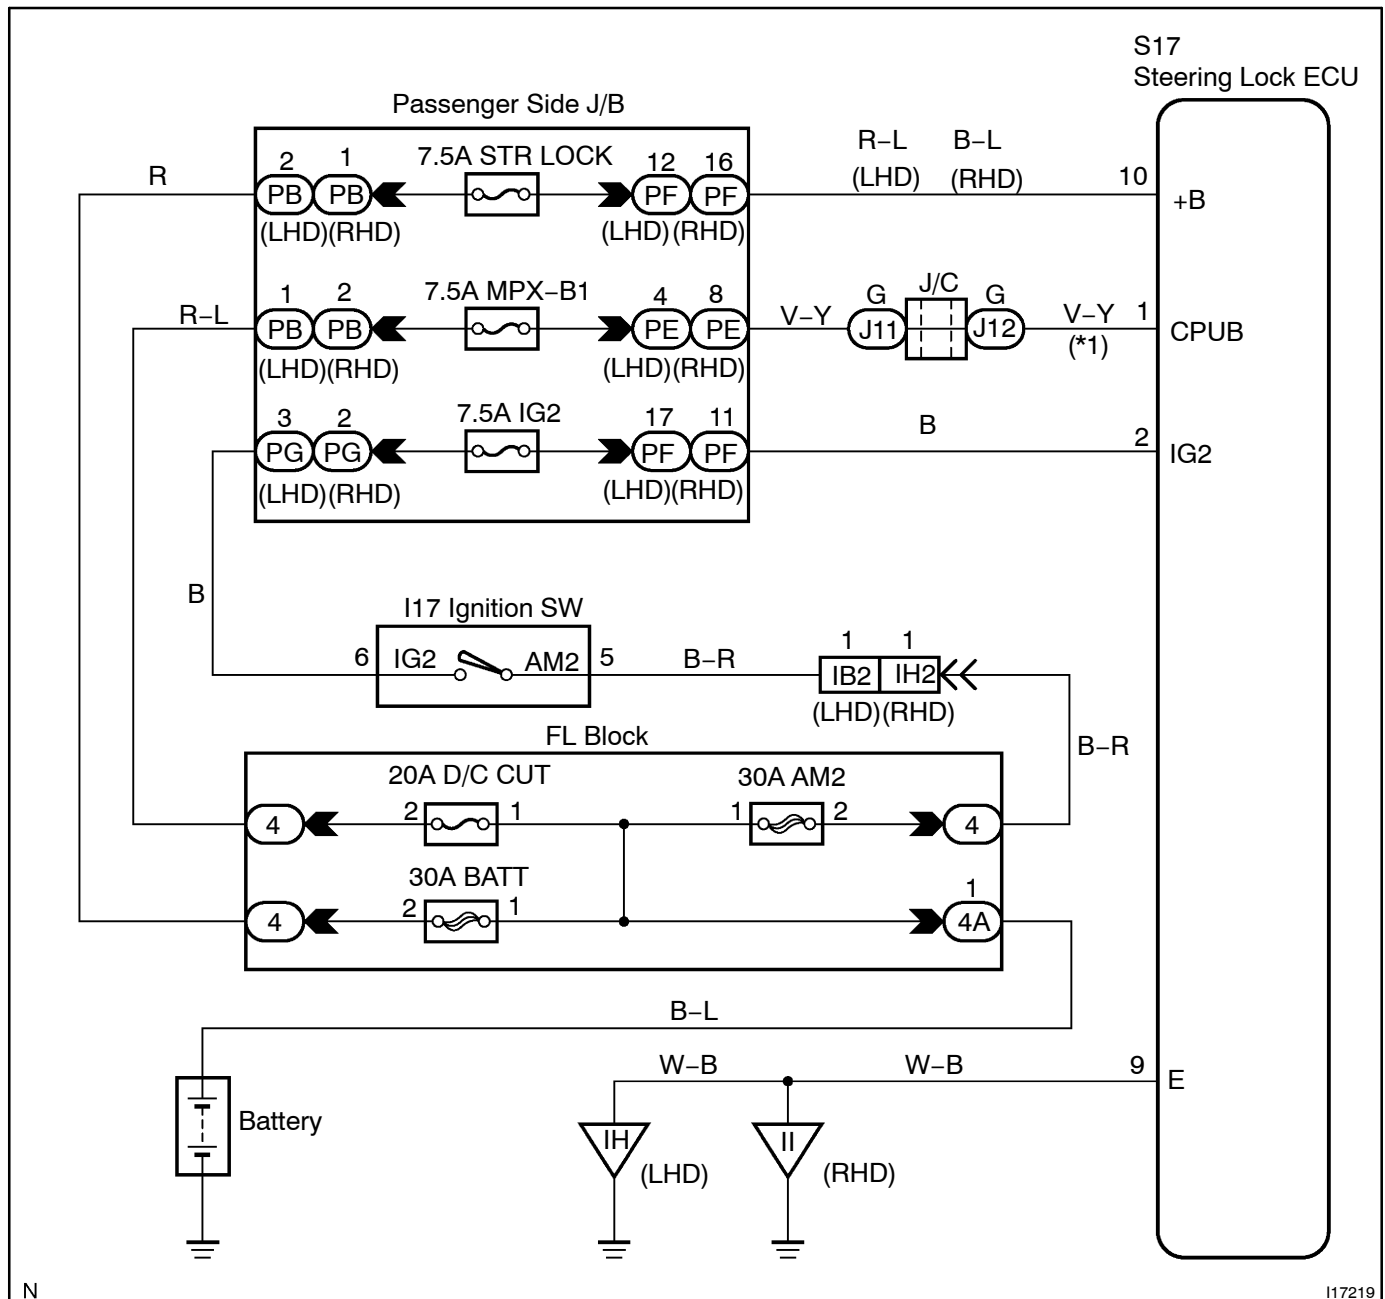

INSPECTION PROCEDURE

1	Check MPX-B1 and IG2 fuse.
----------	-----------------------------------

CHECK:

Check continuity of MPX-B1 and IG2.

OK:**Continuity**

NG	Replace the failure fuse.
-----------	----------------------------------

OK

2	Check voltage between terminal B, IG and E of steering lock ECU.
----------	---

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure voltage between terminals IG and E.

OK:**Voltage: 10 – 14V****PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the steering lock ECU connector.

CHECK:

Measure voltage between terminals B, CPUB and E.

OK:**Voltage: 10 – 14V**

OK	Proceed to next circuit inspection shown on problem symptoms table (See page DI-880).
-----------	--

NG

3

Check wire harness and connector between steering lock ECU and body ground (See page IN-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-880).