

PROBLEM SYMPTOMS TABLE

HEADLIGHT AND TAILLIGHT SYSTEM:

Symptom	Suspect Area	See page
"LO-beam" headlight does not light up.	3. Headlight relay circuit 1. Light control switch circuit 2. Combination switch 3. Driver side J/B control ECU	DI-1049 DI-965 IN-35 IN-35
"HI-beam" headlight does not light up.	1. Headlight (HI-beam) circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1171 DI-965 IN-35 IN-35 IN-35
"Flash" headlight does not light up.	1. Headlight (HI-beam) circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1171 DI-965 IN-35 IN-35 IN-35
Headlight is dark.	1. Light control switch circuit 2. Combination switch 3. Driver side J/B control ECU	DI-965 IN-35 IN-35
Headlight does not light up or has abnormal operation.	1. Light control switch circuit 2. Combination switch 3. Driver side J/B control ECU	DI-965 IN-35 IN-35
Taillight does not light up or has abnormal operation.	1. Taillight circuit 2. Light control switch circuit 3. Combination switch 4. Luggage room J/B ECU 5. Driver side J/B control ECU	DI-1144 DI-965 IN-35 IN-35 IN-35

FOG LIGHT SYSTEM:

Symptom	Suspect Area	See page
Fog light does not light up or has abnormal operation.	1. Front fog light circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1174 DI-965 IN-35 IN-35 IN-35

TURN SIGNAL LIGHT SYSTEM:

Symptom	Suspect Area	See page
Turn signal light does not light up.	1. Turn signal light circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1177 DI-965 IN-35 IN-35 IN-35

WIPER AND WASHER SYSTEM:

Symptom	Suspect Area	See page
Wiper and washer system does not operate.	1. Wiper and washer switch circuit 2. Wiper motor circuit 3. Combination switch 4. Passenger side J/B control ECU	DI-967 DI-1079 IN-35 IN-35

POWER TILT AND TELESCOPIC STEERING SYSTEM:

Symptom	Suspect Area	See page
Both tilt and telescopic: Only tilt and telescopic manual switch function does not operate.	1. Tilt and telescopic manual switch circuit 2. Tilt and telescopic steering ECU	DI-979 IN-35
Tilt only: Only tilt and telescopic manual switch function does not operate.	1. Tilt and telescopic manual switch circuit 2. Tilt and telescopic steering ECU	DI-979 IN-35
Telescopic only: Only tilt and telescopic manual switch function does not operate.	1. Tilt and telescopic manual switch circuit 2. Tilt and telescopic steering ECU	DI-979 IN-35