


CIRCUIT INSPECTION

Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the combination switch.

WIRING DIAGRAM

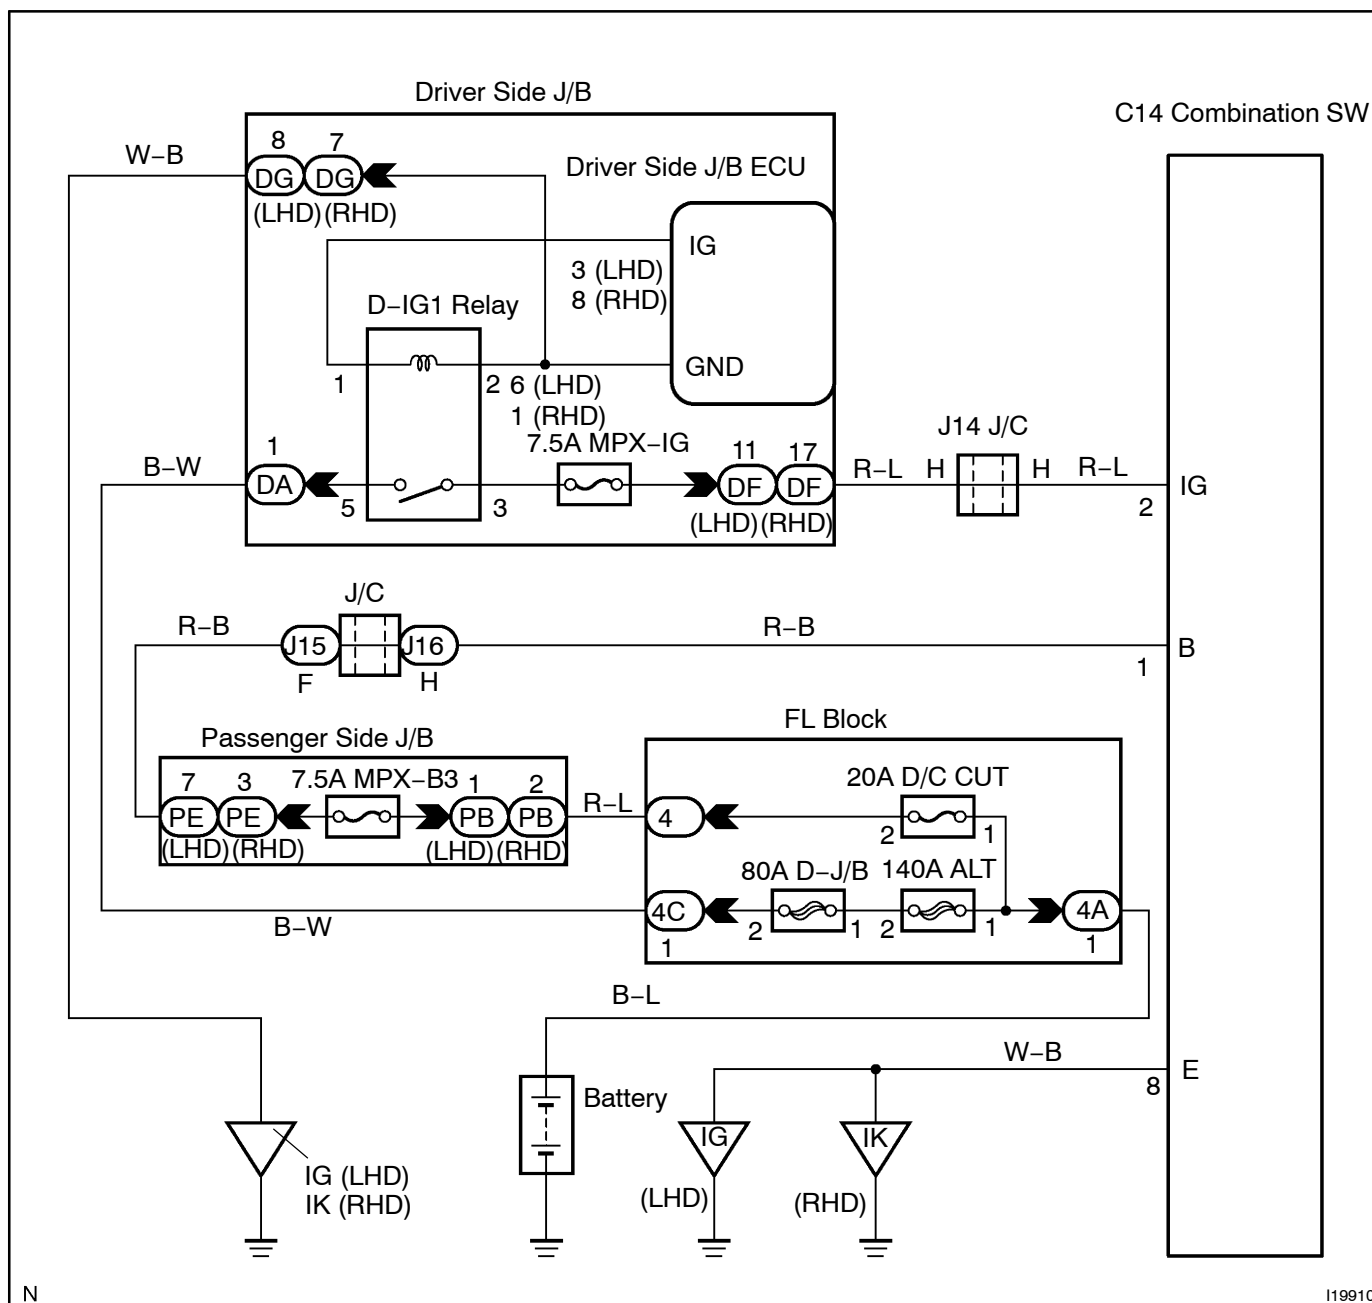

INSPECTION PROCEDURE**1 Check MPX-B3 and MPX-IG fuse.****CHECK:**

Check continuity of MPX-B3 and MPX-IG fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK****2 Check voltage between terminal B, IG and E of combination switch.****PREPARATION:**

Disconnect the combination switch.

CHECK:

Measure voltage between terminals B and E of the combination switch.

OK:

Voltage: 10 – 14V

PREPARATION:

- (a) Turn the ignition switch ON.
- (b) Disconnect the combination switch.

CHECK:

Measure voltage between terminals IG and E of combination switch.

OK:

Voltage: 10 – 14V

OK**Proceed to next circuit inspection shown on problem symptoms table ([See page DI-960](#)).****NG**

3

Check wireharness and connector between combination switch and body ground ([See page IN-35](#)).

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between ECU and battery.