

PROBLEM SYMPTOMS TABLE**LIGHTING SYSTEM:**

Symptom	Suspect Area	See page
Headlight does not light up. (Low beam)	1. Light control switch circuit 2. Headlight relay circuit 3. Combination switch 4. Driver side J/B control ECU	DI-965 DI-1049 IN-35 IN-35
Headlight system does not operate. (HI beam or Flash)	1. Headlight (HI-beam) circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1171 DI-965 IN-35 IN-35 IN-35
Automatic light control system does not operate.	1. Automatic light control sensor circuit 2. Combination switch 3. Front light ECU 4. Driver side J/B control ECU	DI-1015 IN-35 IN-35 IN-35
Both left and right headlight does not light up.	1. Headlight circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1049 DI-965 IN-35 IN-35 IN-35
Both left and right clearance light does not light up.	1. Clearance light circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1185 DI-965 IN-35 IN-35 IN-35
Front fog light does not light up.	1. Front fog light circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1174 DI-965 IN-35 IN-35 IN-35
Rear combination light does not light up. (All)	1. Power source circuit 2. Combination switch 3. Driver side J/B control ECU 4. Luggage room J/B control ECU	DI-1019 IN-35 IN-35 IN-35
Both left and right taillight does not light up.	1. Taillight circuit 2. Light control switch circuit 3. Combination switch 4. Driver side J/B control ECU 5. Luggage room J/B control ECU	DI-1144 DI-965 IN-35 IN-35 IN-35
Both left and right stop light does not light up.	1. Stop light circuit 2. Combination switch 3. Driver side J/B control ECU 4. Luggage room J/B control ECU	DI-1147 IN-35 IN-35 IN-35
Hi-mounted stop light does not light up.	1. Hi-mounted stop light circuit 2. Combination switch 3. Driver side J/B control ECU 4. Luggage room J/B control ECU	DI-1149 IN-35 IN-35 IN-35
Back-up light does not light up.	1. Back-up light circuit 2. Combination switch 3. Driver side J/B control ECU 4. Luggage room J/B control ECU	DI-1153 IN-35 IN-35 IN-35

Rear fog light does not light up.	1. Rear fog light circuit 2. Combination switch 3. Driver side J/B control ECU 4. Luggage room J/B control ECU	DI-1151 IN-35 IN-35 IN-35
License plate light does not light up.	1. License plate light circuit 2. Combination switch 3. Driver side J/B control ECU 4. Luggage room J/B control ECU	DI-1155 IN-35 IN-35 IN-35
Front clearance light does not light up	1. Clearance light circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1185 DI-965 IN-35 IN-35 IN-35
Light auto turn off system does not operate. (Headlight is normal)	1. Headlight circuit 2. Light control switch circuit 3. Combination switch 4. Steering lock ECU 5. Driver side J/B control ECU	DI-1049 DI-965 IN-35 IN-35 IN-35
Taillight system does not light up	1. Taillight circuit 2. Light control switch circuit 3. Combination switch 4. Luggage room J/B control ECU 5. Driver side J/B control ECU	DI-1144 DI-965 IN-35 IN-35 IN-35

TURN SIGNAL AND HAZARD WARNING SYSTEM:

Symptom	Suspect Area	See page
Hazard warning light does not light up.	1. Hazard switch circuit 2. Combination switch 3. Front light ECU 4. Driver side J/B control ECU	DI-1035 IN-35 IN-35 IN-35
Turn signal light does not light up. (All)	1. Turn signal light circuit 2. Light control switch circuit 3. Combination switch 4. Front light ECU 5. Driver side J/B control ECU	DI-1055 DI-965 IN-35 IN-35 IN-35

ILLUMINATION LIGHT SYSTEM:

Symptom	Suspect Area	See page
All switch illumination light does not light up.	1. Power source circuit 2. Rheostat light control volume circuit 3. Driver side J/B control ECU	DI-1019 DI-1039 IN-35
Each switch illumination light does not light up.	1. Illumination light circuit 2. Driver side J/B control ECU	DI-1057 IN-35
Brightness does not change even when rheostat turned. (All)	1. Rheostat light control volume circuit 2. Driver side J/B control ECU	DI-1039 IN-35
Brightness does not change even when rheostat turned. (Meter illumination)	1. Rheostat light control volume circuit 2. Combination meter circuit 3. Driver side J/B control ECU	DI-1039 DI-1053 IN-35
Driver seat belt buckle illumination circuit.	1. Driver buckle illumination circuit 2. Driver side J/B control ECU	DI-1047 IN-35
Glove compartment door light does not light up.	1. Illumination light circuit 2. Driver side J/B control ECU	DI-1057 IN-35

STOP LIGHT SYSTEM:

Symptom	Suspect Area	See page
Stop light system does not light up.	1. Stop light switch circuit 2. Stop light circuit 3. Driver side J/B control ECU	DI-1037 DI-1147 IN-35

HEADLIGHT CLEANER SYSTEM:

Symptom	Suspect Area	See page
Headlight cleaner system does not operate.	1. Headlight cleaner nozzle and hose 2. Headlight cleaner switch circuit 3. Headlight cleaner motor circuit 4. Headlight cleaner relay circuit 5. Driver side J/B control ECU	BE-64 DI-1051 DI-1051 DI-1051 IN-35

DRIVER SEAT BELT SYSTEM:

Symptom	Suspect Area	See page
Driver seat belt warning does not light up.	1. Driver buckle switch circuit 2. Driver side J/B control ECU	DI-1045 IN-35

POWER SHOULDER BELT ANCHORAGE SYSTEM:

Symptom	Suspect Area	See page
Driver belt anchor can not be operated manually.	1. Power source circuit 2. Shoulder belt anchor motor circuit 3. Shoulder belt anchor sensor circuit 4. Driver door control ECU 5. Driver side J/B control ECU	DI-1019 DI-1043 DI-1041 IN-35 IN-35

OTHERS:

Symptom	Suspect Area	See page
Stop light switch signal is sent to Shift lock, VSC and Engine control system.	1. Stop light switch circuit 2. Driver side J/B control ECU	DI-1037 IN-35
Brake pad indicator does not light up. (RHD Models)	1. Combination meter system 2. Brake pad sensor circuit 3. Driver side J/B control ECU	DI-930 DI-1063 IN-35

HINT:

When diagnosis this ECU, select the "BODY NO. 2" from the MENU of the LEXUS hand-held tester.