


Fuel Lid Opener Switch Circuit

CIRCUIT DESCRIPTION

This circuit detects the conditions of the fuel lid opener switch.

WIRING DIAGRAM

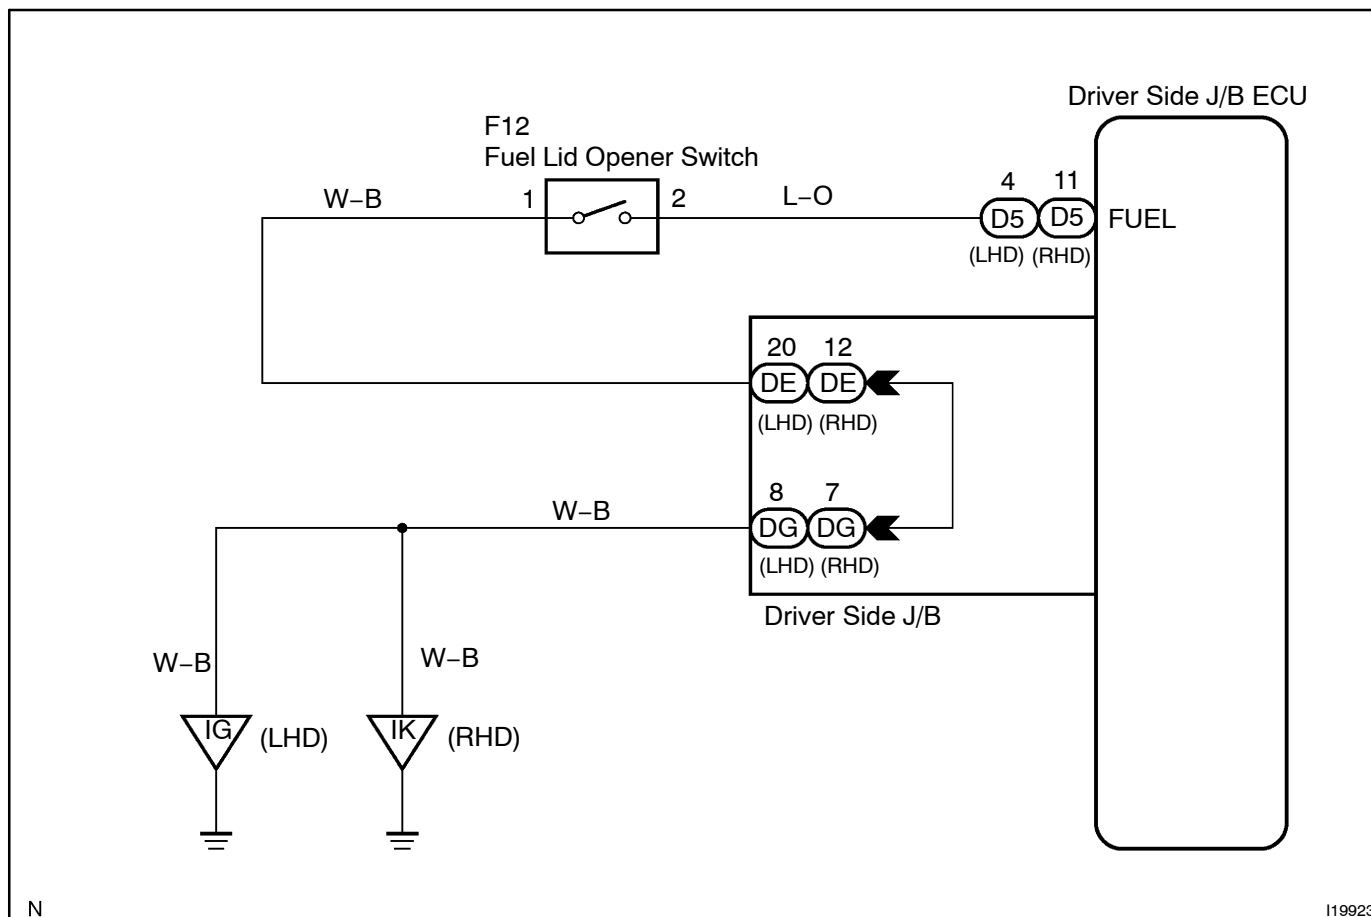

N

I19923

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check the fuel lid opener switch using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the fuel lid opener switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1012](#)).

NG

2	Check the fuel lid opener switch (See page BE-168).
---	--

NG

Replace the fuel lid opener switch.

OK

3	Check wireharness and connector between fuel lid opener switch and driver side J/B ECU (See page IN-35).
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1012](#)).