


CIRCUIT INSPECTION

Power Source Circuit

CIRCUIT DESCRIPTION

This curcuit provides power to operate the passenger side J/B ECU.

WIRING DIAGRAM

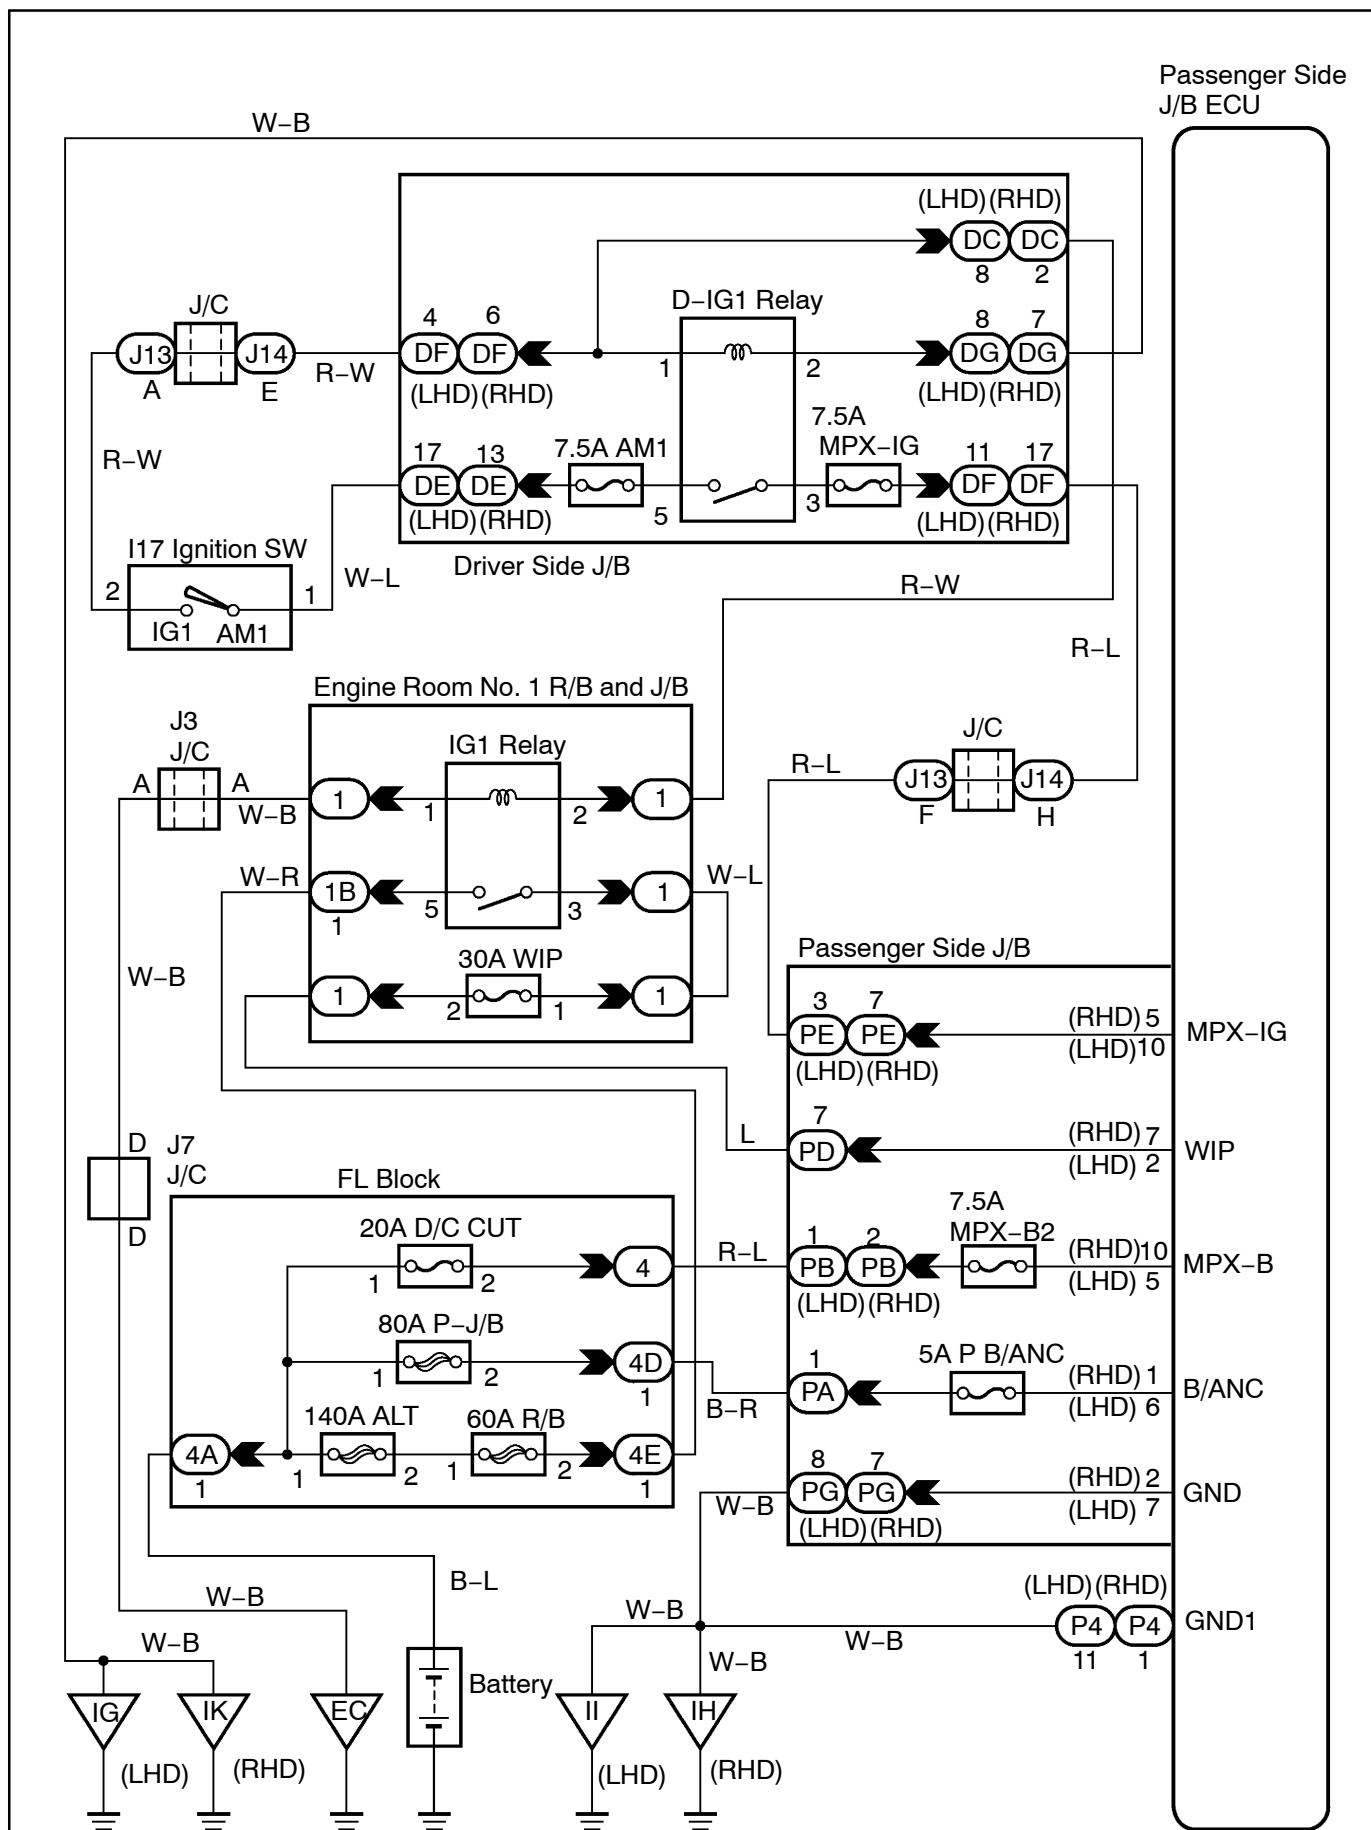

INSPECTION PROCEDURE

1	Check MPX-IG, MPX-B1, WIP and P B/ANC fuse.
----------	--

CHECK:

Check continuity of MPX-IG, MPX-B1, WIP and P B/ANC fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2	Check voltage between terminal MPX-B, MPX-IG, WIP, P B/ANC, ACC and GND of passenger side junction block.
----------	--

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure voltage between terminals MPX-IG, ACC and GND and body ground of the passenger side J/B.

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the passenger side junction block.

CHECK:

Measure voltage between terminals MPX-B, WIP, P B/ANC and GND and body ground of the passenger side J/B.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1071](#)).

NG

3**Check wire harness and connector between passenger side J/B ECU and body ground ([See page IN-35](#)).****NG****Repair or replace wire harness or connector.****OK****Proceed to next circuit inspection shown on problem symptom table ([See page DI-1071](#)).**