


Brake Pad Sensor Circuit (LHD only)

CIRCUIT DESCRIPTION

Passenger side J/B ECU receives the brake pad sensor signal and sends it to the Combination meter.

WIRING DIAGRAM

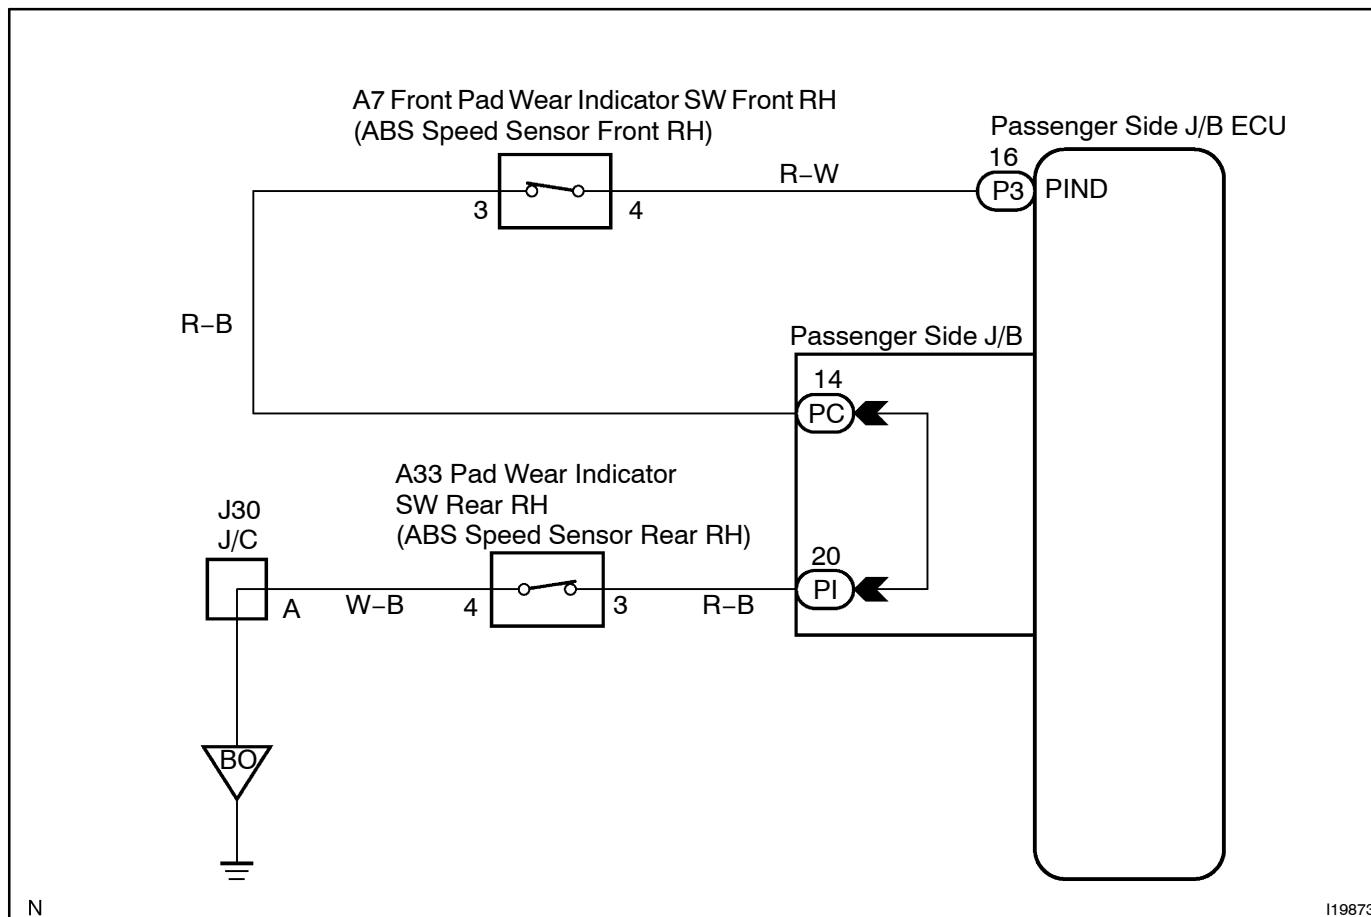

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check the brake pad sensor using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the brake pad sensor using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1071](#)).

NG

2	Check the brake pad sensor (See page BR-35).
---	---

NG

Replace the brake pad sensor.

OK

3	Check wire harness and connector between brake pad sensor and passenger side J/B ECU (See page IN-35).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1071](#)).