


Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the luggage room J/B ECU.

WIRING DIAGRAM

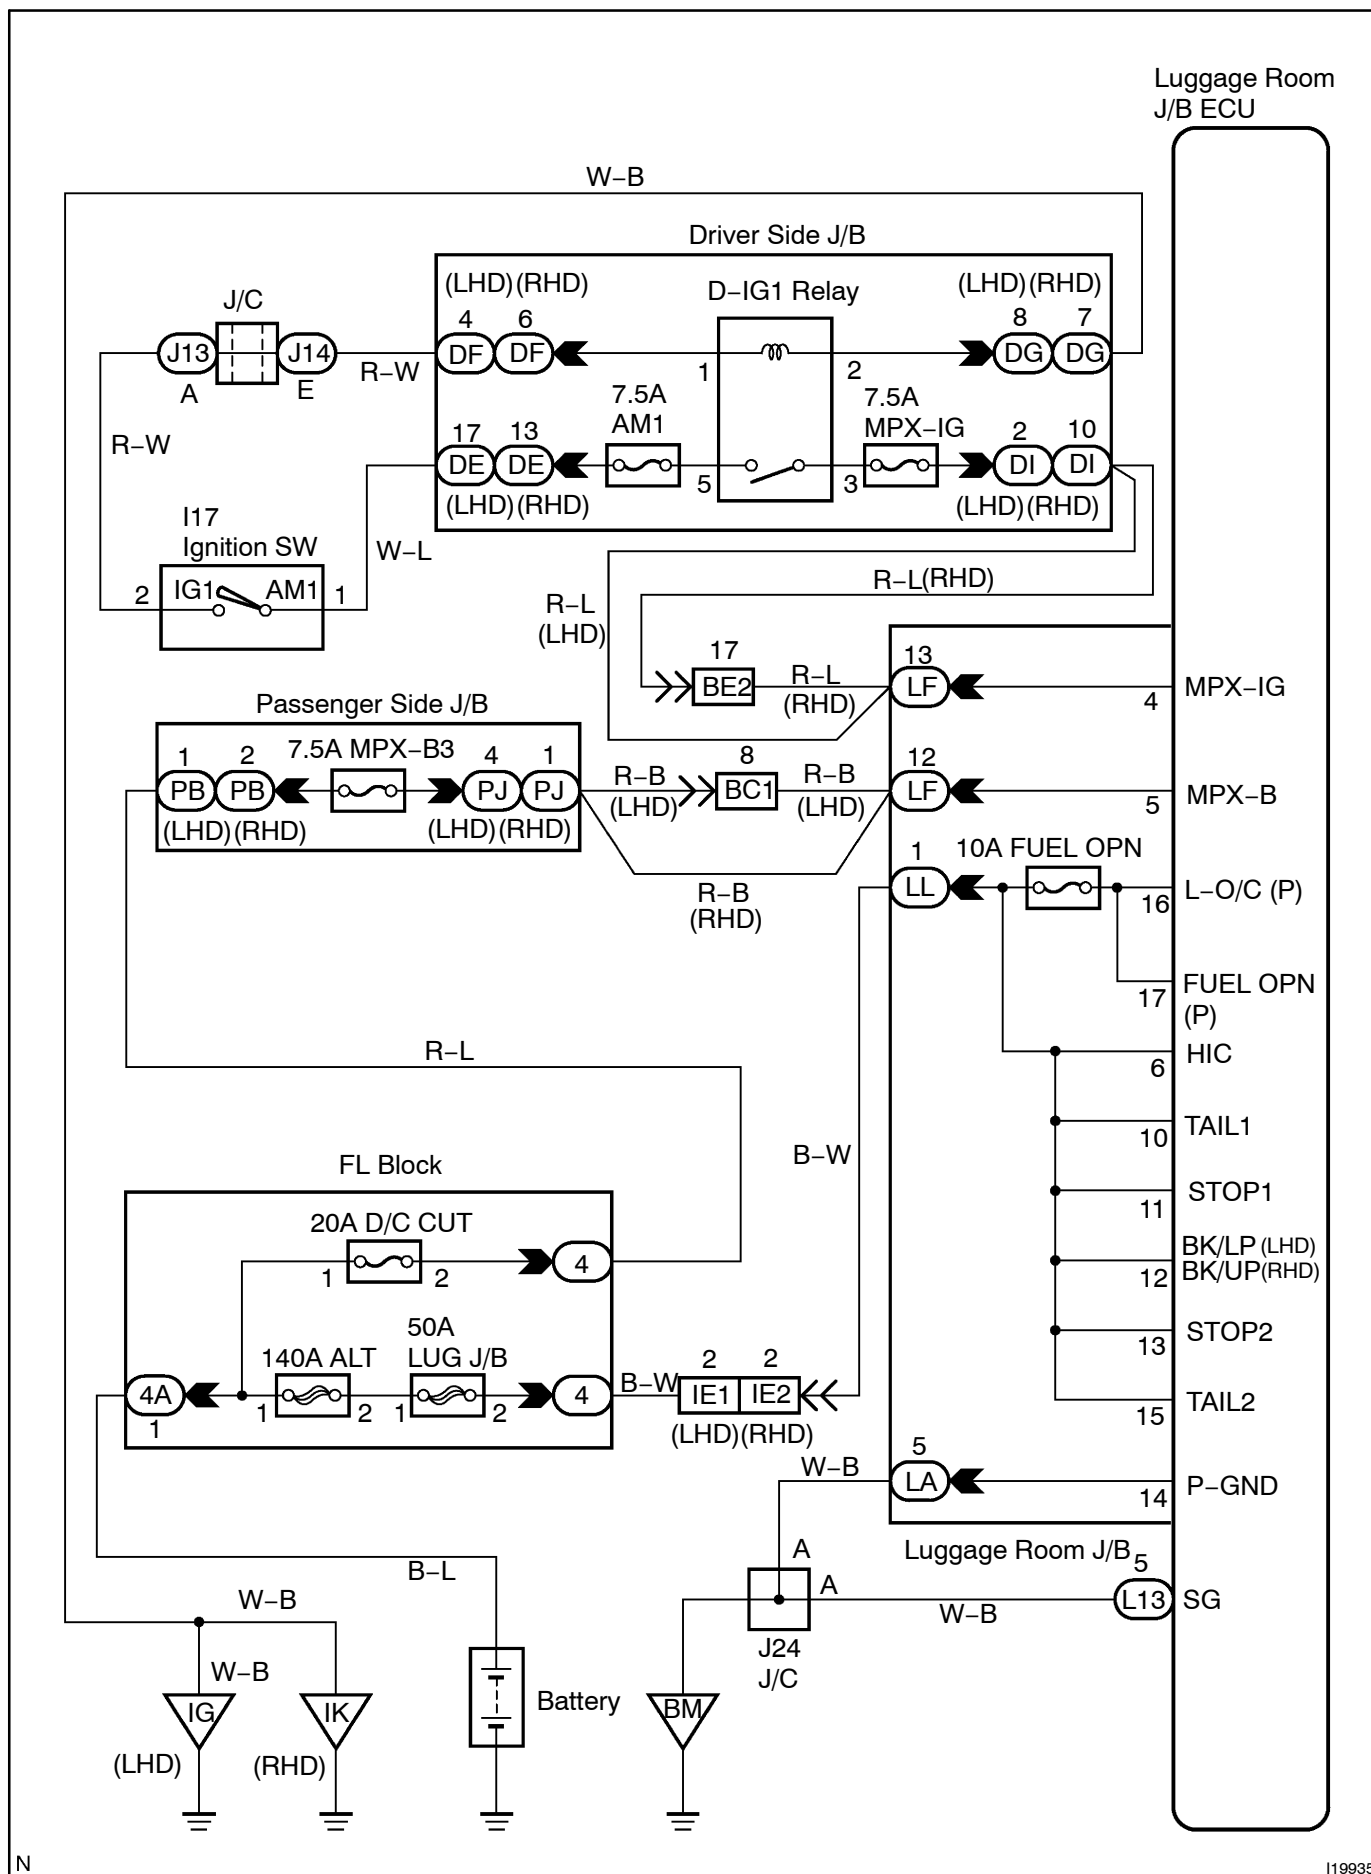

INSPECTION PROCEDURE

1 Check MPX-B3 and LUG J/B fuse.

CHECK:

Check continuity of MPX-B3 and LUG J/B fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals MPX-B, HIC and GND of luggage room J/B ECU connector.

PREPARATION:

Disconnect the luggage room J/B ECU connector.

CHECK:

Measure voltage between terminals MPX-B, HIC and GND.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1113](#)).

NG

3 Check wire harness and connector between luggage room J/B ECU and body ground ([See page IN-35](#)).

NG

Repair or replace wire harness or connector.

OK

Check and repair wire harness and connector between luggage room J/B ECU and battery ([See page DI-1113](#)).