

Luggage Compartment Door Opener Motor Circuit


CIRCUIT DESCRIPTION

The open-close operation of the luggage door is checked, and the signals are sent to the Luggage Room J/B ECU.

The luggage close motor is built in the luggage door lock assembly.

See the luggage close switch circuit.

WIRING DIAGRAM

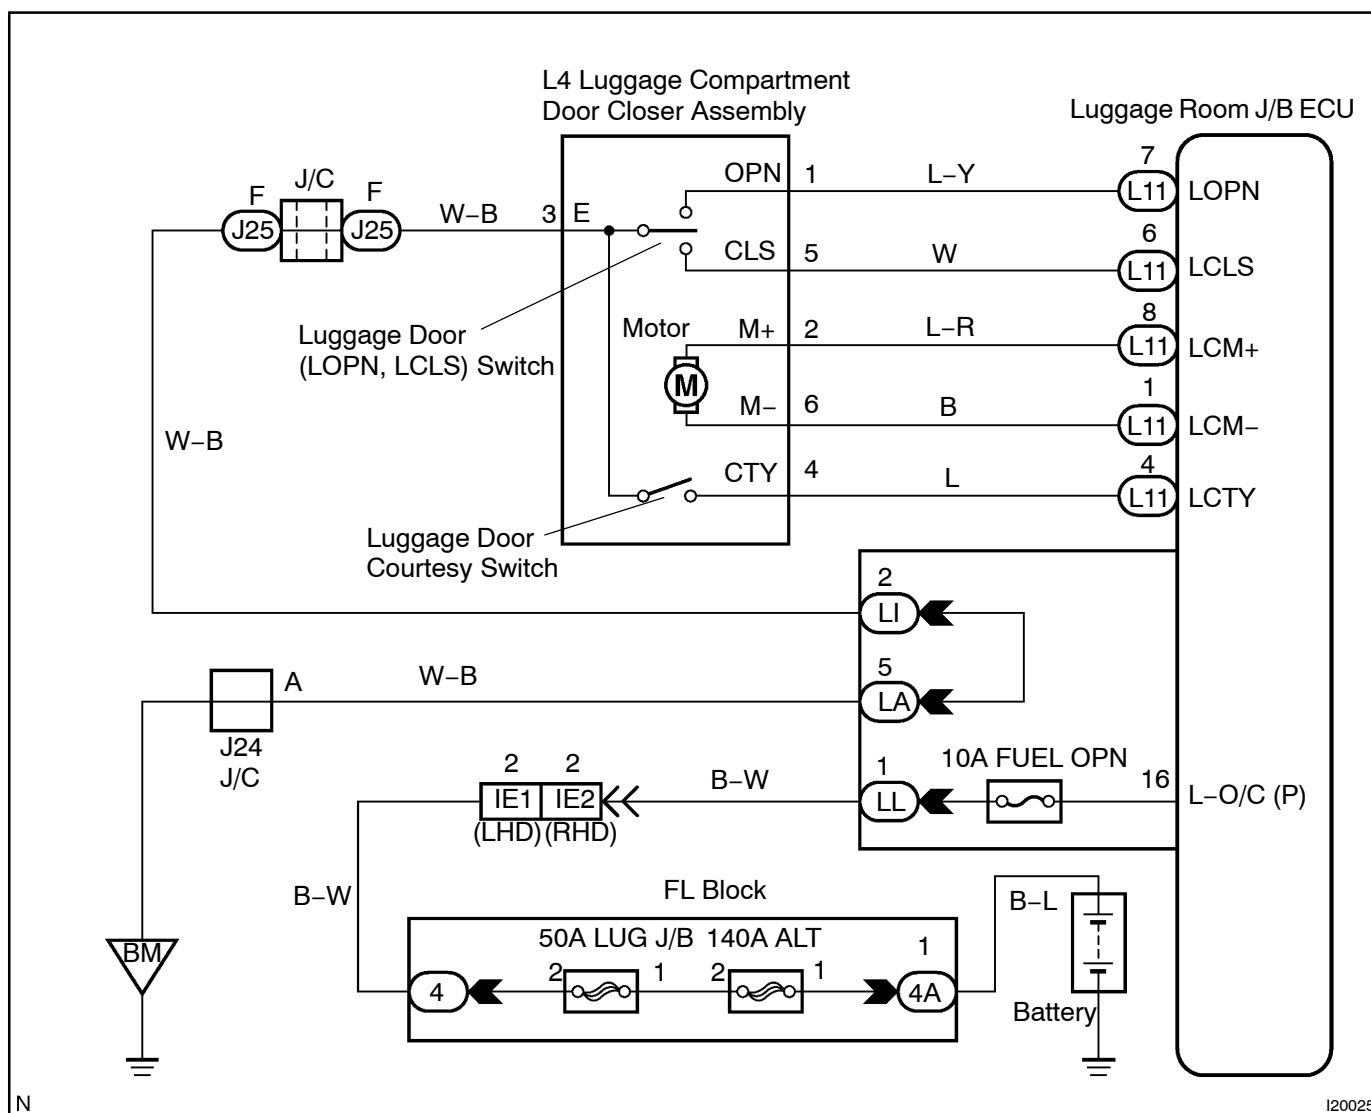

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check luggage compartment door opener motor using LEXUS hand-held tester. |
|---|--|

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the luggage compartment door opener motor using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1113](#)).

NG

- | | |
|---|-----------------------------|
| 2 | Check FUEL OPN fuse. |
|---|-----------------------------|

NG

Replace fuse

OK

- | | |
|---|---|
| 3 | Check luggage compartment door opener motor (See page BE-174). |
|---|---|

NG

Replace luggage compartment door opener motor.

OK

- | | |
|---|---|
| 4 | Check wireharness and connector between luggage compartment door opener motor and luggage room J/B ECU (See page IN-35). |
|---|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1113](#)).