


Taillight Circuit

CIRCUIT DESCRIPTION

Receiving the light control switch TAIL signal from either of the luggage room J/B ECU makes the taillight come on.

WIRING DIAGRAM

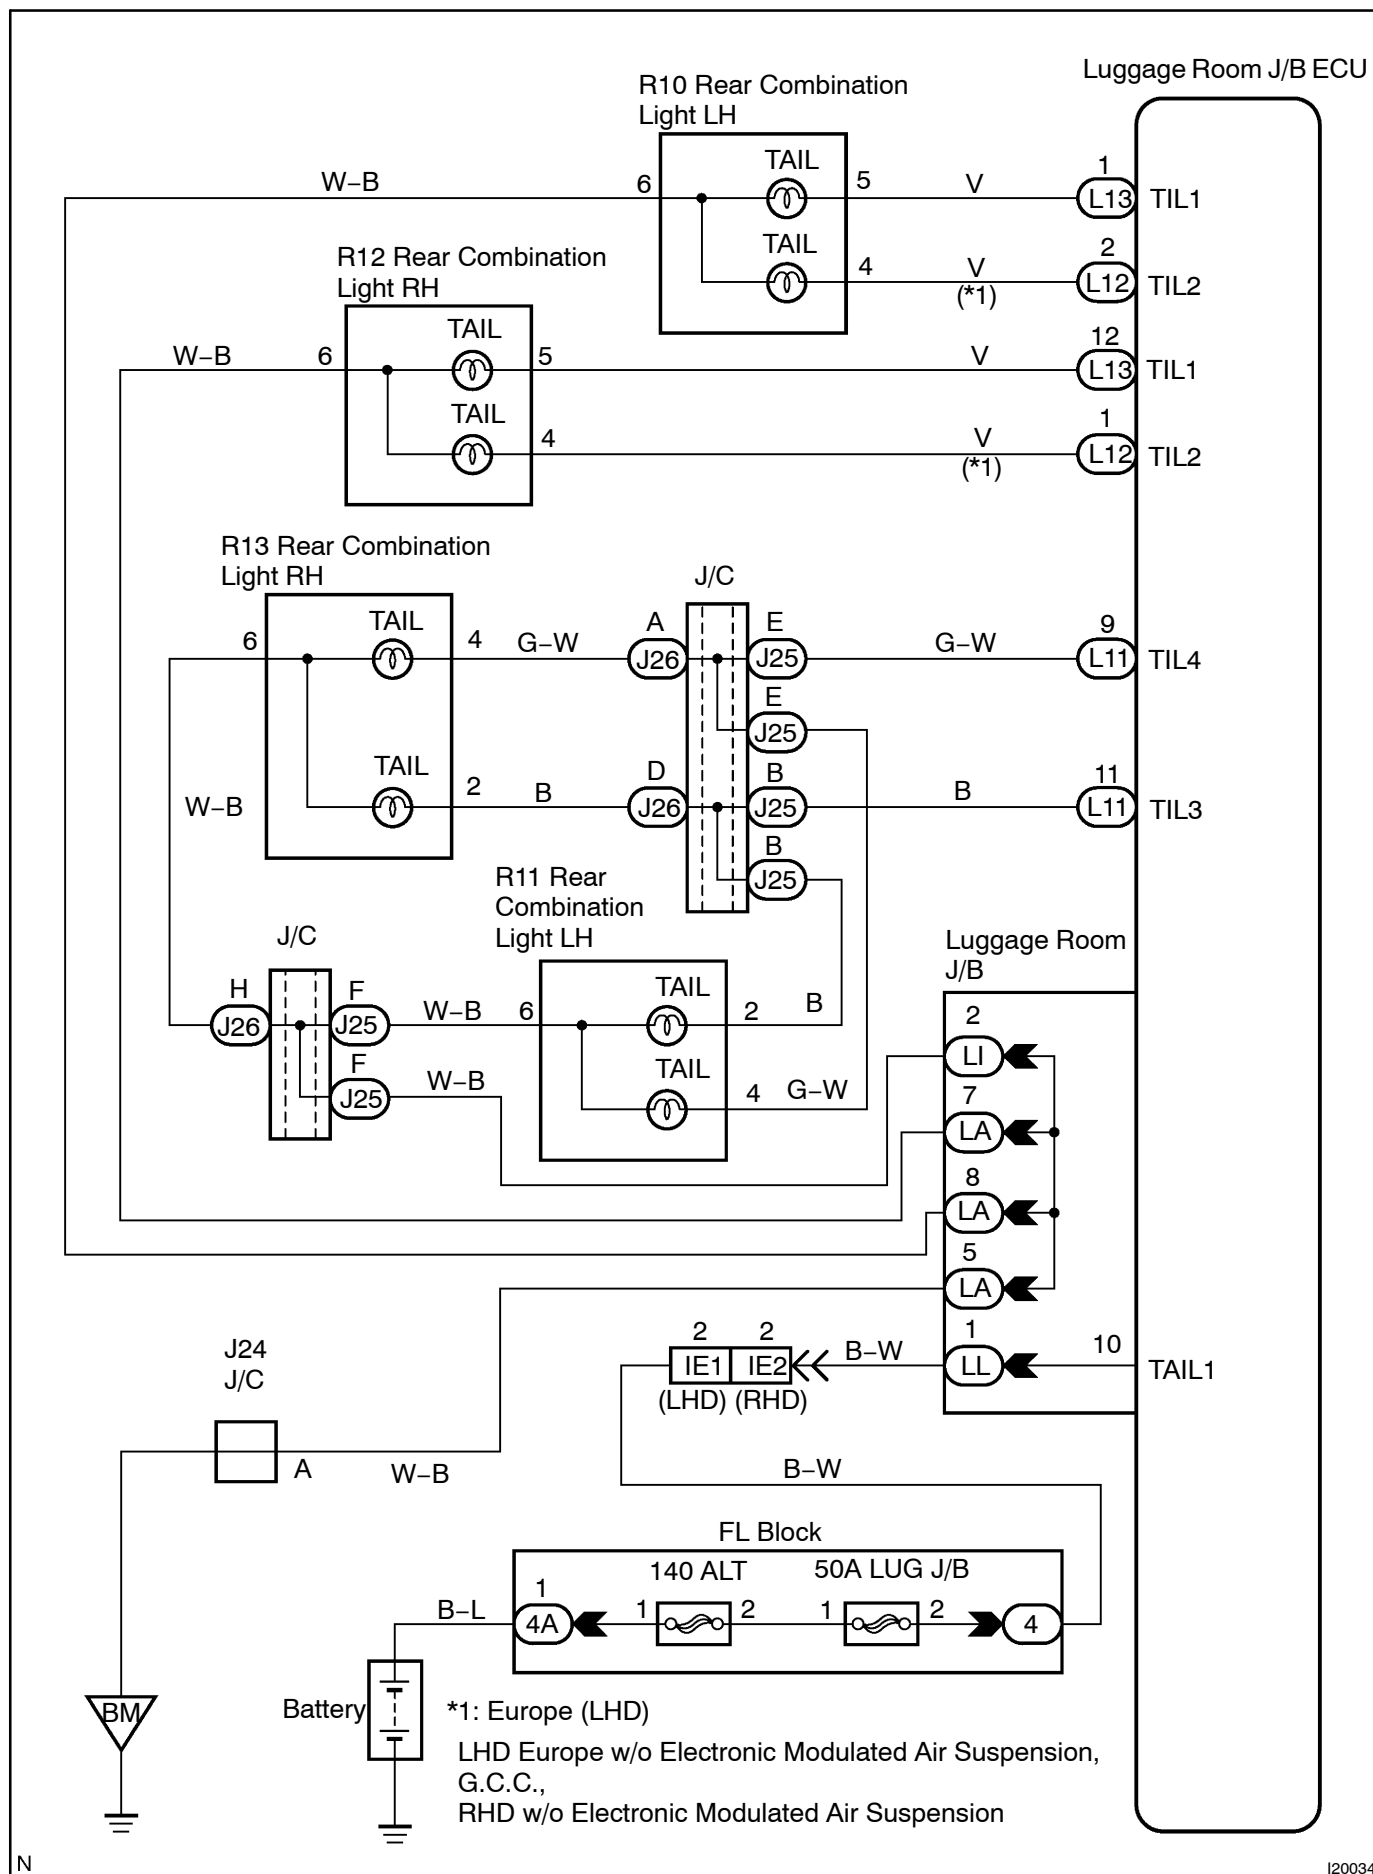

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check taillight using LEXUS hand-held tester. |
|---|--|

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the taillight using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table ([See page DI-1113](#)).

NG

- | | |
|---|------------------------------|
| 2 | Check taillight bulb. |
|---|------------------------------|

NG

Replace the failure light bulb.

OK

- | | |
|---|---|
| 3 | Check wire harness and connector between each taillight and luggage room J/B ECU, battery and each taillight (See page IN-35). |
|---|---|

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1113](#)).