


CIRCUIT DESCRIPTION

Receiving the light control switch TAIL signal from the luggage room J/B ECU makes the licence light come on.

WIRING DIAGRAM

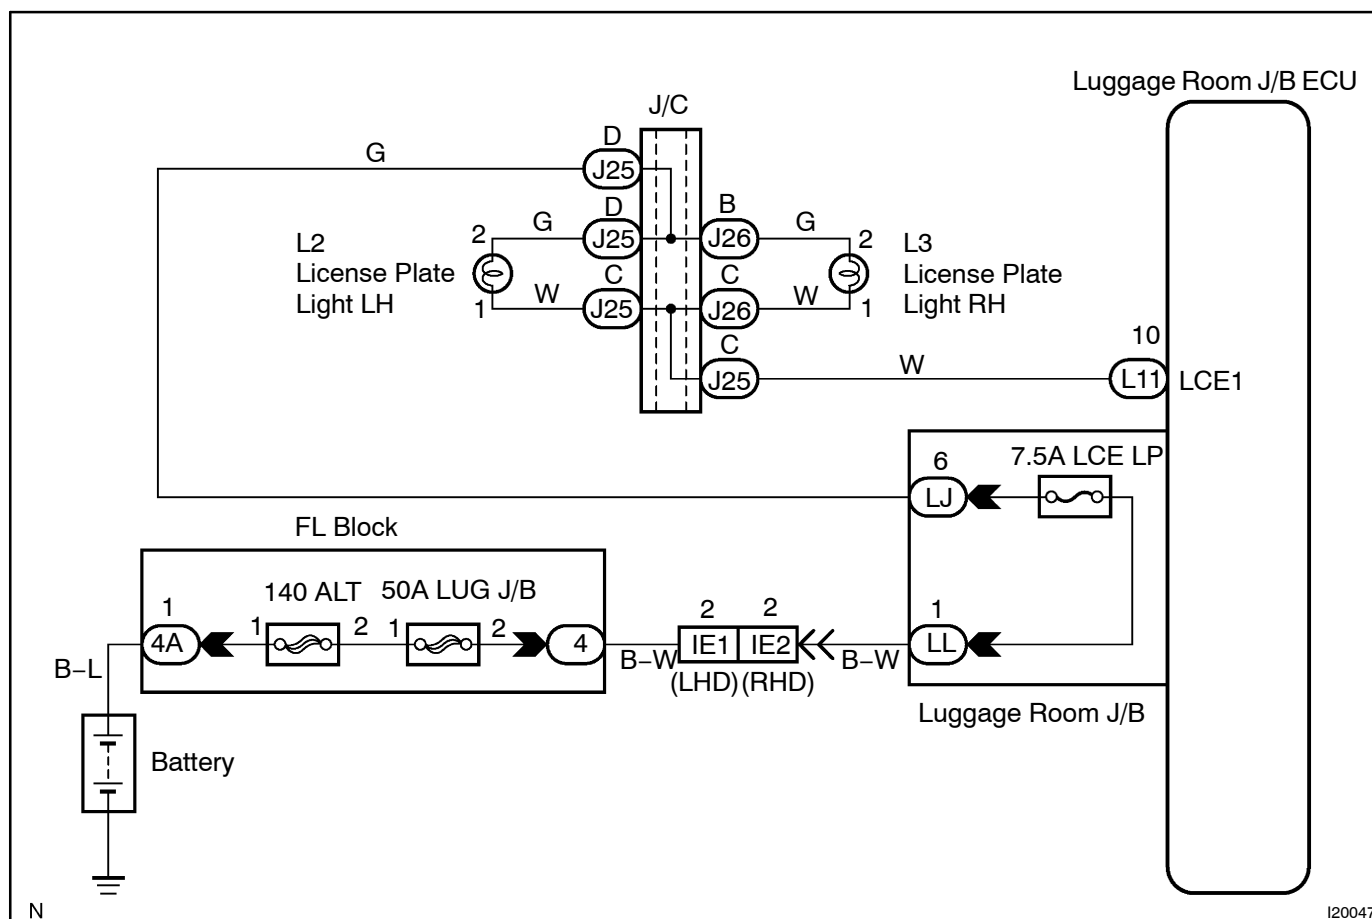

INSPECTION PROCEDURE

1	Check licence plate light using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the licence plate light using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-1113).

NG

2	Check LCE LP fuse.
---	---------------------------

NG

Replace fuse.

OK

3	Check licence plate light bulb.
---	--

NG

Replace the failure light bulb.

OK

4	Check wire harness and connector between each licence plate light and luggage room J/B ECU, battery and each licence plate light (See page IN-35).
---	---

NG

Repair or replace wire harness or connector.
--

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1113).
--