


Luggage Room Light Circuit

CIRCUIT DESCRIPTION

The luggage door courtesy switch goes on when the luggage door is opened and goes off when the luggage door is closed.

WIRING DIAGRAM

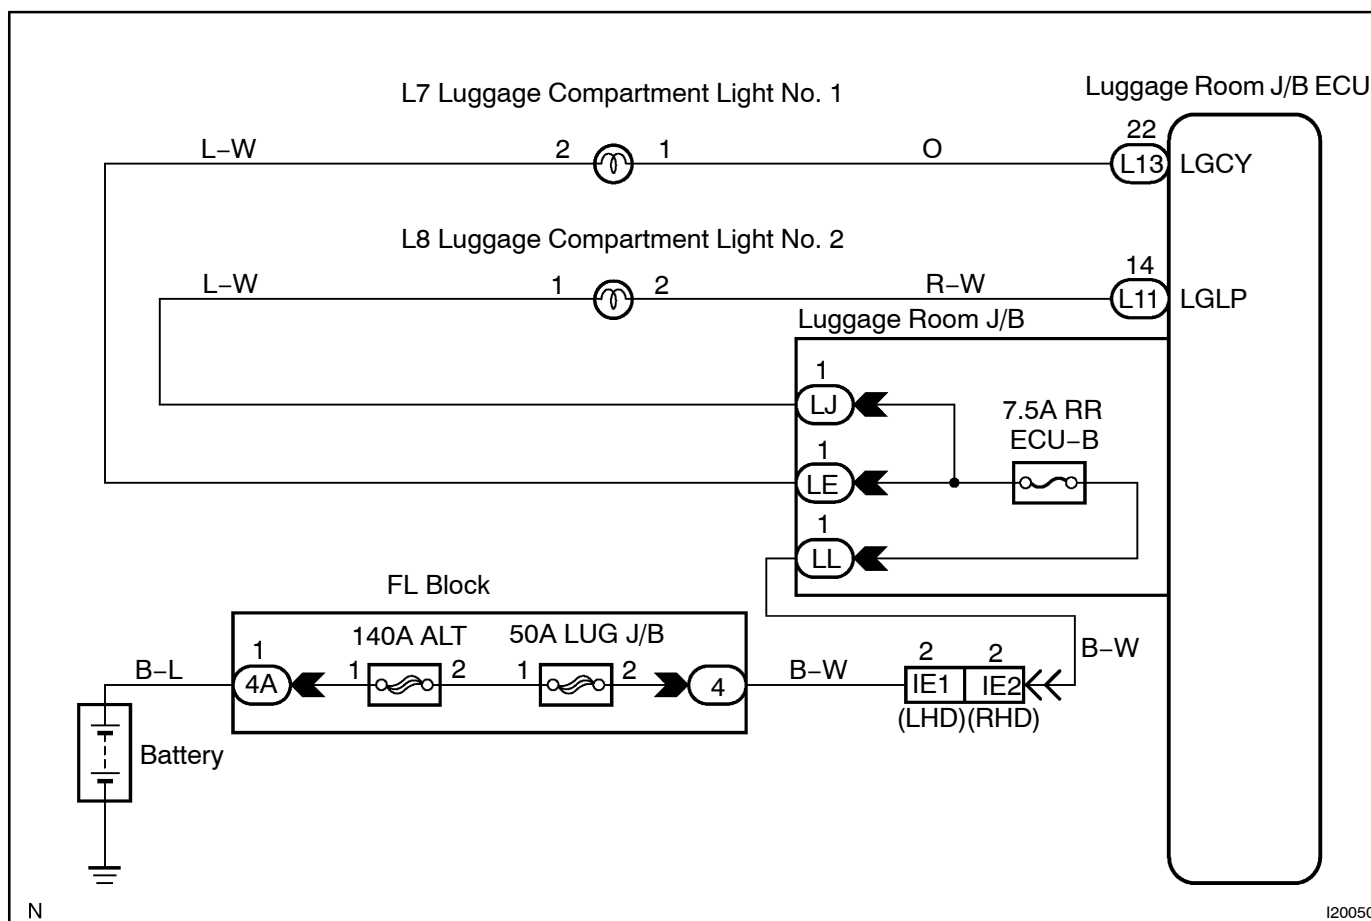

INSPECTION PROCEDURE

1	Check luggage room light using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the luggage room light using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-1113).

NG

2	Check RR ECU-B fuse.
---	-----------------------------

NG

Replace fuse.

OK

3	Check luggage room light bulb.
---	---------------------------------------

NG

Replace the failure light bulb.

OK

4	Check wire harness and connector between luggage room light and luggage room ECU, battery and luggage room light (See page IN-35).
---	---

NG

Repair or replace wire harness or connector.
--

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1113).
--