


CIRCUIT INSPECTION

Power Source Circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the front light ECU.

WIRING DIAGRAM

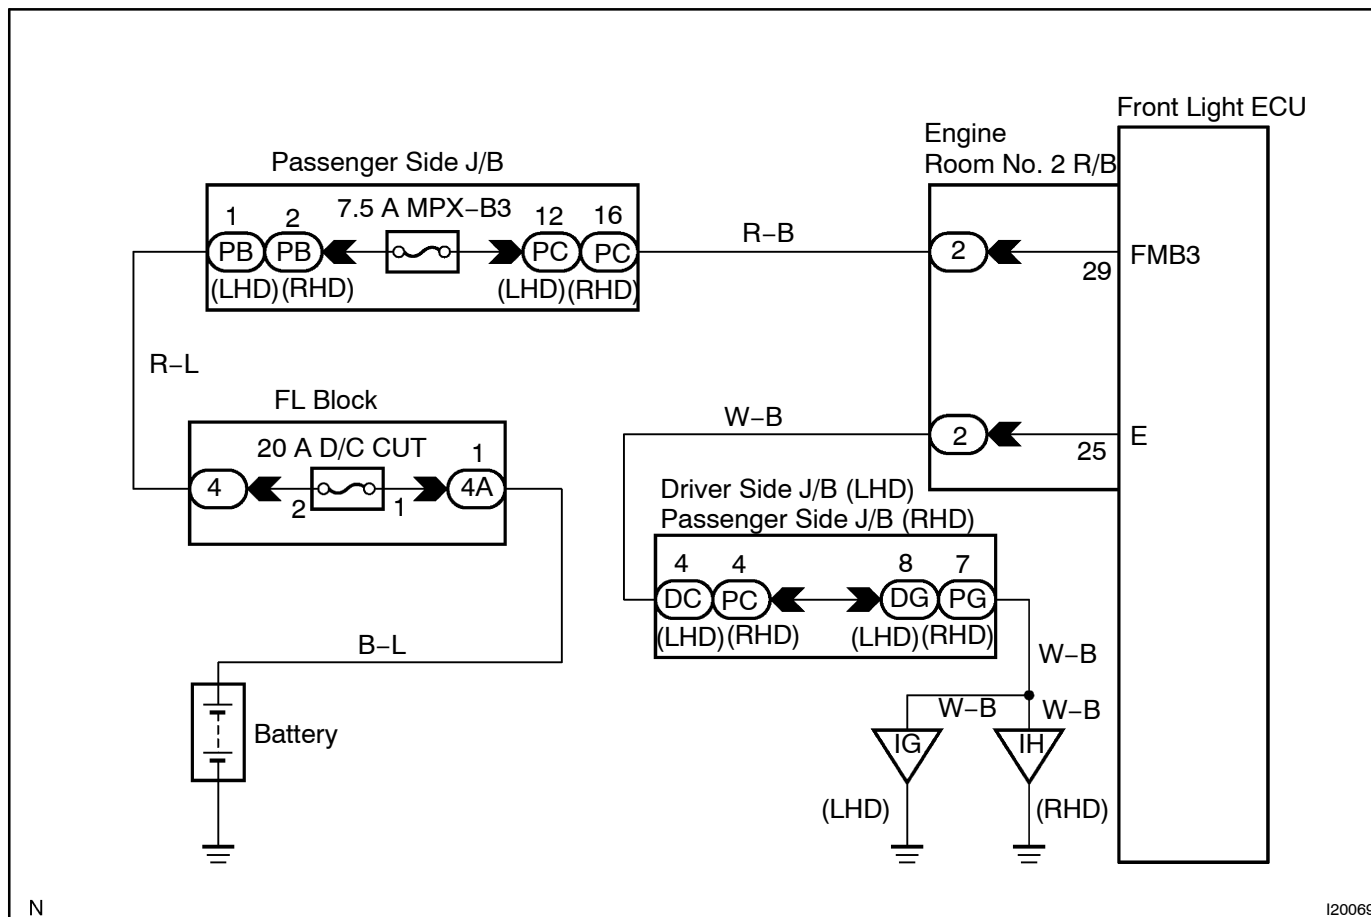

INSPECTION PROCEDURE**1 Check MPX-B3 fuse.****CHECK:**

Check continuity of MPX-B3 fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals FMB3 and E of front light ECU connector.**PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the front light ECU connector.

CHECK:

Measure voltage between terminals FMB3 and E.

OK:

Voltage: 10 – 14V

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1166](#)).

NG

3 Check wire harness and connector between ECU and body ground ([See page IN-35](#)).

NG

Repair or replace wire harness or connector.

OK

Check and repair wire harness and connector between ECU and battery ([See page DI-1113](#)).