


Power source circuit

CIRCUIT DESCRIPTION

This circuit supplies power to operate the driver door ECU.

WIRING DIAGRAM

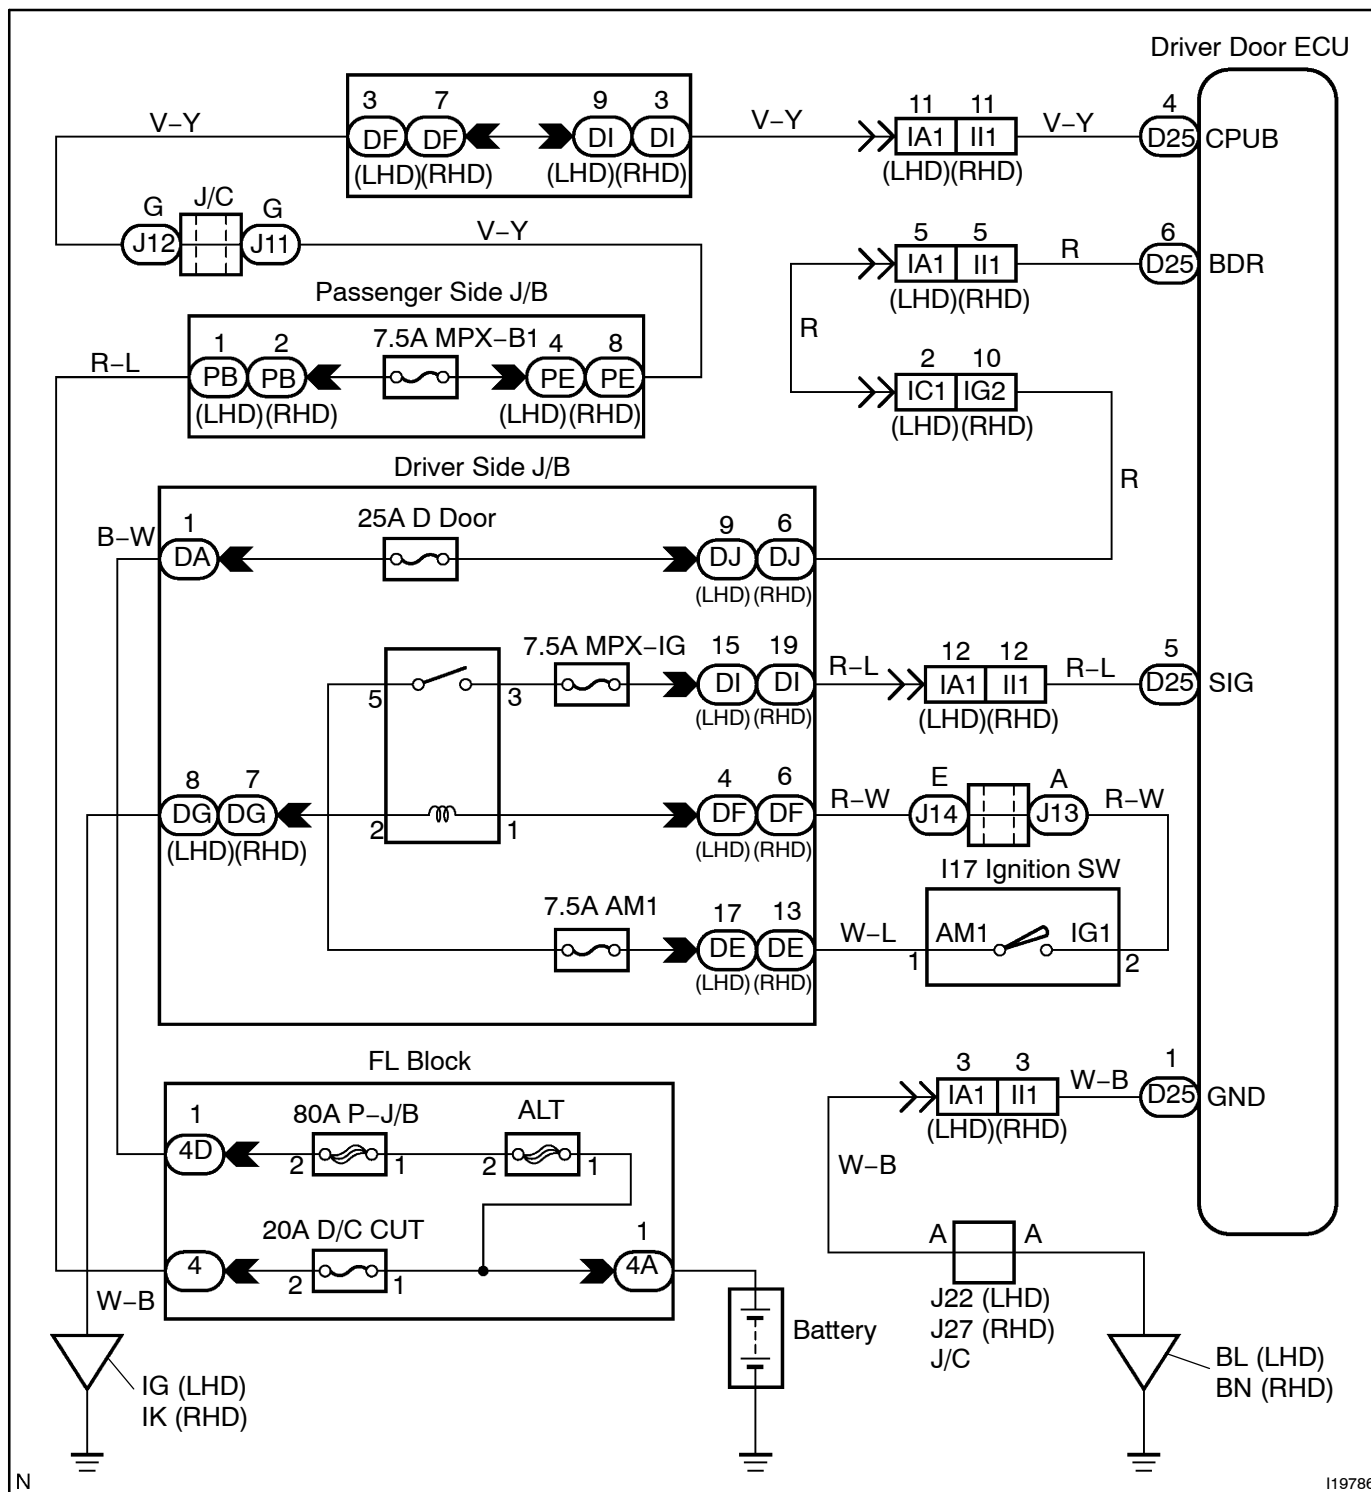

I19786

INSPECTION PROCEDURE

1	Check MPX-B1, MPX-IG and D DOOR fuse.
----------	--

CHECK:

Check continuity of MPX-B1, MPX-IG and D DOOR fuse.

OK:**Continuity**

NG

Replace faulty fuse.

OK

2	Check voltage between terminals BDR, CPUB, SIG and GND of driver door ECU connector.
----------	---

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals SIG and GND.

OK:**Voltage: 10 – 14V****PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the driver door ECU connector.

CHECK:

Measure the voltage between terminals BDR, CPUB and GND.

OK:**Voltage: 10 – 14V**

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1197](#)).

NG

3	Check wire harness and connector between ECU and body ground (See page IN-35).
----------	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1197](#)).