


Double locking switch circuit

CIRCUIT DESCRIPTION

The double lock switch is built in the door lock assembly.

This switch is used to detect the set/unset conditions of the double lock.

WIRING DIAGRAM

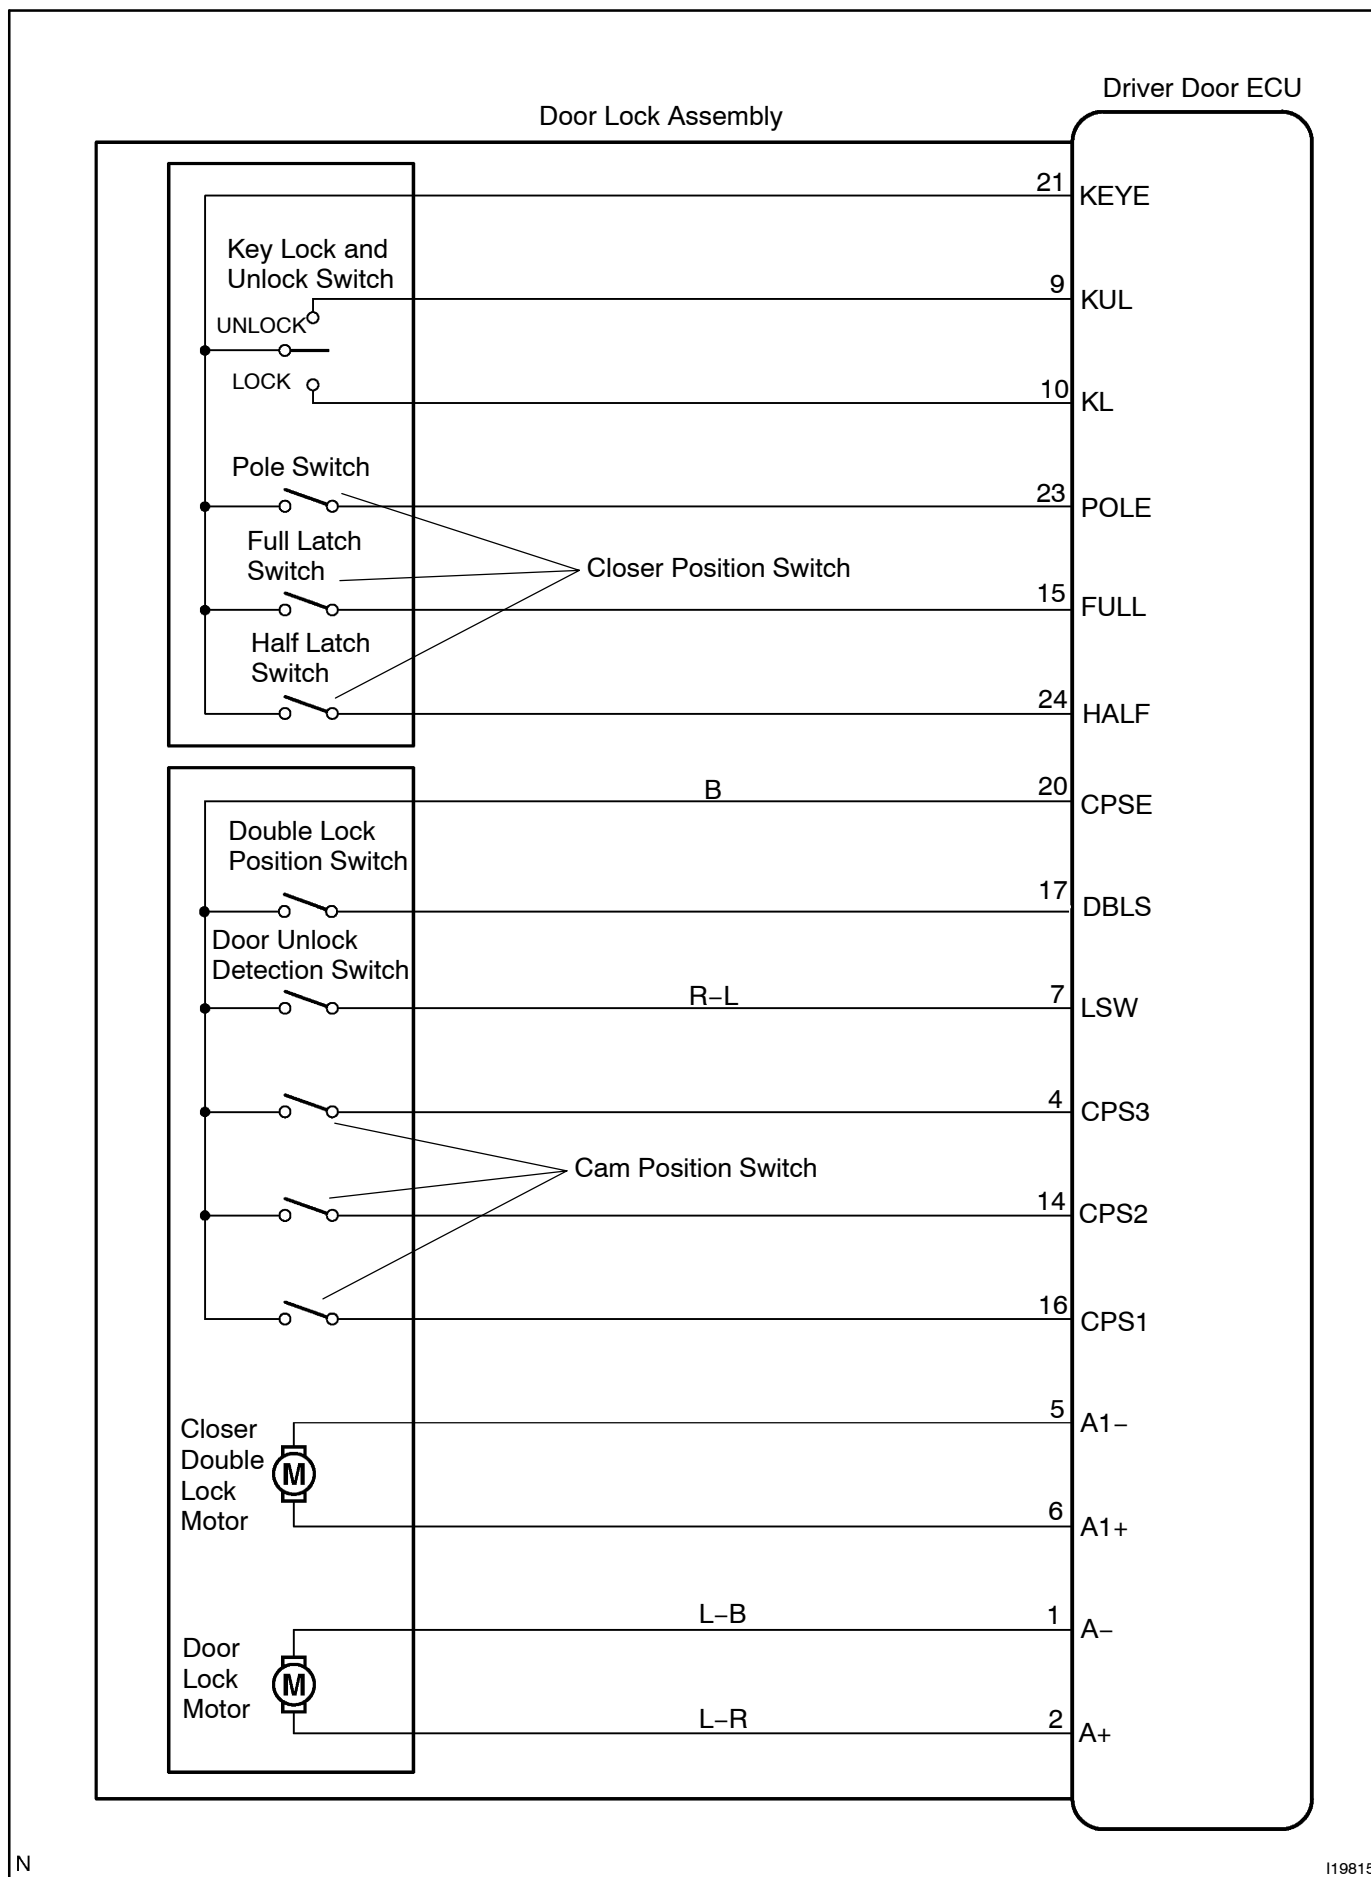

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check double locking switch using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to DLC 3.

CHECK:

Check the double locking switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1197](#)).

NG

2	Check double locking switch (See page BE-102).
---	--

NG

Replace door lock assembly.

OK

3	Check wire harness and connector between double locking switch and driver door ECU (See page IN-35).
---	--

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1197](#)).