


Shoulder belt adjust switch circuit

CIRCUIT DESCRIPTION

The passenger door ECU is detects the conditon of the shoulder belt adjust switch.

WIRING DIAGRAM

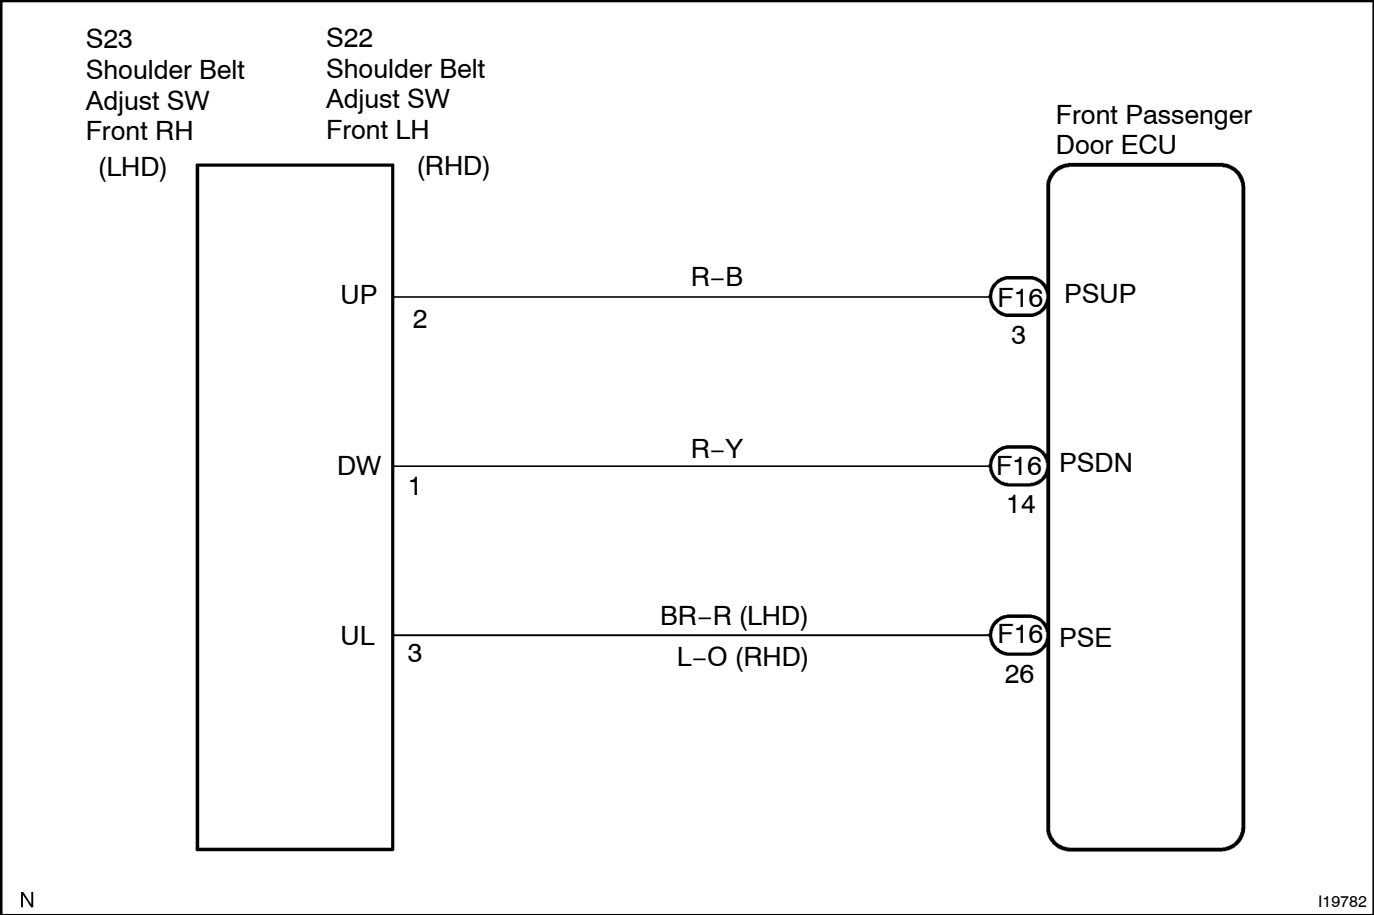

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check shoulder belt adjust switch using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to DLC 3.

CHECK:

Check the shoulder belt adjust switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1271](#)).

NG

2	Check shoulder belt adjust switch (See page BE-148).
---	---

NG

Replace shoulder belt adjust switch.

OK

3	Check wireharness and connector between shoulder belt adjust switch and front passenger door ECU (See page IN-35).
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1271](#)).