

Rear Seat Memory switch circuit (W/ memory)

CIRCUIT DESCRIPTION


Each terminal receives the following switch signals.

M: Memory switch signal

SET: Memorized positions reproduction switch signal

CAN: Cancel switch signal

WIRING DIAGRAM

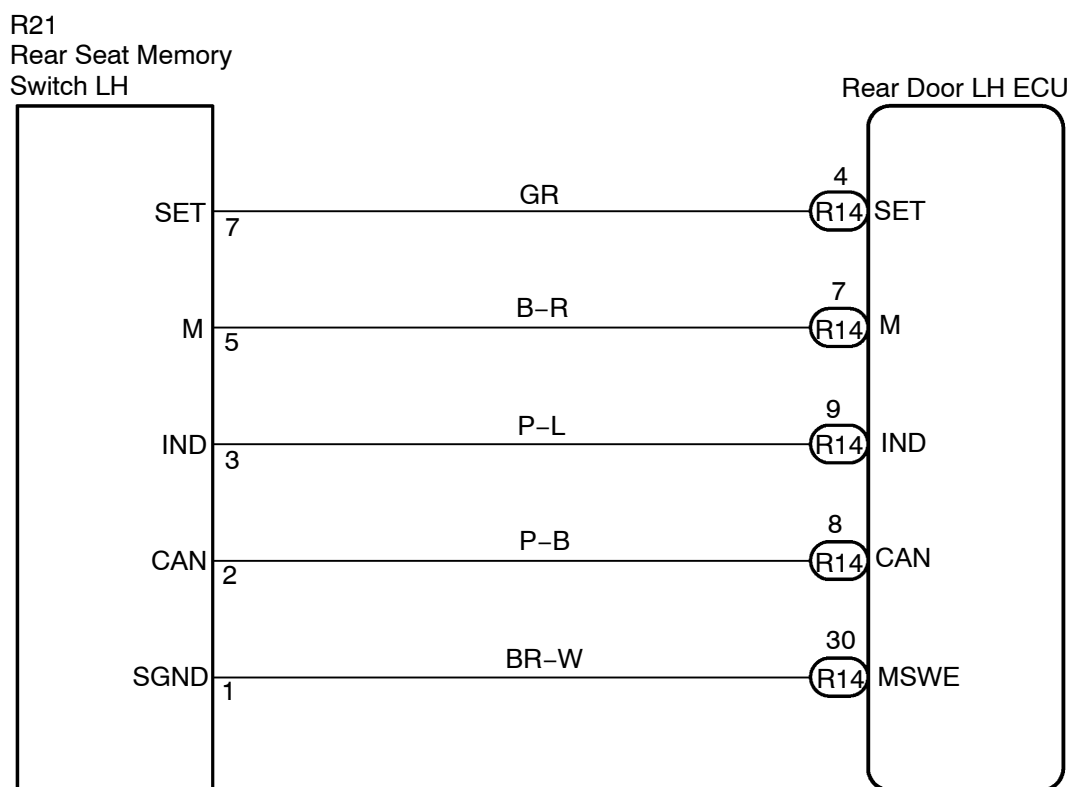

N

I19820

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check memory switch using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to DLC3.

CHECK:

Check that the memory switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1395](#)).

NG

2	Check memory switch (See page BE-143).
---	--

NG

Replace memory switch.

OK

3	Check wireharness and connector between memory switch and rear door LH ECU (See page IN-35).
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1395](#)).