

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See page)	Circuit Inspection	Trouble Area
B2231 (DI-1729)	Front Left Side sensor Malfunction	• Front Left Side sensor • Wire harness
B2232 (DI-1731)	Front Left sensor Malfunction	• Front Left sensor • Wire harness
B2233 (DI-1733)	Front Left Center sensor Malfunction	• Front Left Center sensor • Wire harness
B2234 (DI-1735)	Front Right Center sensor Malfunction	• Front Right Center sensor • Wire harness
B2235 (DI-1737)	Front Right sensor Malfunction	• Front Right sensor • Wire harness
B2236 (DI-1739)	Front Right Side sensor Malfunction	• Front Right Side sensor • Wire harness
B2237 (DI-1741)	Rear Left sensor Malfunction	• Rear Left sensor • Wire harness
B2238 (DI-1743)	Rear Left Center sensor Malfunction	• Rear Left Center sensor • Wire harness
B2239 (DI-1745)	Rear Right Center sensor Malfunction	• Rear Right Center sensor • Wire harness
B2241 (DI-1747)	Rear Right sensor Malfunction	• Rear Right sensor • Wire harness