


ACC Power Source Circuit

CIRCUIT DESCRIPTION


This is the power source for A/C ECU and servomotors, etc.

WIRING DIAGRAM

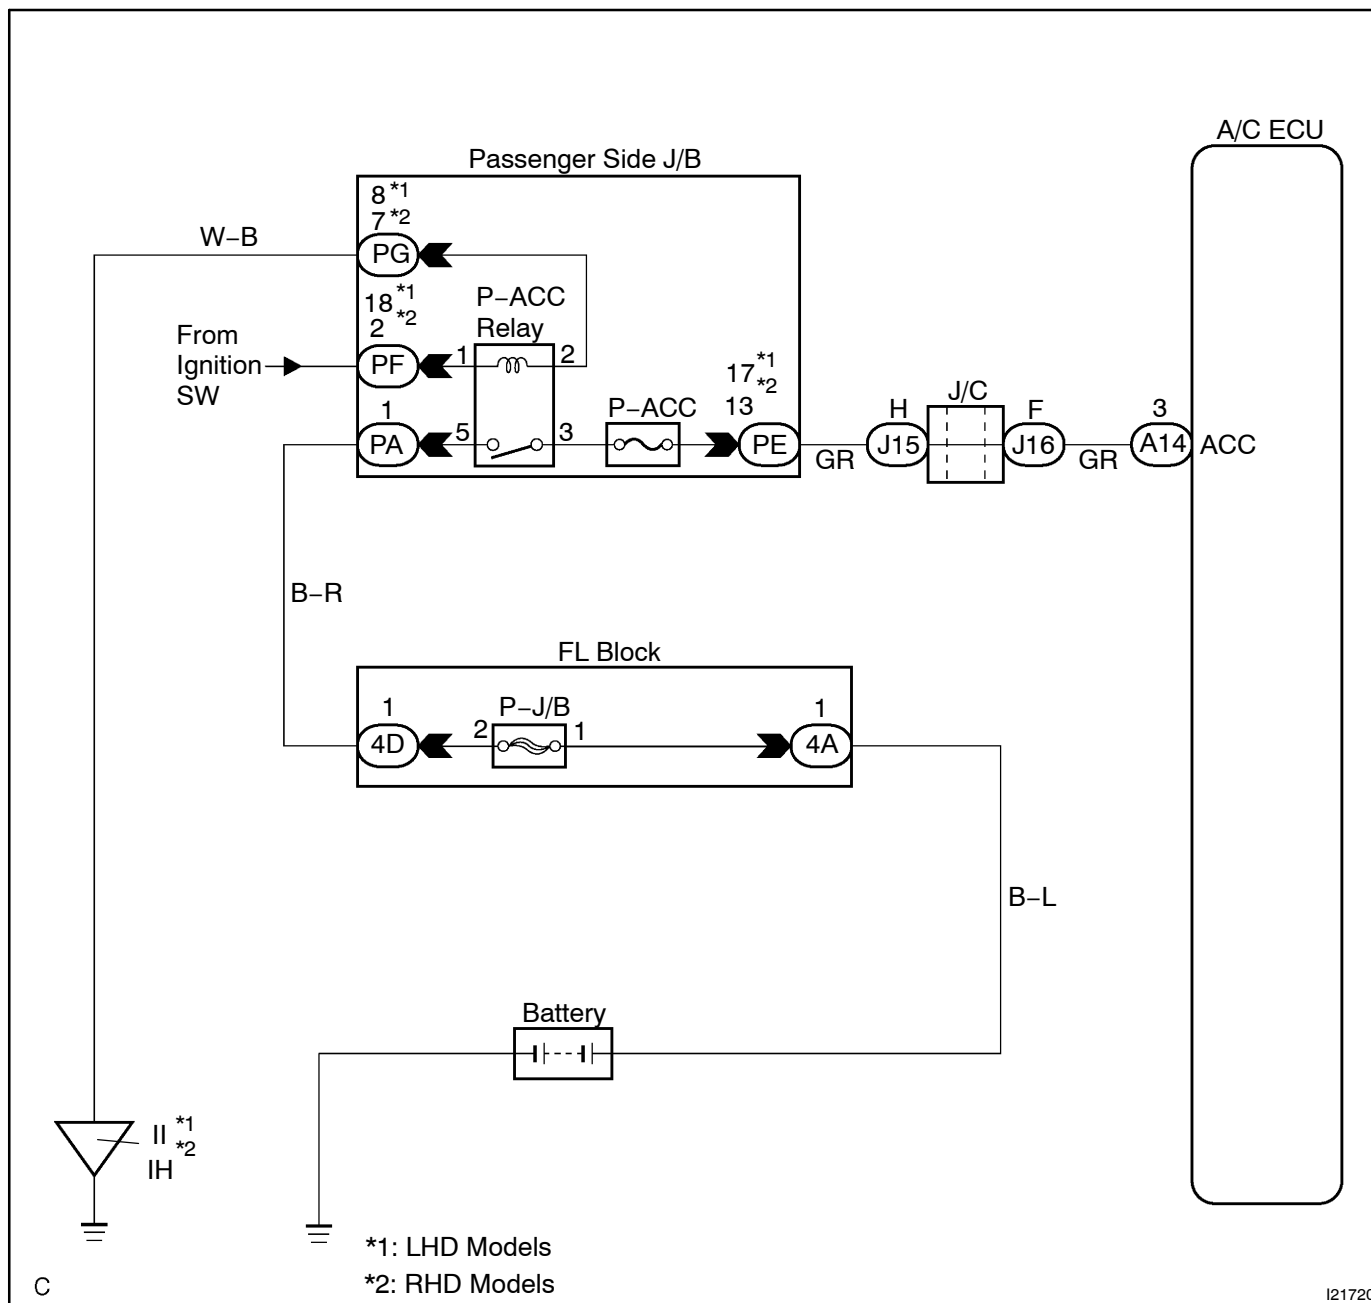

INSPECTION PROCEDURE

1 Check voltage between terminals ACC and GND of A/C ECU connector.

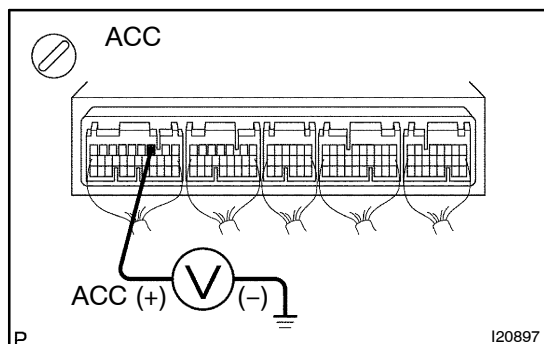

PREPARATION:

Remove A/C ECU with connectors still connected.

CHECK:

- Turn ignition switch to ACC.
- Measure voltage between terminals ACC and GND of A/C ECU.

OK:


Voltage : Battery voltage

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1772](#)).

NG

2 Check P-ACC fuse.

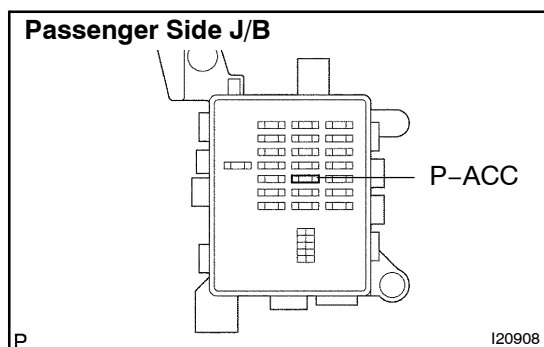

PREPARATION:

Remove P-ACC fuse from passenger side J/B.

CHECK:

Check continuity of P-ACC fuse.

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the P-ACC fuse (See attached wiring diagram).

OK

Check and repair harness and connector between A/C ECU and battery.