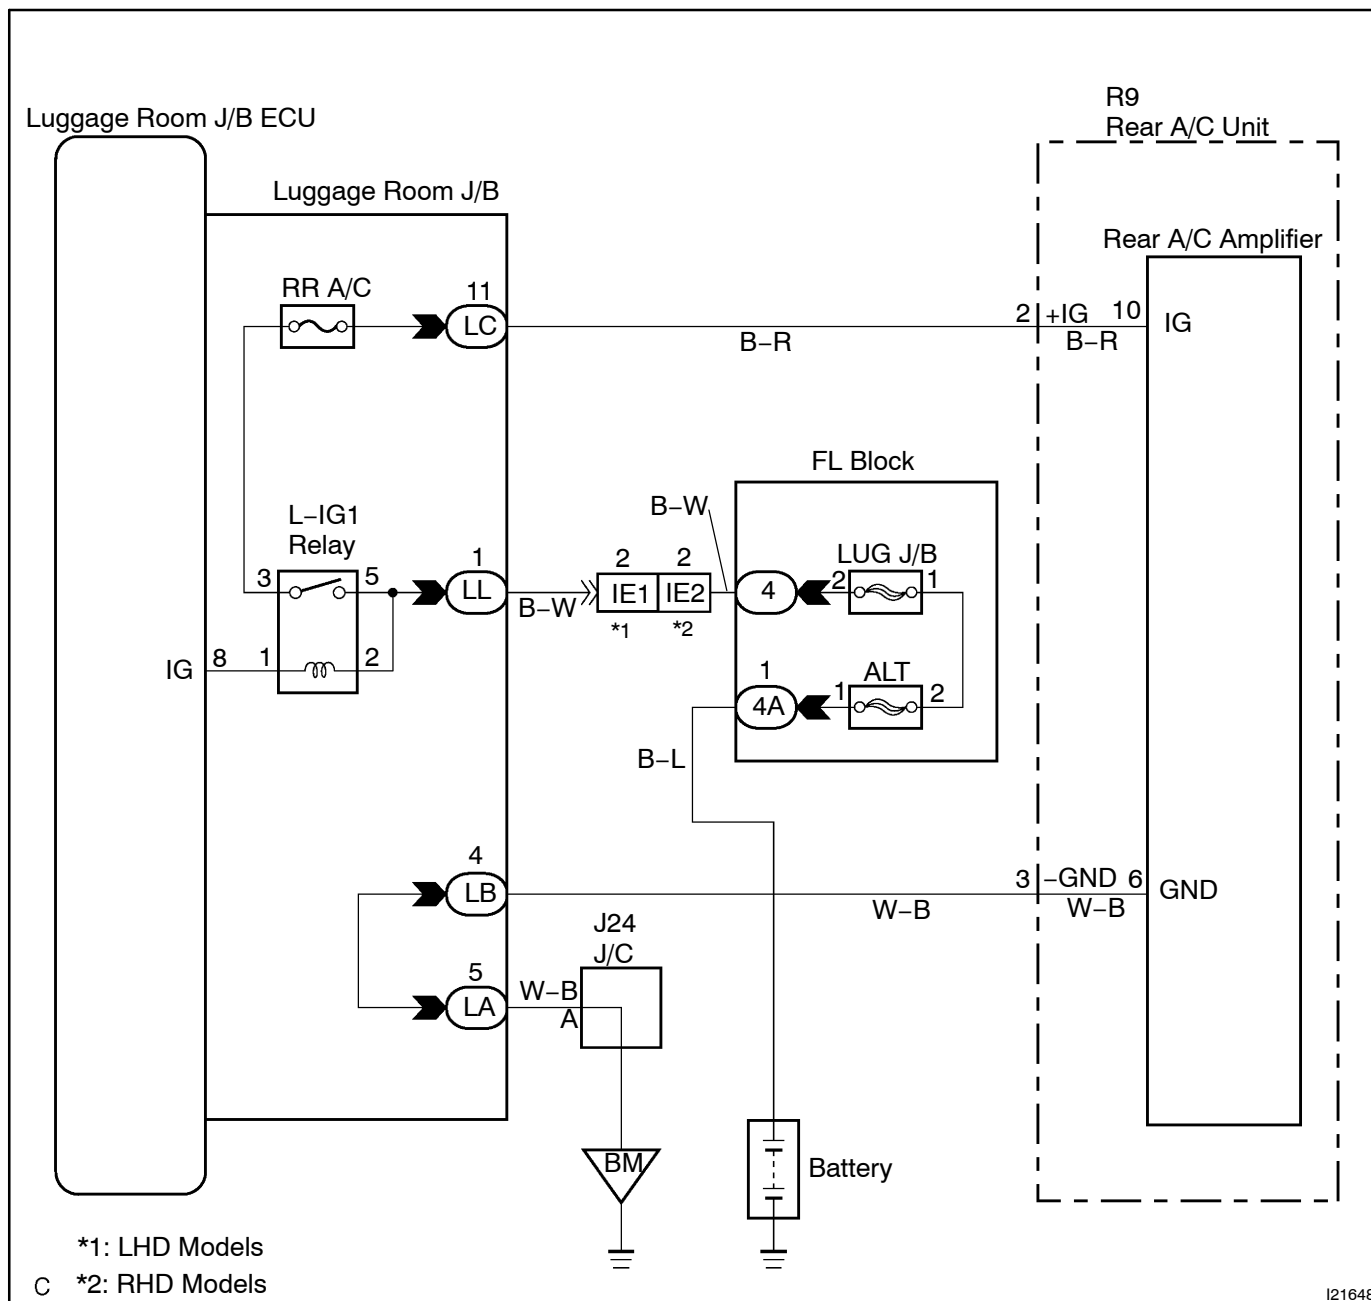


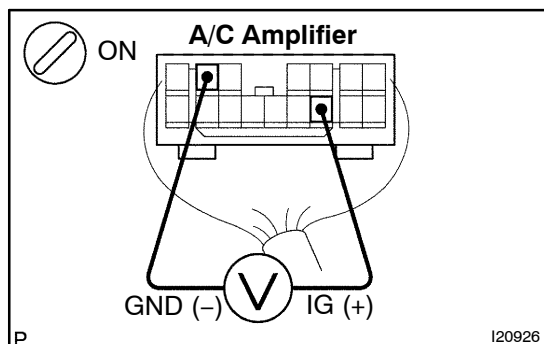
Rear IG Power Source Circuit

CIRCUIT DESCRIPTION

This is the power source for the A/C amplifier and servomotors, etc.

WIRING DIAGRAM



INSPECTION PROCEDURE**1 Check voltage between terminal IG and GND of A/C amplifier connector.****PREPARATION:**

Remove the A/C amplifier with connectors still connected.

CHECK:

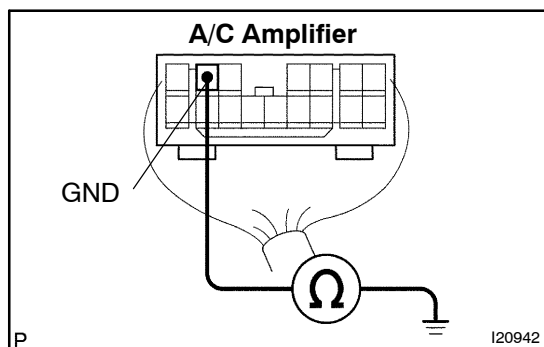
- (a) Turn ignition switch to ON.
- (b) Measure voltage between terminals IG and GND of A/C amplifier.

OK:

Voltage: Battery voltage

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1772](#)).

NG**2 Check continuity between terminal GND of A/C amplifier and body ground.****CHECK:**

Measure resistance between terminal GND of A/C amplifier and body ground.

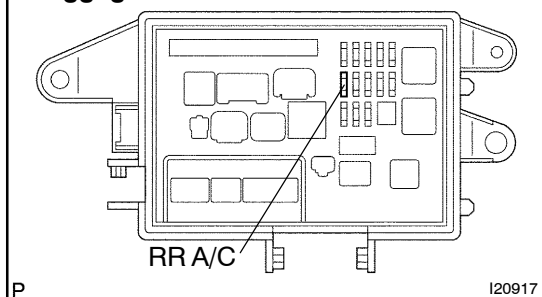
OK:

Resistance: 0 Ω (continuity)

NG

Repair or replace harness or connector.

OK

3 Check RR A/C fuse.**Luggage Room J/B****PREPARATION:**

Remove RR A/C fuse from luggage room J/B.

CHECK:

Check continuity of RR A/C fuse.

OK:

Continuity exists

NG

Check for short in all the harness and components connected to the RR A/C fuse.

OK

Check and repair harness and connector between A/C amplifier and battery.