


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 2 to 14, refer to [page BO-143](#).

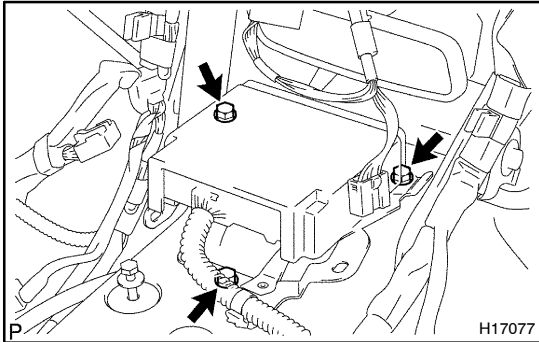

1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Install the airbag sensor assembly with the 3 bolts.
Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)
- (b) Install the airbag wire harness to the airbag sensor assembly bracket.
- (c) Connect the airbag sensor connectors.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
 - Make sure the sensor assembly is installed with the specified torque.
 - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
 - When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
 - After installing, shake the sensor assembly to check that there is no looseness.
2. REMOVE CONSOLE BOX
 3. REMOVE CLUSTER FINISH PANEL
 4. REMOVE CENTER LOWER CLUSTER FINISH PANEL
 5. REMOVE CLUSTER FINISH END PANEL
 6. REMOVE LOWER CLUSTER FINISH PANEL
 7. REMOVE LOWER CENTER FINISH PANEL
 8. REMOVE REAR CONSOLE ARMREST
 9. REMOVE CLUSTER FINISH PANEL
 10. REMOVE NO. 1 SAFETY PAD
 11. REMOVE NO. 1 UNDER COVER
 12. REMOVE FINISH PANEL ASSEMBLY
 13. REMOVE NO. 2 GARNISH
 14. REMOVE NO. 2 UNDER COVER