

INSTALLATION

Installation is in the reverse order of removal ([See page SA-43](#)).

HINT:

After installation, check the front wheel alignment ([See page SA-5](#)).