

INSTALLATION

Installation is in the reverse order of removal ([See page SA-58](#)).

HINT:

After installation, check the speed sensor signal ([See page DI-343](#)).