


- 10. INSTALL ENGINE MOUNTING BRACKET RH**
(a) Install engine mounting bracket (See page [EM-26](#)).
- 11. INSTALL TIMING BELT NO.2 COVER**
(a) Install timing belt No. 2 cover (See page [EM-26](#)).
- 12. INSTALL TIMING BELT NO.1 COVER**
(a) Install timing belt No. 1 cover (See page [EM-26](#)).
- 13. INSTALL CRANKSHAFT PULLEY**
(a) Install crankshaft puller (See page [EM-26](#)).
SST 09213-54015 (91651-60855), 09330-00021
- 14. INSTALL GENERATOR BRACKET NO.2**
(a) Install generator bracket No. 2 (See page [EM-26](#)).
- 15. INSTALL ENGINE MOUNTING STAY NO.2 RH**
(a) Install engine mounting stay No. 2 RH (See page [EM-26](#)).
- 16. INSTALL ENGINE MOVING CONTROL ROD**
(a) Install engine moving control rod (See page [EM-26](#)).
- 17. INSTALL VANE PUMP V BELT**
(a) Install vane pump V belt (See page [EM-6](#)).
- 18. INSTALL V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1**
(a) Remove the V (cooler compressor to crankshaft pulley) belt No. 1 (See page [EM-6](#)).
- 19. INSPECT DRIVE BELT DEFLECTION AND TENSION (REFERENCE)**
- 20. INSTALL COWL TOP PANEL SUB-ASSEMBLY OUTER (See page [FU-16](#))**
- 21. INSTALL WINDSHIELD WIPER LINK ASSEMBLY**
- 22. INSTALL FR WIPER ARM LH**
- 23. INSTALL FR WIPER ARM RH**
- 24. INSTALL FRONT WHEEL RH (See page [CO-7](#))**
- 25. ADD ENGINE COOLANT (See page [CO-1](#))**
- 26. CHECK FOR ENGINE COOLANT LEAKS**

INSPECTION

- 1. INSPECT WATER PUMP ASSEMBLY**
 - (a) Visually check the drain hole for coolant leakage. If leakage is found, replace the water pump.
 - (b) Turn the pulley, and check that the water pump bearing moves smoothly and does not make any noise. If necessary, replace water pump.

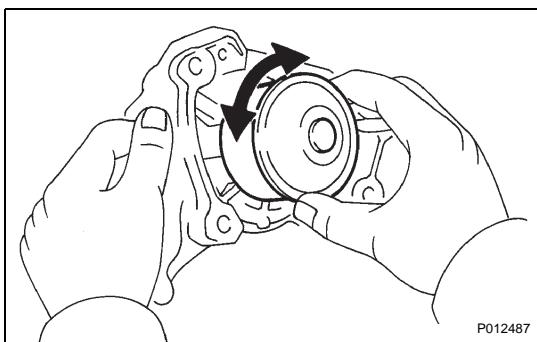

CO