
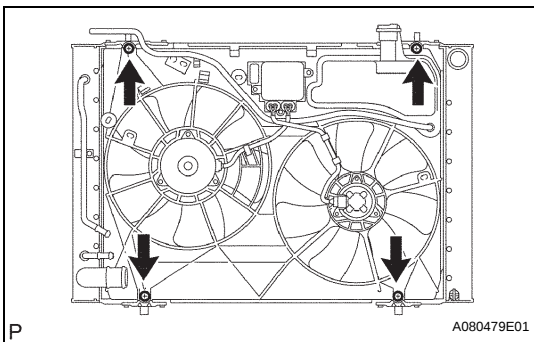
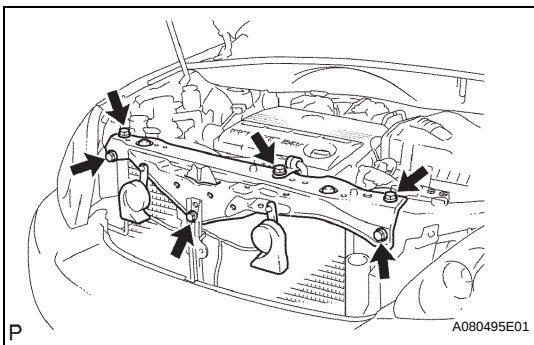
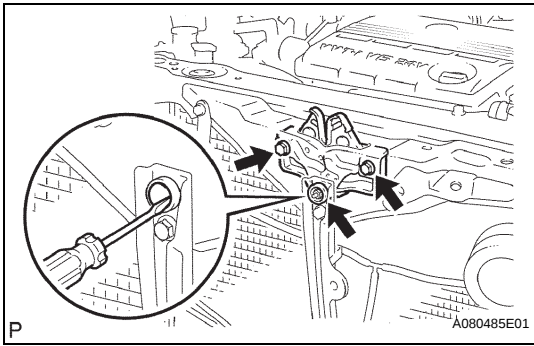


REMOVAL


1. **DRAIN ENGINE COOLANT** (See page [CO-7](#))
2. **REMOVE ENGINE UNDER COVER NO.1**
3. **REMOVE AIR CLEANER INLET NO.2**
(a) Remove air cleaner inlet No. 2 (See page [ST-5](#)).
4. **REMOVE AIR CLEANER ASSEMBLY**
(a) Remove air cleaner assembly (See page [ST-5](#)).
5. **REMOVE AIR CLEANER BRACKET**
(a) Remove air cleaner bracket (See page [ST-5](#)).
6. **REMOVE AIR CLEANER INLET NO.1**
(a) Remove air cleaner inlet No. 1 (See page [ST-5](#)).
7. **DISCONNECT RADIATOR HOSE INLET**
8. **DISCONNECT RADIATOR HOSE OUTLET**
9. **DISCONNECT OIL COOLER INLET TUBE NO.1**
10. **DISCONNECT OIL COOLER OUTLET TUBE NO.1**
11. **SEPARATE HOOD LOCK ASSEMBLY**
(a) Using a screw drive, remove the cap.
(b) Remove the 2 bolts and nut, and separate the hood lock.

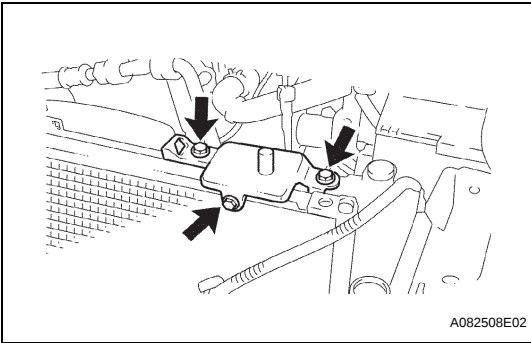


12. **REMOVE RADIATOR SUPPORT SUB-ASSEMBLY UPPER**
(a) Remove the bolt and separate the suction tube bracket.
(b) Disconnect the horn connectors.
(c) Remove the 5 bolts and the radiator upper support.
13. **REMOVE FAN SHROUD**
(a) Disconnect the engine coolant reservoir hose.
(b) Disconnect the fan motor connectors.
(c) Remove the 4 bolts and the fan shroud.

**14. REMOVE RADIATOR SUPPORT SUB-ASSEMBLY LH**

- (a) Remove the 3 bolts and the radiator support upper LH.

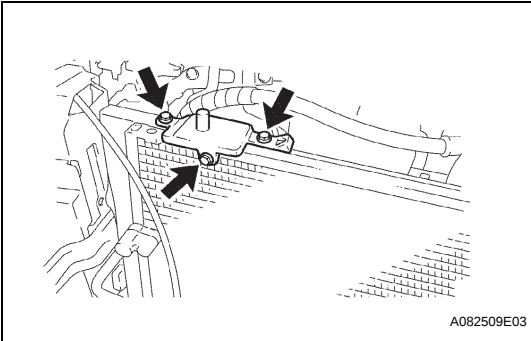**15. REMOVE RADIATOR SUPPORT SUB-ASSEMBLY RH**

- (a) Remove the 3 bolts and the radiator support upper RH.

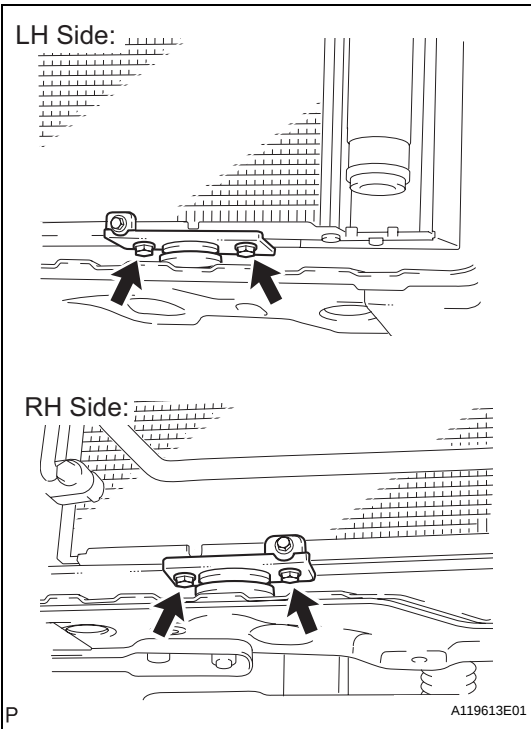**16. REMOVE NO.2 RADIATOR ASSEMBLY**

- (a) Remove the 4 bolts.
(b) Lift radiator, then remove it.