

## INSTALLATION

1. **INSTALL NO.2 RADIATOR ASSEMBLY**  
Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)
2. **ADJUST RADIATOR SUPPORT SUB-ASSEMBLY LH**  
Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)
3. **INSTALL RADIATOR SUPPORT SUB-ASSEMBLY RH**  
Torque: 5.0 N\*m (51 kgf\*cm, 44 in.\*lbf)
4. **INSTALL FAN SHROUD**  
Torque: 13.5 N\*m (138 kgf\*cm, 10 ft.\*lbf)
5. **INSTALL RADIATOR SUPPORT SUB-ASSEMBLY UPPER**
  - (a) Install the 5 bolts and the radiator upper support.  
**NOTICE:**  
Secure the member with retaining claws of the radiator upper support.  
Torque: 7.8 N\*m (71 kgf\*cm, 62 in.\*lbf)
  - (b) Connect the horn connector.
  - (c) Install the suction tube bracket with the bolt.  
Torque: 9.8 N\*m (100 kgf\*cm, 7 ft.\*lbf)
6. **INSTALL HOOD LOCK ASSEMBLY**  
Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)
7. **INSTALL AIR CLEANER INLET NO.1**
  - (a) Install air cleaner inlet No. 1 (See page [ST-12](#)).
8. **INSTALL AIR CLEANER BRACKET**
  - (a) Install air cleaner bracket (See page [ST-12](#)).
9. **INSTALL AIR CLEANER ASSEMBLY**
  - (a) Install air cleaner assembly (See page [ST-12](#)).
10. **INSTALL AIR CLEANER INLET NO.2**
  - (a) Install all cleaner inlet No. 2 (See page [ST-12](#)).
11. **ADJUST HOOD SUB-ASSEMBLY (ENGINE HOOD / HOOD / HOOD / ADJUSTMENT)** (See page [ED-93](#))
12. **ADD ENGINE COOLANT** (See page [CO-7](#))
13. **CHECK FOR ENGINE COOLANT LEAKS** (See page [CO-1](#))