



EFI RELAY

INSPECTION

- 1. **INSPECT EFI RELAY**
 - (a) Continuity inspection.
 - (1) Using an ohmmeter, check for resistance between the terminals.

Resistance

Terminals	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Apply battery voltage terminals 1 and 2)