

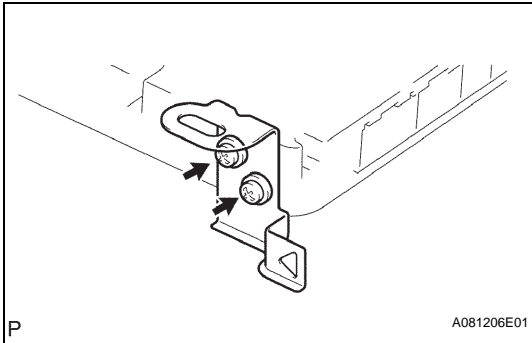


REMOVAL


1. REMOVE FRONT DOOR SCUFF PLATE RH (See page [IR-6](#))
2. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO.2 (See page [IP-13](#))
3. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))
4. REMOVE ECM
 - (a) Remove the 2 wire harness clamps.
 - (b) Disconnect the 5 ECM connectors.
 - (c) Remove the 2 nuts, and then remove the ECM.

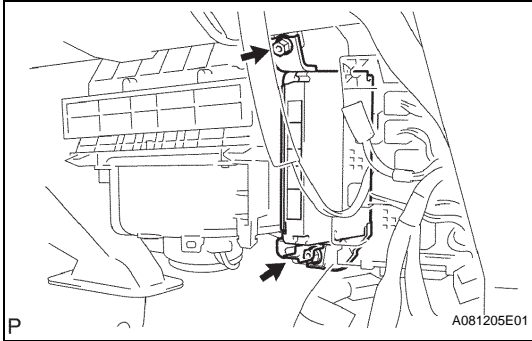

- (d) Remove the 2 screws, and then remove the wire harness clamp bracket.

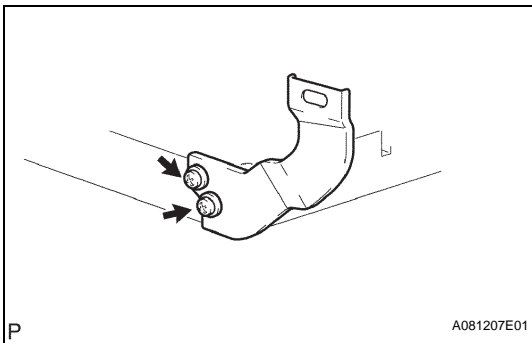

5. REMOVE ECM BRACKET
 - (a) Remove the 2 screws, and then remove the ECM bracket.

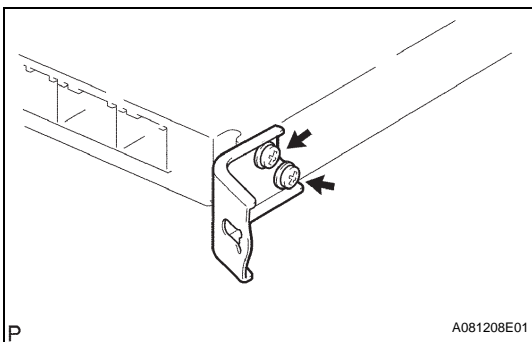

6. REMOVE ECM BRACKET NO.2
 - (a) Remove the 2 screws, and then remove the ECM bracket.

INSTALLATION

1. INSTALL ECM BRACKET NO.2
2. INSTALL ECM BRACKET
3. INSTALL ECM
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
4. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY
5. INSTALL INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY NO.2
6. INSTALL FRONT DOOR SCUFF PLATE RH