


ACCELERATOR PEDAL ROD

COMPONENTS

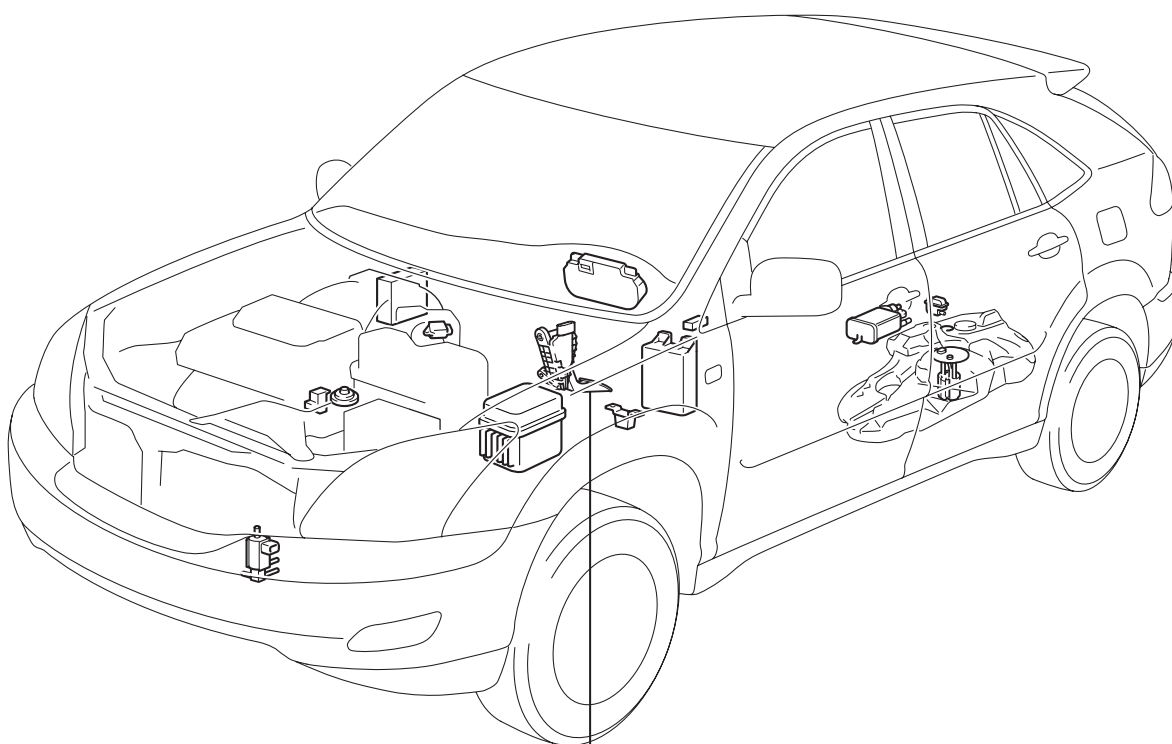

ACCELERATOR PEDAL ROD ASSEMBLY


(ACCELERATOR PEDAL POSITION SENSOR)

ON-VEHICLE INSPECTION

1. INSPECT ACCELERATOR PEDAL POSITION SENSOR

- (a) After turning the ignition switch ON, check that the voltage of the throttle position sensor of the CURRENT DATA is within the standard value.

Standard voltage:
0.6 to 1.0 V

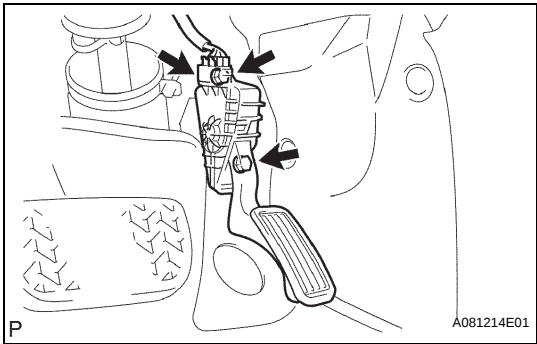

REMOVAL

1. REMOVE ACCELERATOR PEDAL ROD ASSEMBLY

- (a) Disconnect the accelerator position sensor connector.
- (b) Remove the 2 bolts, and then remove the accelerator pedal rod.


ES

INSPECTION

1. INSPECT ACCELERATOR PEDAL ROD ASSEMBLY

- (a) Resistance inspection
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Resistance

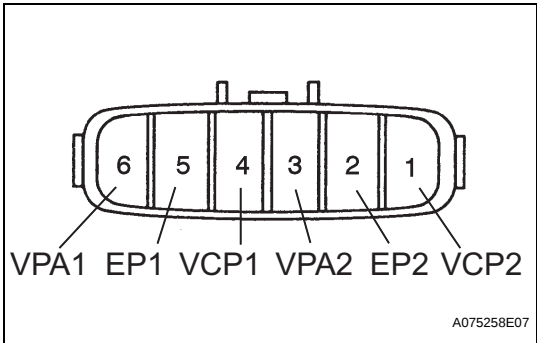

Symbols (Terminal No.)	Resistance
VPA2 (3) - EP1 (5)	5.0 kΩ or less
VPA1 (6) - EP2 (2)	5.0 kΩ or less
VCP1 (4) - EP1 (5)	2.25 to 4.75 kΩ
VCP2 (1) - EP2 (2)	2.25 to 4.75 kΩ