



# ENGINE COOLANT TEMPERATURE SENSOR

## INSPECTION

### 1. INSPECT E.F.I. ENGINE COOLANT TEMPERATURE SENSOR

#### (a) Resistance inspection.

- (1) Using an ohmmeter, measure the resistance between each terminals.

#### Resistance:

Approx. 20°C (68°F):

2.32 to 2.59 kΩ

Approx. 80°C (176°F):

0.310 to 0.326 kΩ

#### NOTICE:

In case of checking the water temperature sensor in the water, be careful not to allow water to go into the terminals, and after checking, dry the sensor.

ES