

FRONT PASSENGER SEAT BELT WARNING LIGHT

INSPECTION

1. INSPECT INTEGRATION CONTROL & PANEL (W/O NAVIGATION SYSTEM)

- (a) Disconnect the C4 connector.
- (b) Measure the voltage and resistance according to the value(s) in the table below.

Standard voltage

Tester Connection	Condition	Specified Condition
C4-1 (+B) - Body ground	Always	10 to 14 V
C4-2 (ACC) - Body ground	Ignition switch ACC	10 to 14 V
C4-9 (IG) - Body ground	Ignition switch ON	10 to 14 V
C4-13 (PAON) - Body ground	Ignition switch ON	10 to 14 V

Standard resistance

Tester Connection	Condition	Specified Condition
C4-7 - Body ground	Always	Below 1 Ω

2. INSPECT MULTI-DISPLAY (W/ NAVIGATION SYSTEM)

- (a) Disconnect the M5 connector.
- (b) Measure the voltage and resistance according to the value(s) in the table below.


Standard voltage

Tester Connection	Condition	Specified Condition
M5-10 (IG) - Body ground	Ignition switch ON	10 to 14 V
M5-11 (ACC) - Body ground	Ignition switch ACC	10 to 14 V
M5-9 (LIN) - Body ground	Ignition switch ON, sit on the passenger seat, seat belt is unfastened	10 to 14 V

Standard resistance


Tester Connection	Condition	Specified Condition
M5-3 - Body ground	Always	Below 1 Ω

C4

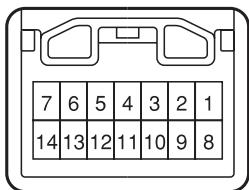

B115739E01

M5

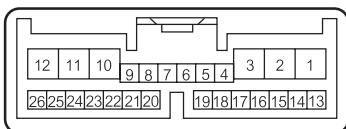

H

B111225E01

SB