





# FRONT SEAT INNER BELT ASSEMBLY

## COMPONENTS

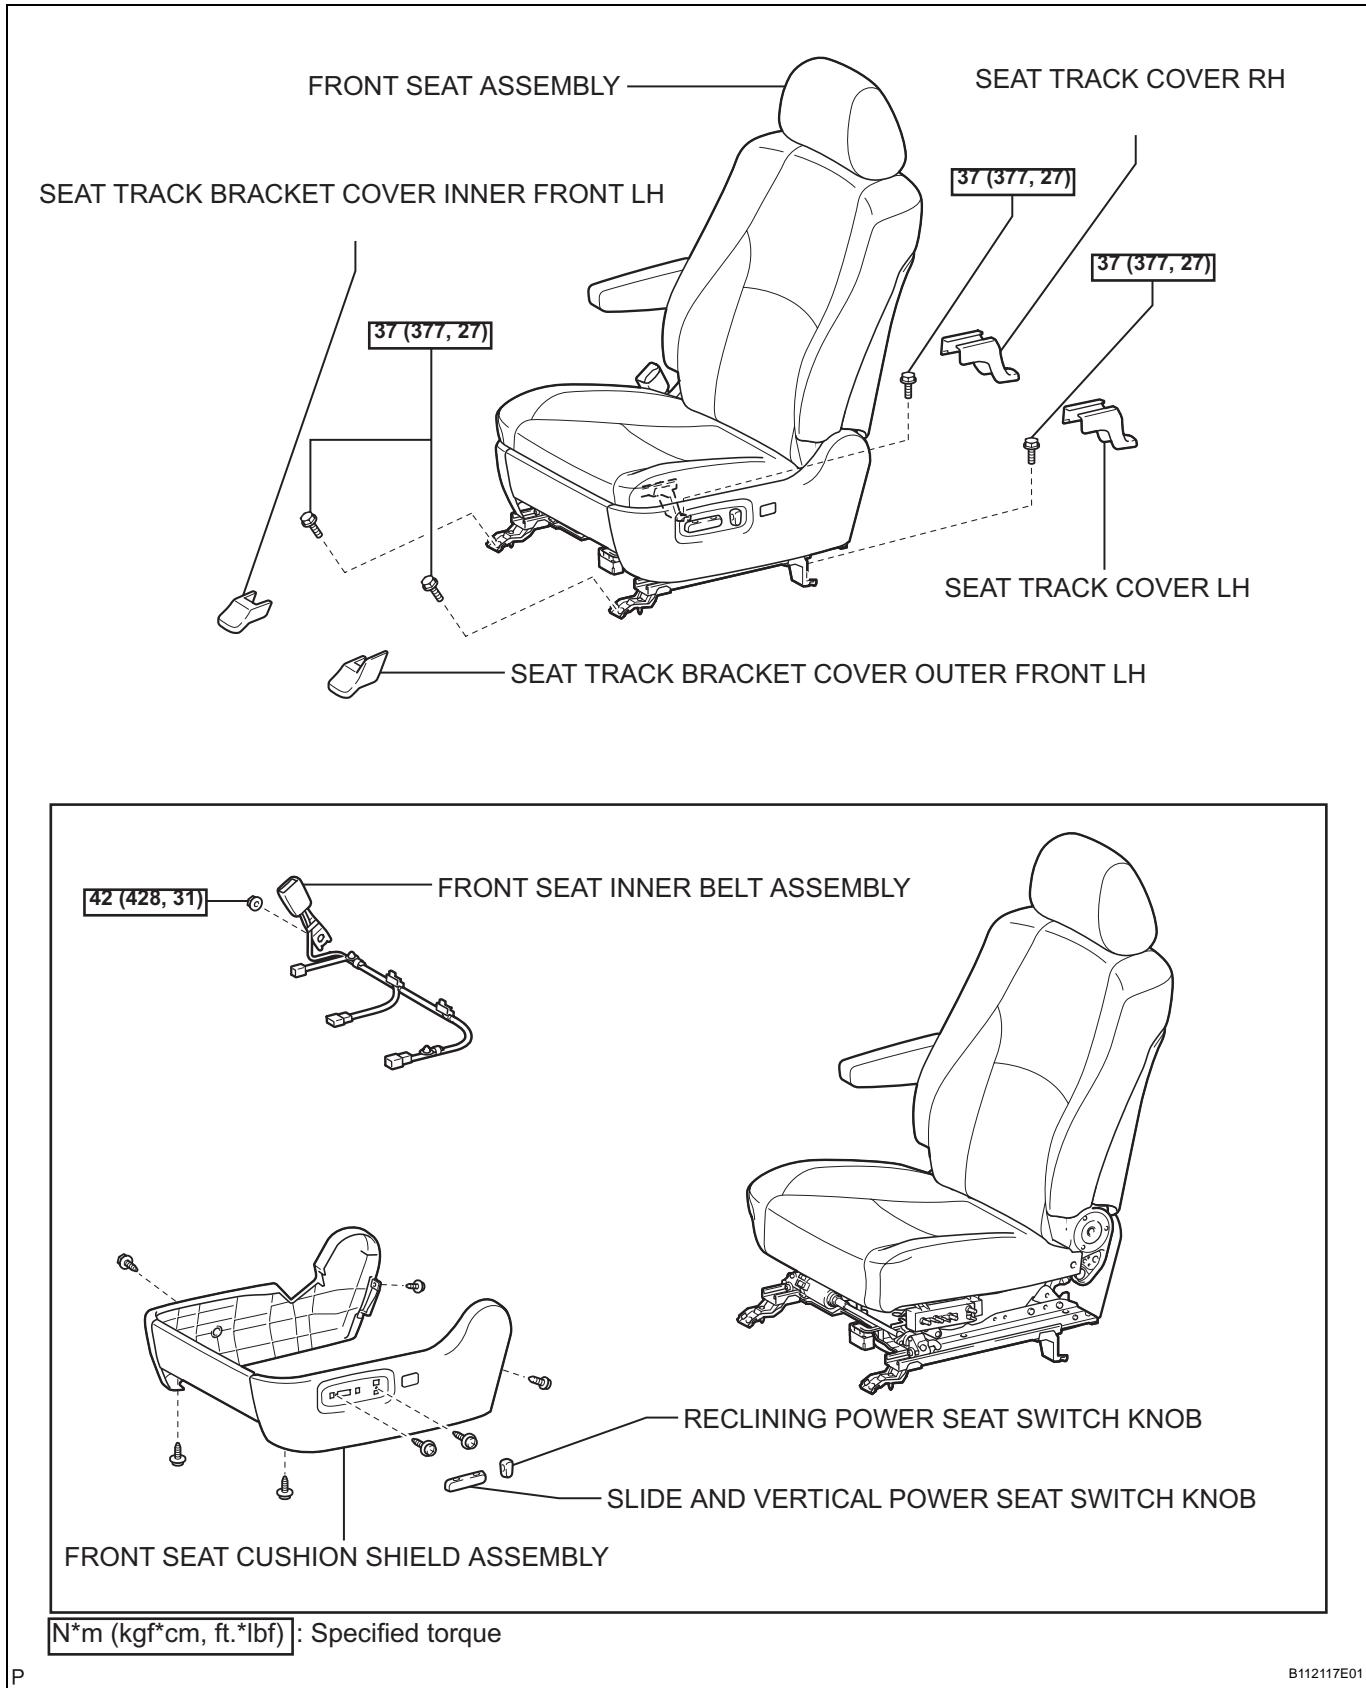

## REMOVAL

1. REMOVE SEAT TRACK BRACKET COVER OUTER FRONT LH (See page [SE-38](#))
2. REMOVE SEAT TRACK BRACKET COVER INNER FRONT LH (See page [SE-38](#))
3. REMOVE SEAT TRACK COVER LH (See page [SE-38](#))
4. REMOVE SEAT TRACK COVER RH (See page [SE-38](#))
5. REMOVE FRONT SEAT ASSEMBLY (See page [SE-38](#))
6. REMOVE RECLINING POWER SEAT SWITCH KNOB (See page [SE-39](#))
7. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB (See page [SE-39](#))
8. REMOVE FRONT SEAT CUSHION SHIELD ASSEMBLY (See page [SE-39](#))
9. REMOVE FRONT SEAT INNER BELT ASSEMBLY
  - (a) Disconnect the connectors.
  - (b) Remove the 4 clamps.
  - (c) Remove the nut and front seat inner belt assembly.

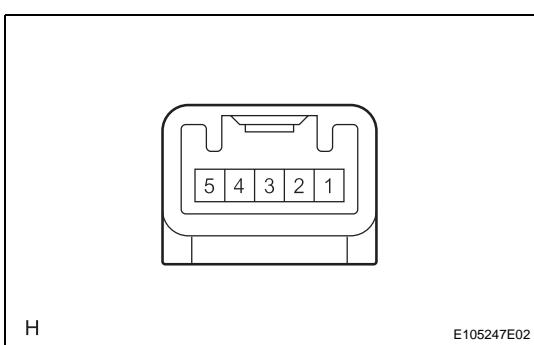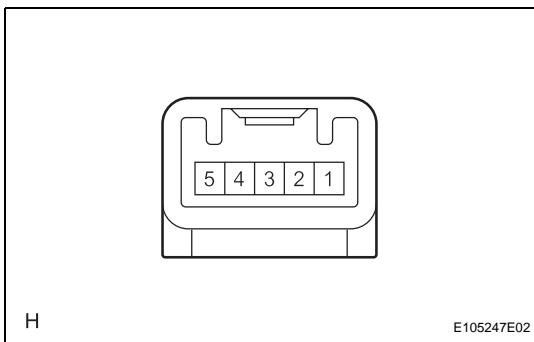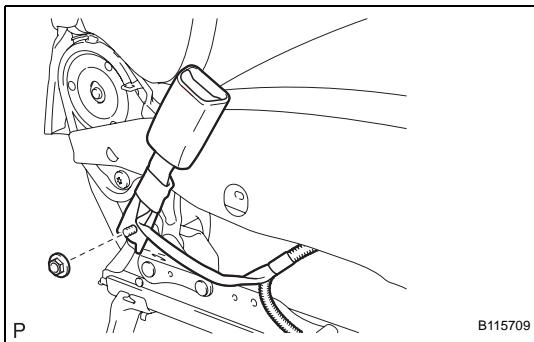

## INSPECTION

### 1. INSPECT FRONT SEAT INNER BELT ASSEMBLY RH

- (a) Disconnect the front seat inner belt assembly.
- (b) Measure the resistance of each terminal of the switch when the switch is operated.

#### Standard resistance

Tester Connection	Condition	Specified Condition
4 - 5	Seat belt is fastened	Below 1 $\Omega$
4 - 5	Seat belt is unfastened	10 $k\Omega$ or higher

### 2. INSPECT FRONT SEAT INNER BELT ASSEMBLY LH

- (a) Disconnect the front seat inner belt assembly.
- (b) Measure the resistance of each terminal of the switch when the switch is operated.

#### Standard resistance

Tester Connection	Condition	Specified Condition
4 - 5	Seat belt is fastened	Below 1 $\Omega$
4 - 5	Seat belt is unfastened	10 $k\Omega$ or higher

SB