



## INSTALLATION

### 1. INSTALL FRONT SEAT INNER BELT ASSEMBLY

- Install the front seat inner belt assembly with the nut.

**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

**NOTICE:**

Do not allow the anchor part of the front seat inner belt assembly and the protruding parts of the front seat adjuster to overlap.

- Install the 4 clamps.
- Connect the connectors.

### 2. INSTALL FRONT SEAT CUSHION SHIELD ASSEMBLY

### 3. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

### 4. INSTALL RECLINING POWER SEAT SWITCH KNOB

### 5. INSTALL FRONT SEAT ASSEMBLY (See page [SE-45](#))

### 6. INSTALL SEAT TRACK COVER RH

### 7. INSTALL SEAT TRACK COVER LH

### 8. INSTALL SEAT TRACK BRACKET COVER INNER FRONT LH

### 9. INSTALL SEAT TRACK BRACKET COVER OUTER FRONT LH

### 10. PERFORM INITIALIZATION

Some systems need initialization when disconnecting the cable from the negative battery terminal.

### 11. CHECK POWER SEAT FUNCTION

**HINT:**

- (See page [SE-29](#) for w/o Memory).
- (See page [SE-14](#) for w/ Memory).

### 12. INSPECT SEAT HEATER OPERATION

### 13. INSPECT SRS WARNING LIGHT

(See page [RS-25](#))