


FRONT SEAT OUTER BELT ASSEMBLY




COMPONENTS

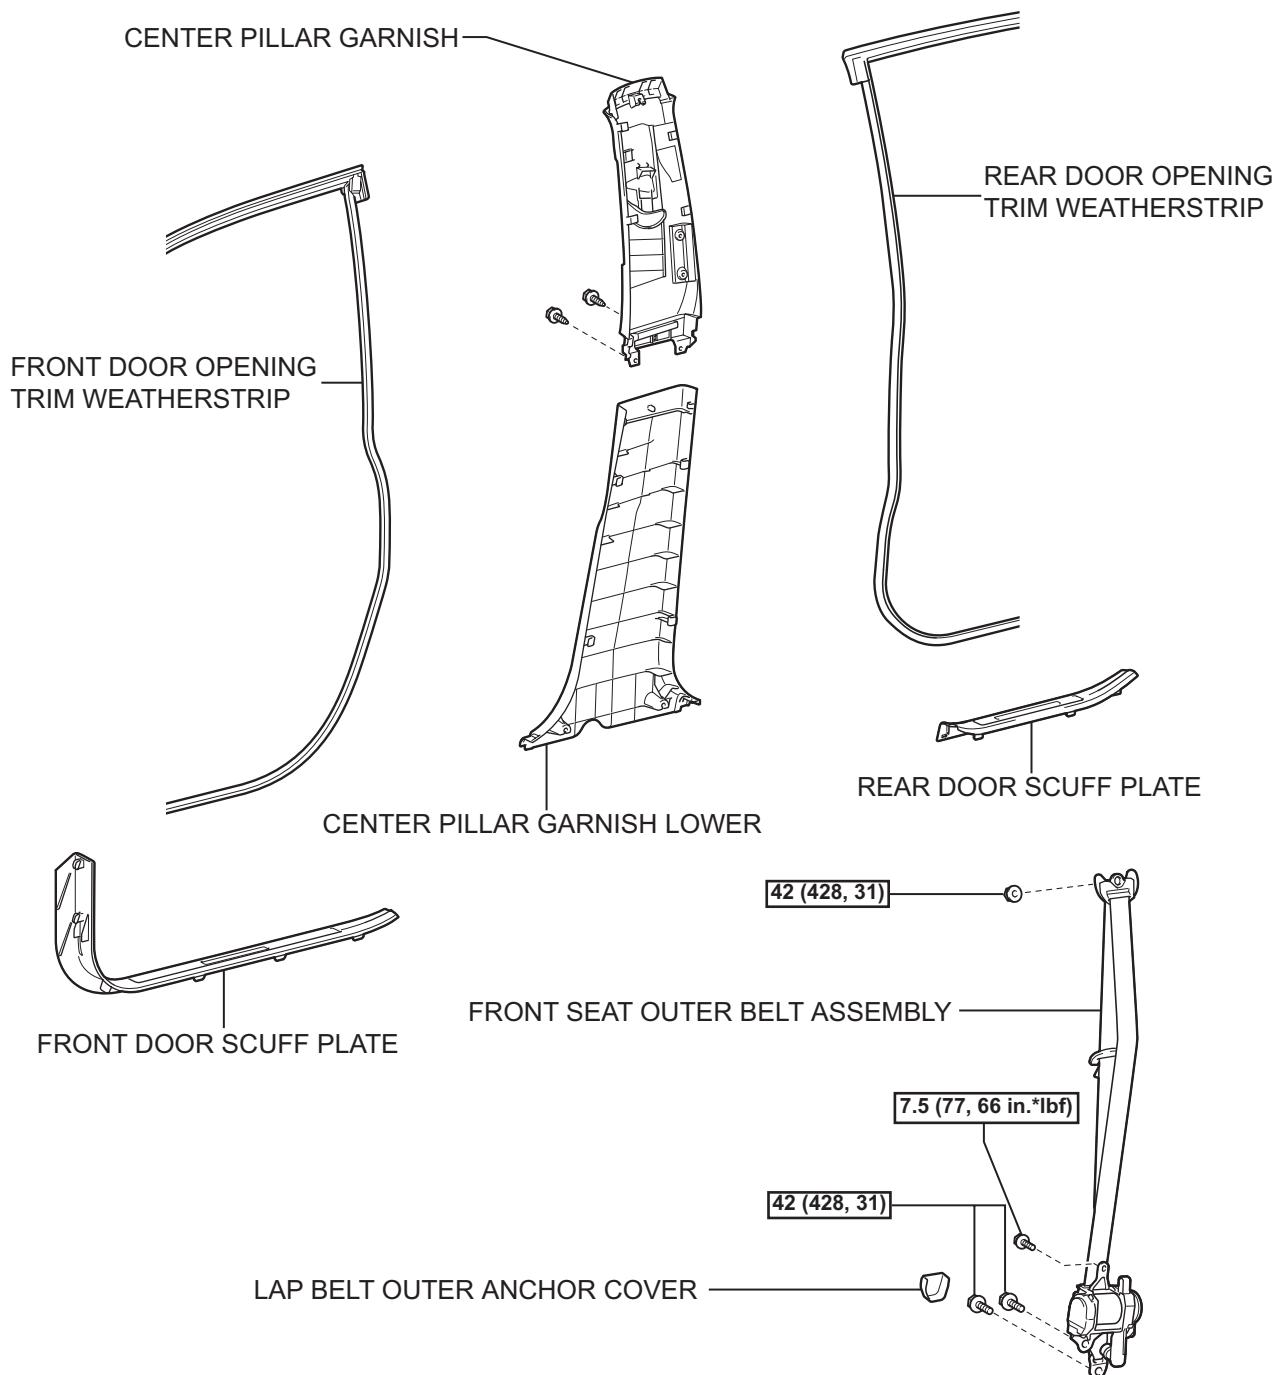

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent the airbag working (See page [RS-1](#)).
2. **REMOVE FRONT DOOR SCUFF PLATE (See page [IR-6](#))**
3. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP**
4. **REMOVE REAR DOOR SCUFF PLATE (See page [IR-6](#))**
5. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP**
6. **REMOVE LAP BELT OUTER ANCHOR COVER**
(a) Disengage the 2 claws and remove the lap belt outer anchor cover.
7. **DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY**
(a) Remove the bolt and disconnect the floor side of the front seat outer belt assembly.
8. **REMOVE CENTER PILLAR GARNISH LOWER (See page [IR-7](#))**
9. **REMOVE CENTER PILLAR GARNISH (See page [IR-7](#))**
10. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY**
 - (a) Turn the ignition switch to the Lock position.
 - (b) Remove the nut and disengage the shoulder side of the front seat outer belt assembly.
 - (c) Using a screwdriver, pull out the locking button in the direction shown by the arrow to release the lock, and disconnect the pretensioner connector.
HINT:
Tape the screwdriver tip before use.
 - (d) Disconnect the tension reducer connector.

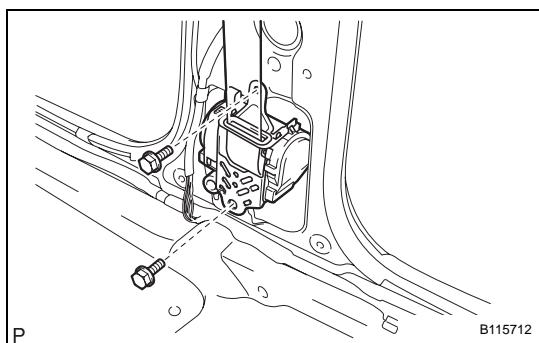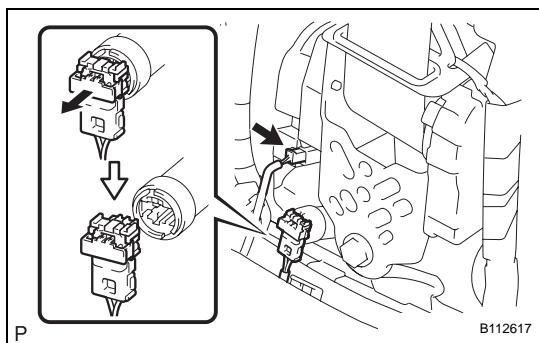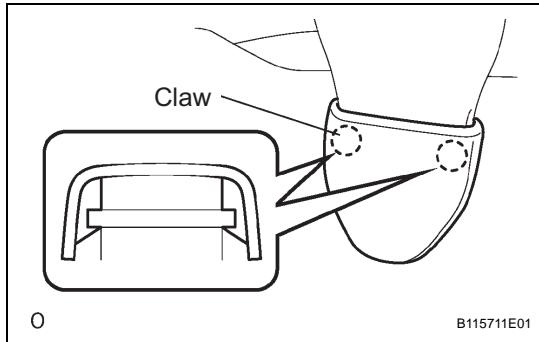

- (e) Remove the 2 bolts and front seat outer belt assembly.