


# SEAT BELT TENSION REDUCER

## PARTS LOCATION

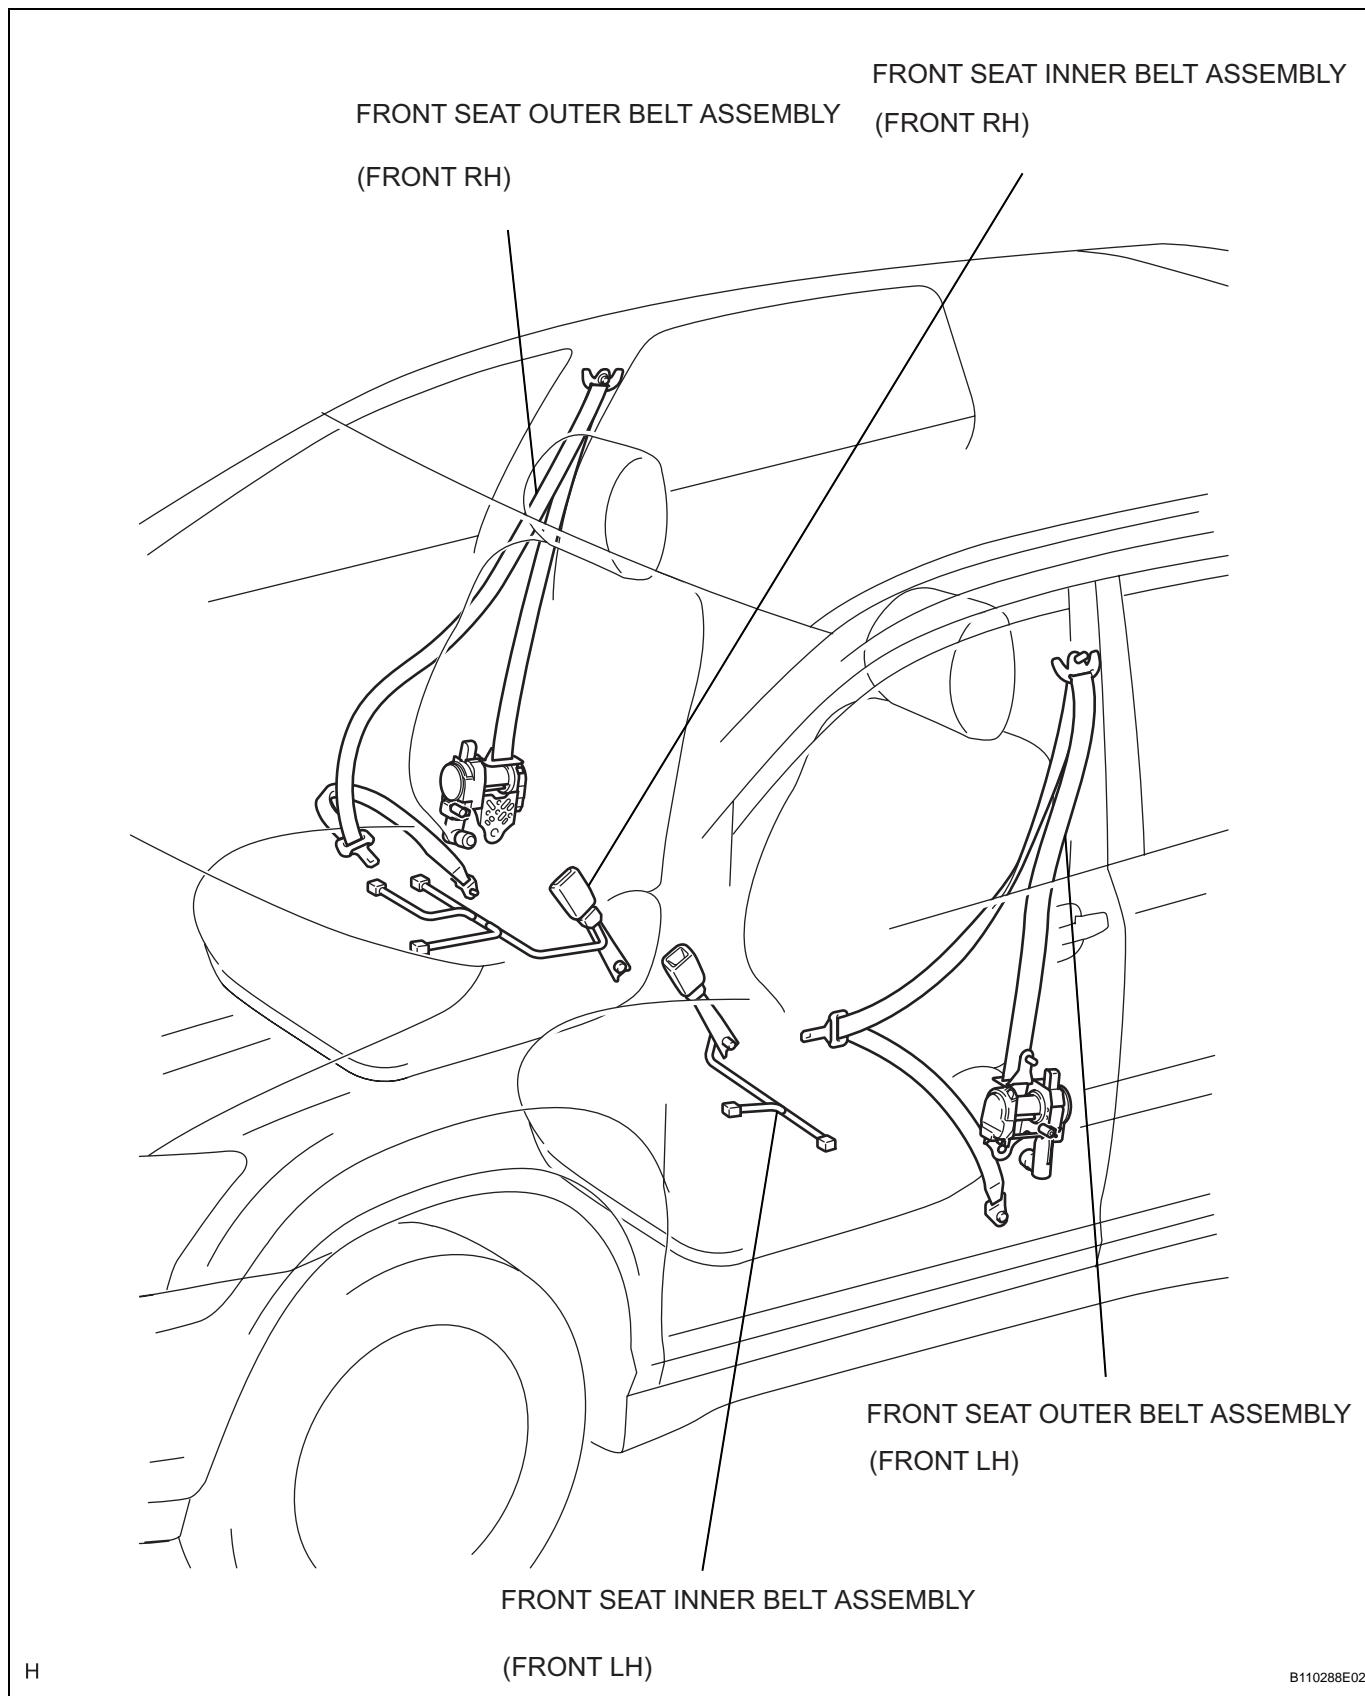

**PROBLEM SYMPTOMS TABLE****Seat Belt Tension Reducer**

Symptom	Suspected area	See page
Driver side tension reducer does not operate	1. Front seat inner belt assembly (Driver side)	<a href="#">SB-15</a>
	2. Front seat outer belt assembly (Driver side)	-
	3. Wire harness	-
Front passenger side tension reducer does not operate	1. Front seat inner belt assembly (Front passenger side)	<a href="#">SB-15</a>
	2. Front seat outer belt assembly (Front passenger side)	-
	3. Wire harness	-